


Oil Cooler


 [Ford Ecat Electronic Parts Catalog](#)

Removal

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Remove and discard the engine oil filter.
3. Using hose clamp pliers, clamp the 2 oil cooler coolant hoses and remove the 2 coolant hoses from the oil cooler.

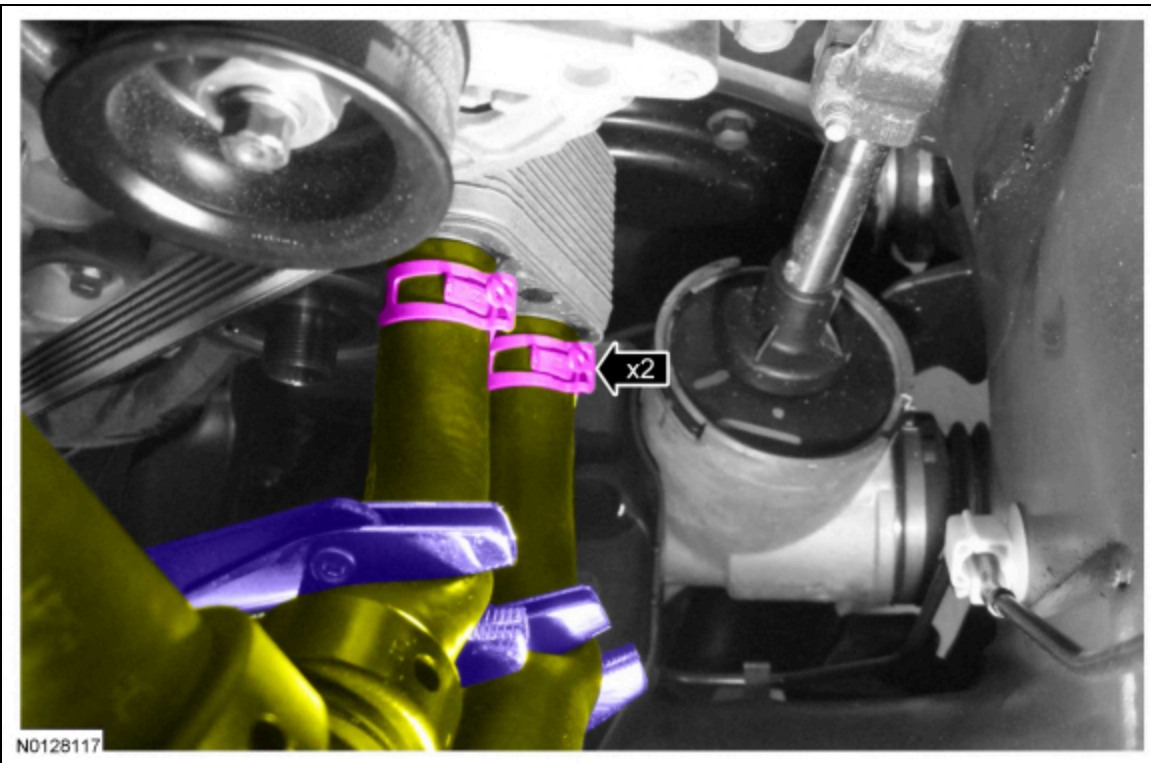


4. Loosen the oil cooler insert bolt and remove the oil cooler.
 - Inspect the oil cooler gasket, replace if necessary.

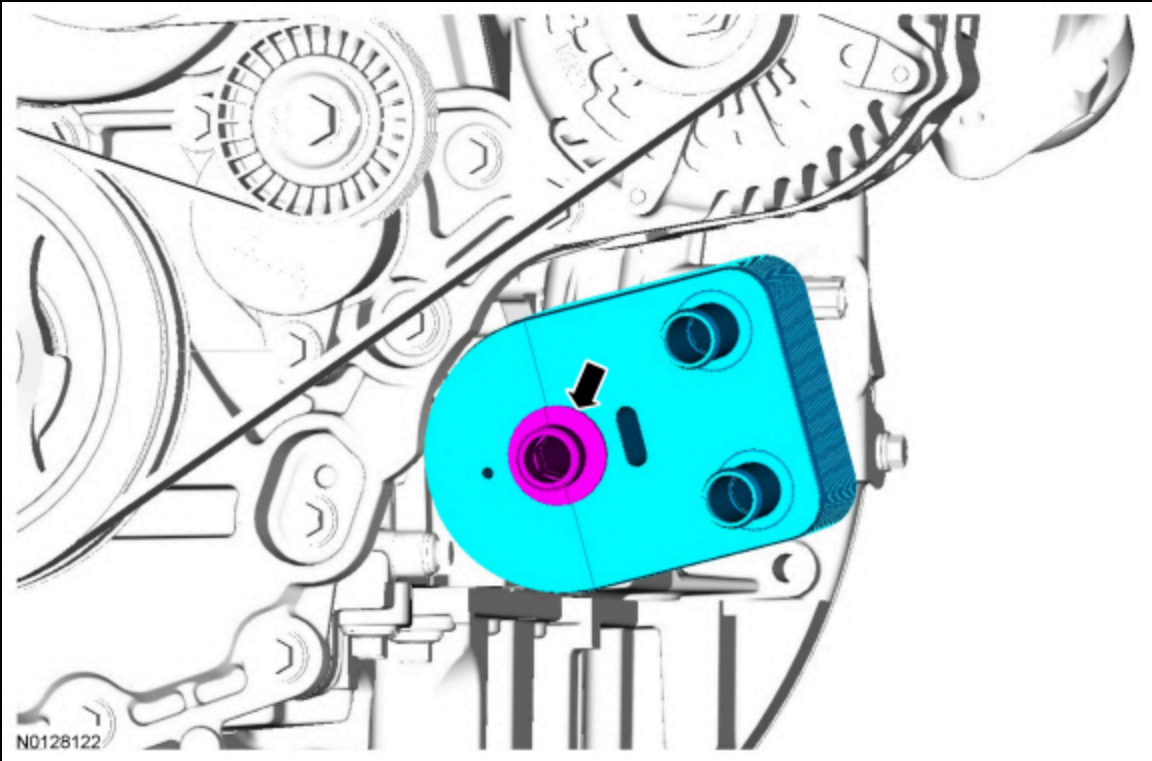


Installation

1. Align the oil cooler to the oil filter adapter and tighten the oil cooler insert bolt.
 - Tighten to 58 Nm (43 lb-ft).

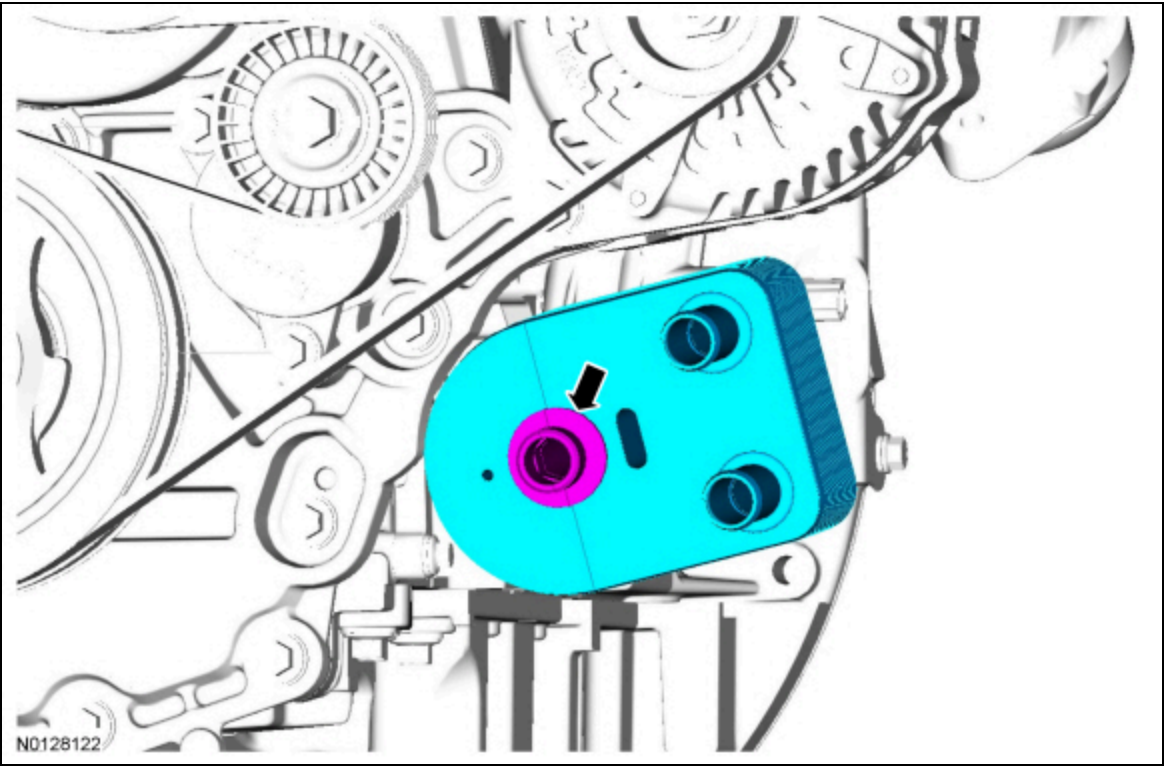

2. Connect the 2 coolant hoses to the engine oil cooler and remove the hose clamp pliers.

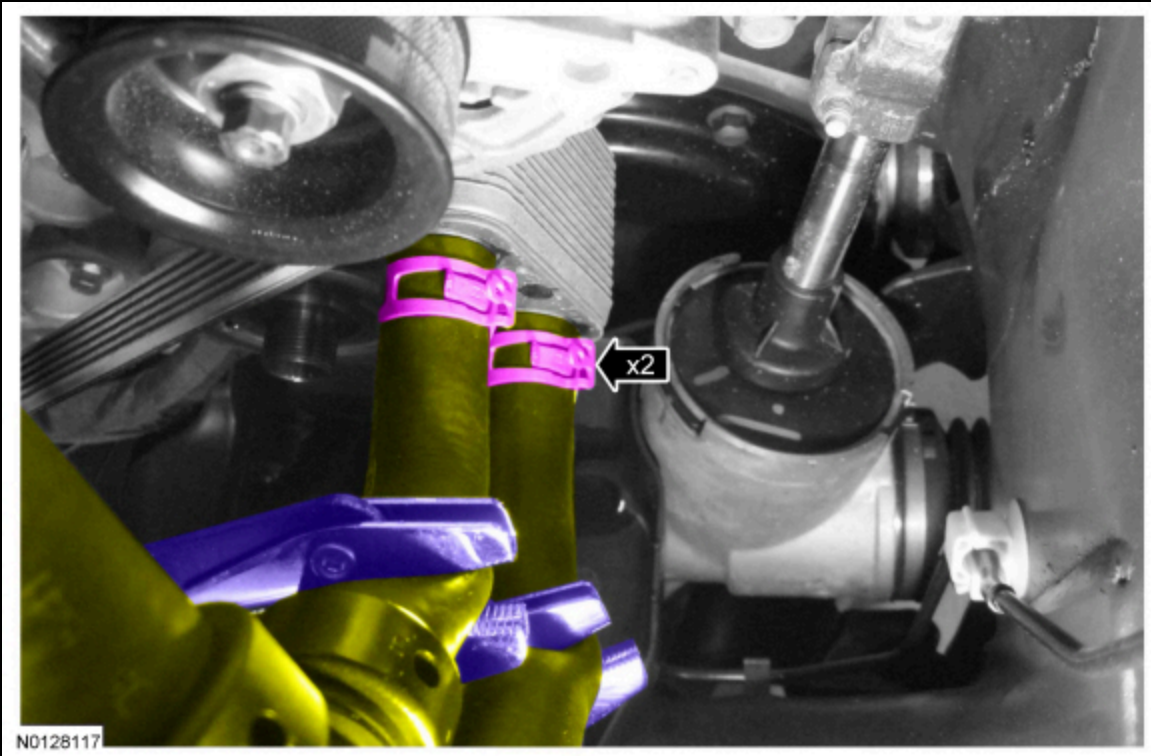

3. **NOTE:** *Do not lubricate the engine oil filter gasket.*

Install a new engine oil filter.

- Tighten to 5 Nm (44 lb-in) and then rotate an additional 180 degrees.

4. Inspect and adjust the coolant level in the degas bottle.

5. Inspect and adjust the engine oil level.