

Oil Filter Adapter




Removal

All engines

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Disconnect the battery ground cable. For additional information, refer to Section 414-01.
3. Remove the Air Cleaner (ACL) outlet tube and the ACL upper tray. For additional information, refer to Intake Air System Components — Exploded View, 3.7L in Section 303-12.
4. Remove and discard the engine oil filter.


Engine with oil cooler

5. Loosen the oil cooler insert bolt and position the oil cooler aside.
 - Inspect the oil cooler gasket, replace if necessary.

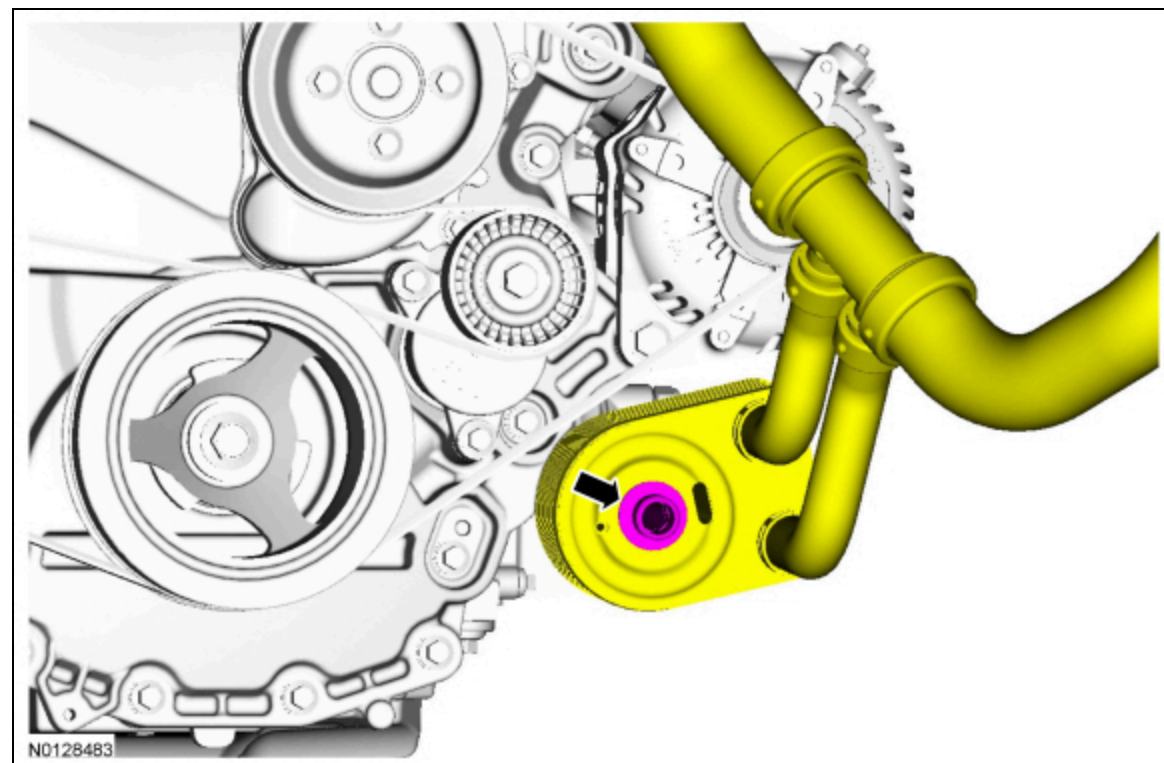


All engines

6. Disconnect the generator electrical connector.

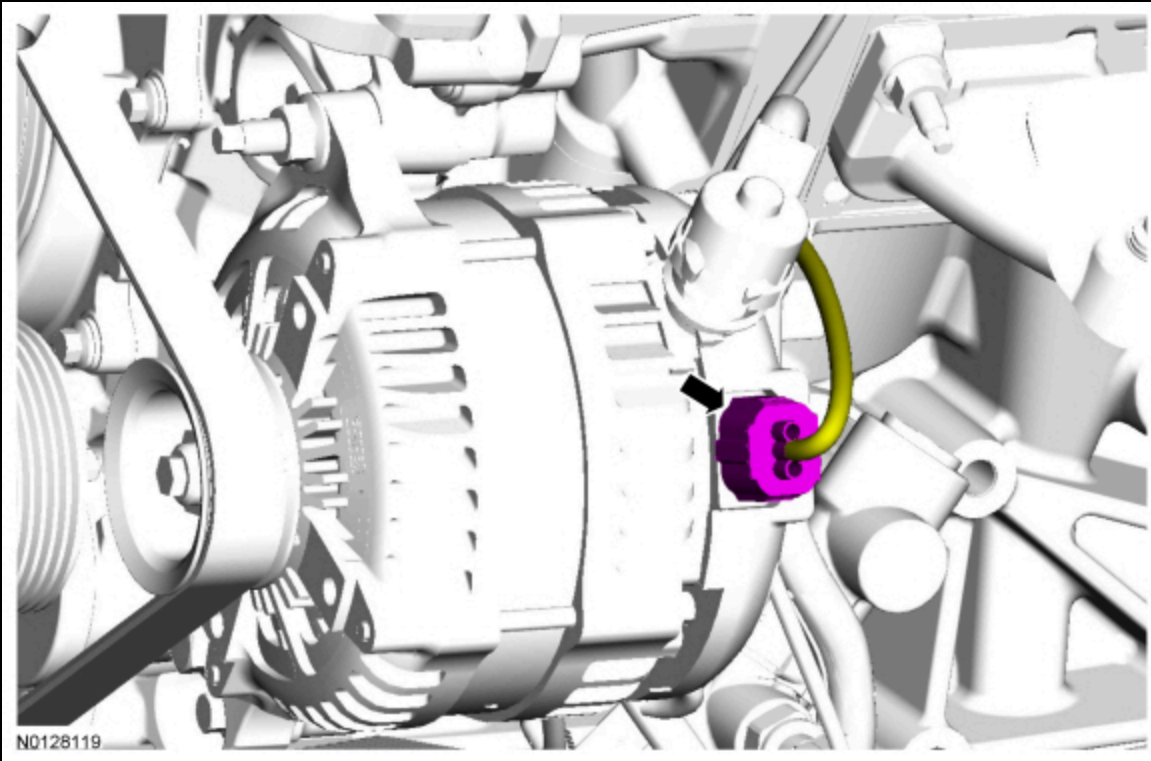

7. Position the generator B+ protective boot aside, remove the B+ nut and position the B+ terminal aside.

- Detach the generator wiring harness retainer from the oil filter adapter and position the generator wiring harness aside.

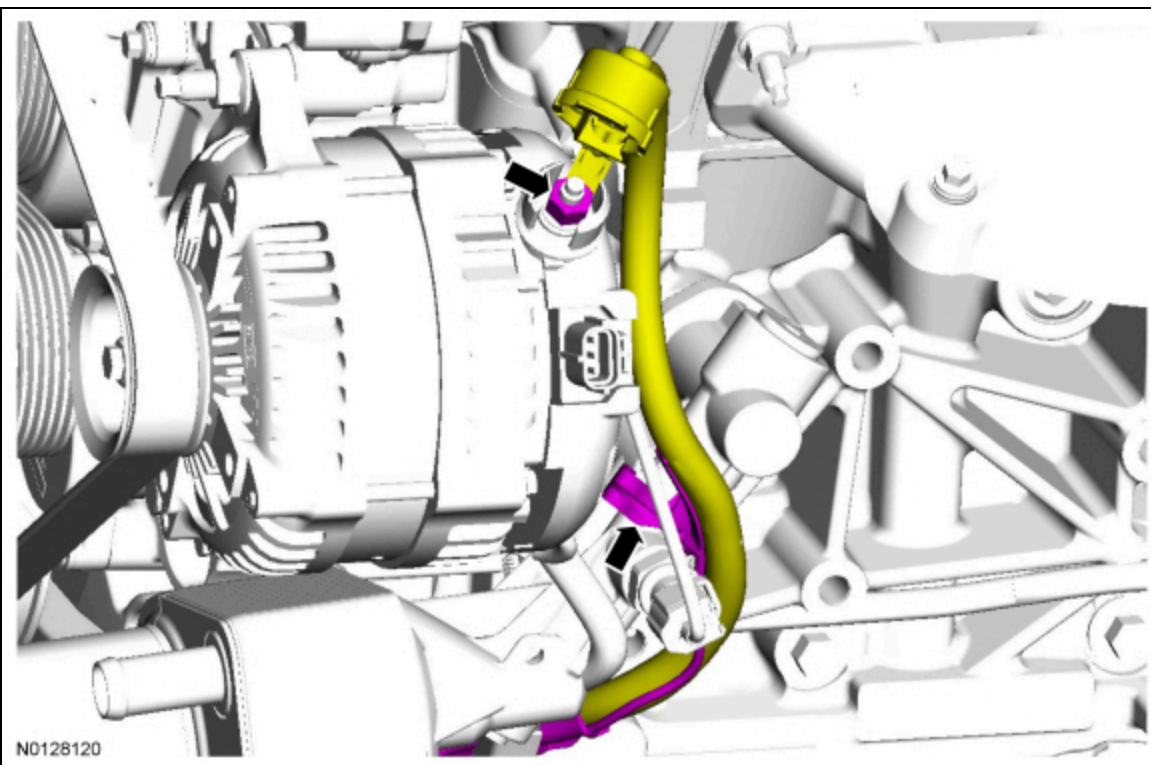

8. Disconnect the Engine Oil Pressure (EOP) switch electrical connector.

9. Remove the 5 bolts and the oil filter adapter.


- Discard the gasket.
- Clean and inspect all sealing surfaces.

Installation


All engines

1. Using a new gasket, install the oil filter adapter and the 5 bolts and tighten in sequence shown.


- Tighten to 10 Nm (89 lb-in) and then an additional 45 degrees.

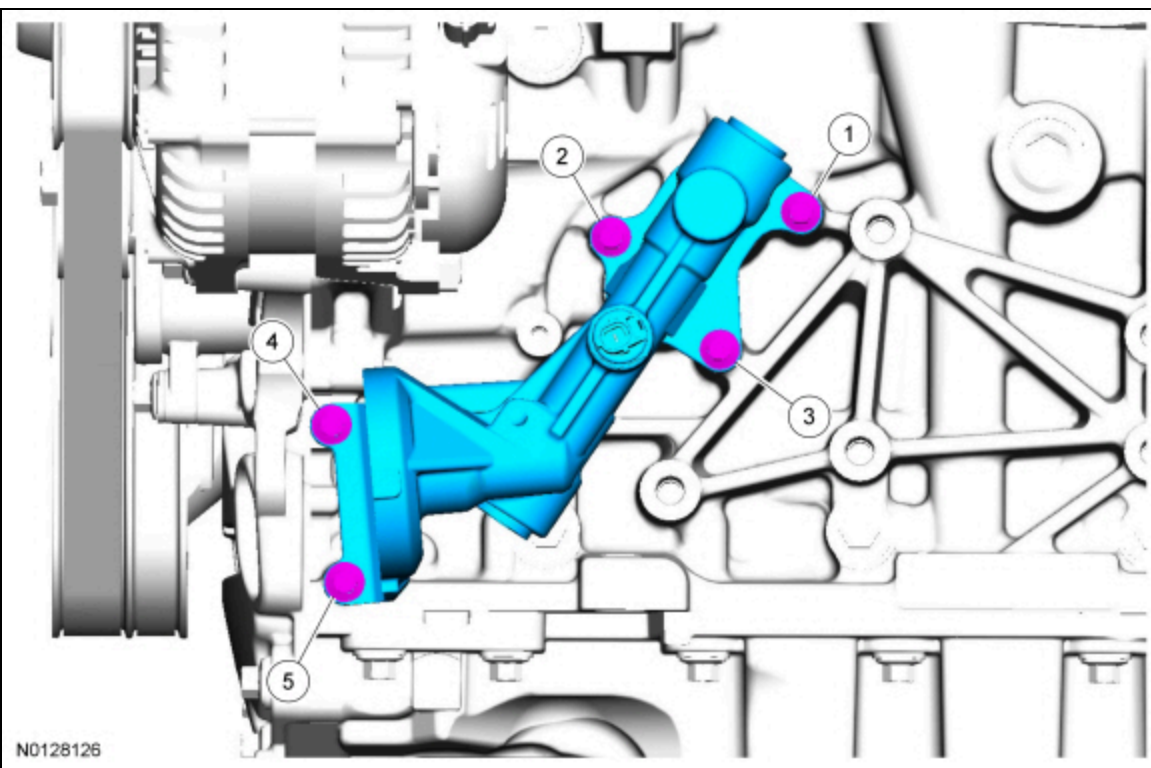

2. Connect the EQP switch electrical connector.
 - Attach the generator wiring harness retainer.
3. Position back the generator wiring harness and B+ terminal and install the nut.
 - Tighten to 17 Nm (150 lb-in).
 - Position back the generator B+ protective boot.
 - Attach the generator wiring harness retainer to the oil filter adapter.

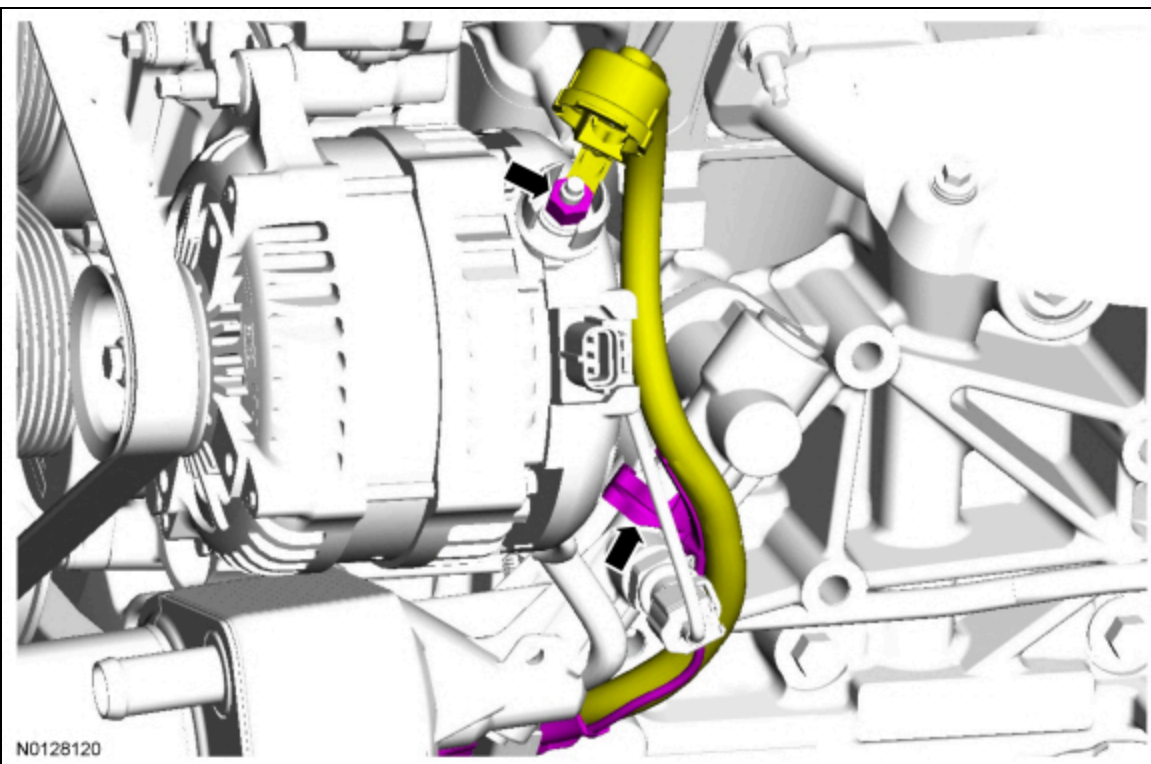


4. Connect the generator electrical connector.

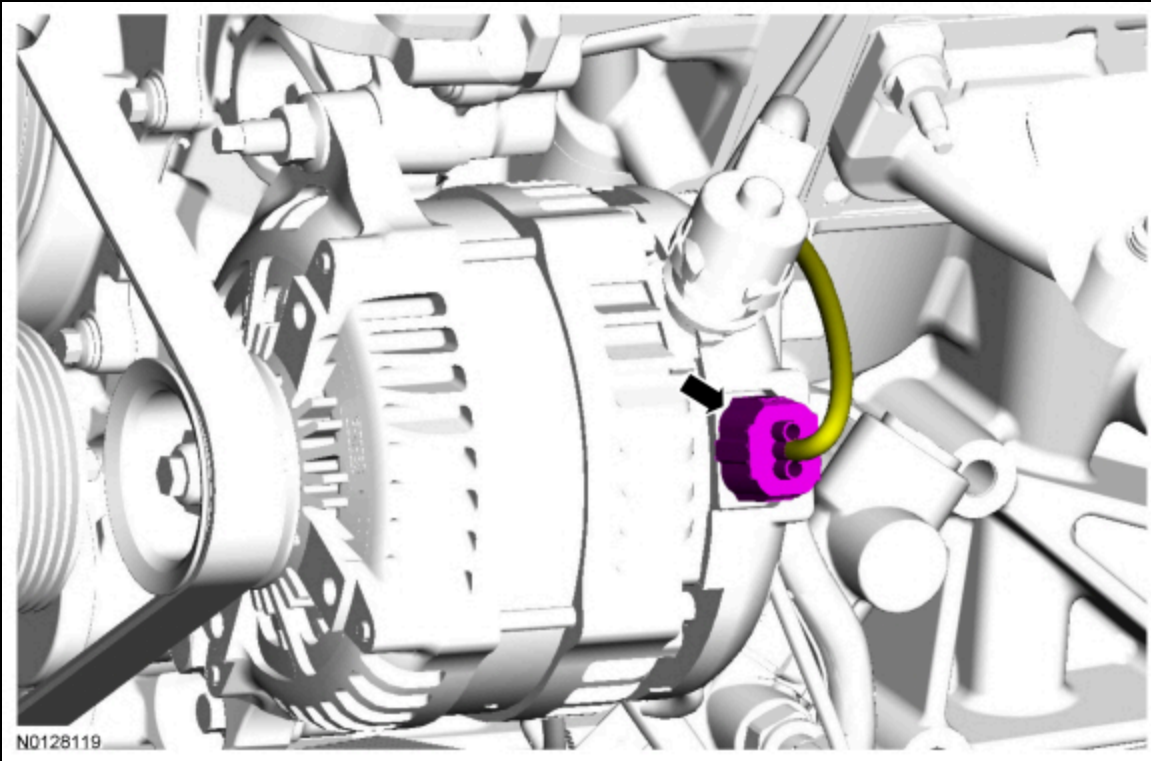

Engine with oil cooler

5. Position the oil cooler and tighten the oil cooler insert bolt.
 - Tighten to 58 Nm (43 lb-ft).

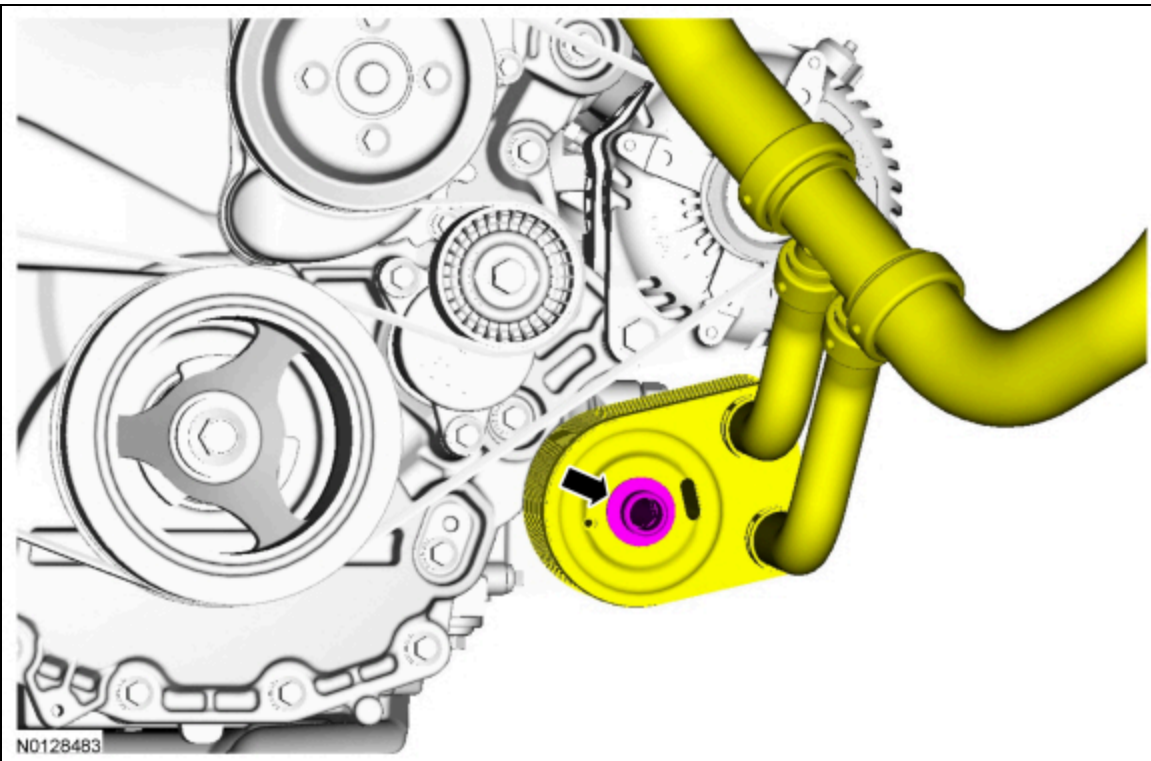

All engines

6. **NOTE:** Do not lubricate the engine oil filter gasket.

Install a new engine oil filter.

- Tighten to 5 Nm (44 lb-in) and then rotate an additional 180 degrees.

7. Install the ACL outlet tube and the ACL upper tray. For additional information, refer to Intake Air System Components — Exploded View, 3.7L in Section 303-12.

8. Connect the battery ground cable. For additional information, refer to Section 414-01.
9. Inspect and adjust the engine oil level.