


Piston



Material

Item	Specification
Motorcraft® SAE 5W-20 Synthetic Blend Motor Oil (US); Motorcraft® SAE 5W-20 Super Premium Motor Oil (Canada) XO-5W20-QSP (US); CXO-5W20-LSP12 (Canada)	WSS-M2C945-A

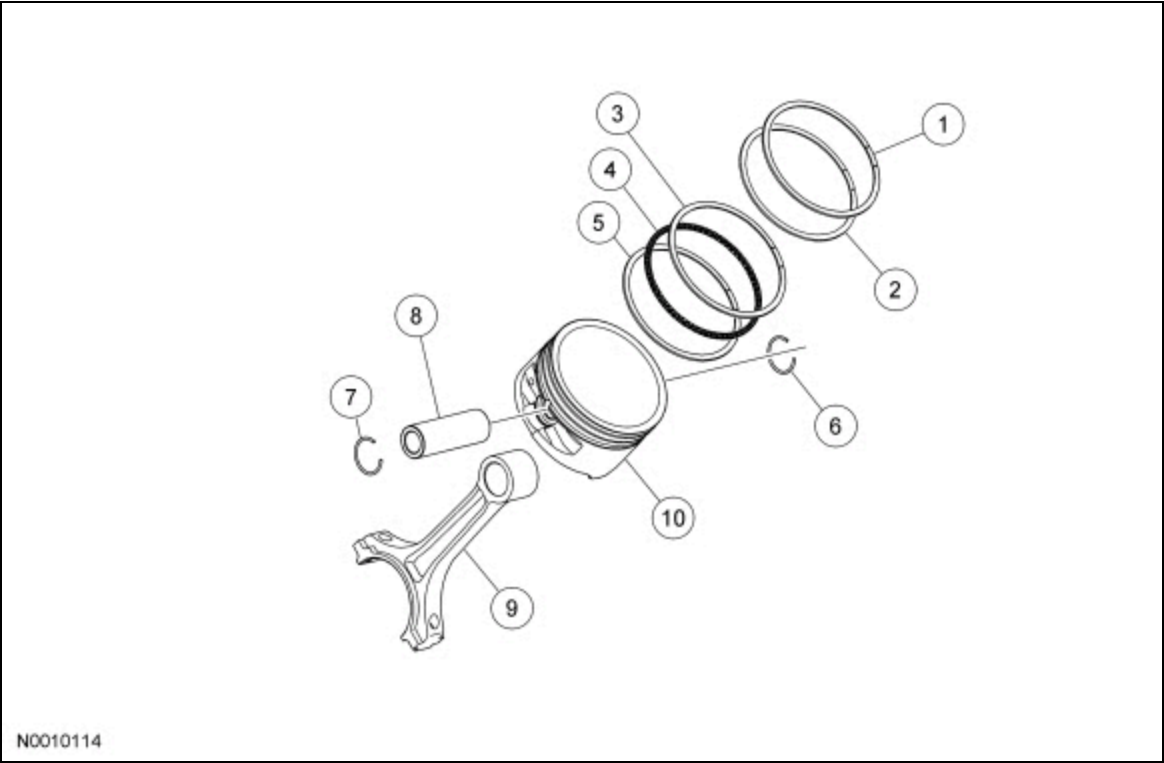


Item	Part Number	Description
1	—	Piston compression upper ring (part of 6148)
2	—	Piston compression lower ring (part of 6148)
3	—	Piston oil control upper segment ring (part of 6148)
4	—	Piston oil control spacer (part of 6148)
5	—	Piston oil control lower segment ring (part of 6148)
6	61406140	Piston pin retainer clip
7	61406140	Piston pin retainer clip
8	61356135	Piston pin
9	62006200	Connecting rod
10	61106110	Piston

Disassembly

1. Remove the piston rings from the piston.
 - Discard the piston rings.
2. Remove the 2 piston pin retainers and the piston pin.
 - Discard the 2 piston pin retainer clips.
3. **NOTE:** *If the piston and/or connecting rod are being installed new, the piston rod orientation marks and the arrow on the top of the dome of the piston should be facing toward the front of the engine block.*

NOTE: *If the piston and connecting rod are to be reinstalled, they must be assembled in the same orientation. Mark the piston orientation to the connecting rod for reassembly.*

Separate the piston from the connecting rod.

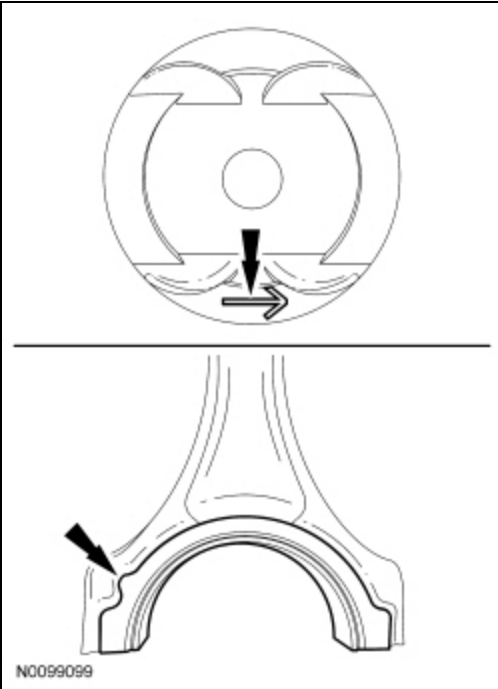


4. Clean and inspect the piston and connecting rod. For additional information, refer to Section 303-00.

Assembly

1. Align the piston-to-connecting rod orientation marks and position the connecting rod in the piston.
2. Lubricate the piston pin and pin bore with clean engine oil.
3. Install the piston pin in the piston and connecting rod assembly.
4. Install the new piston pin retaining clips in the piston.
 - The piston pin retaining clip gap orientation must be toward the top or dome of piston.
5. Lubricate the piston and the new piston rings with clean engine oil.
6. **NOTE:** *The piston compression upper and lower ring should be installed with the "O" mark on the ring face pointing up toward the top of the piston.*

Install the piston rings onto the piston as shown.

1. Center line of the piston parallel to the wrist pin bore
2. Upper compression ring gap location
3. Upper oil control segment ring gap location
4. Lower oil control segment ring gap location
5. Expander ring and lower compression ring gap location

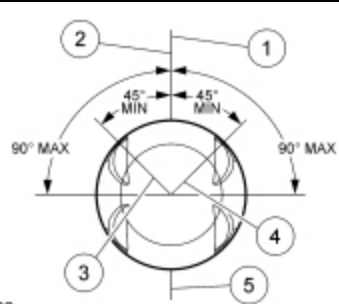

N0062432