

Crankshaft Front Seal



Special Tool(s)


 ST1287-A	Installer, Crankshaft Vibration Damper 303-102 (T74P-6316-B)
 ST2981-A	Installer, Front Crankshaft Seal 303-1251
 ST1385-A	Remover, Oil Seal 303-409 (T92C-6700CH)

Material

Item	Specification
Motorcraft® Metal Surface Prep Wipes ZC-31-B	—
Motorcraft® SAE 5W-30 Synthetic Blend Motor Oil (US); Motorcraft® SAE 5W-30 Super Premium Motor Oil (Canada) XO-5W30-QSP (US); CXO-5W30-LSP12 (Canada)	WSS-M2C946-A

Removal


1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Remove the crankshaft pulley. For additional information, refer to Crankshaft Pulley in this section.
3. Using the Oil Seal Remover, remove and discard the crankshaft front seal.
 - Clean all sealing surfaces with metal surface prep.

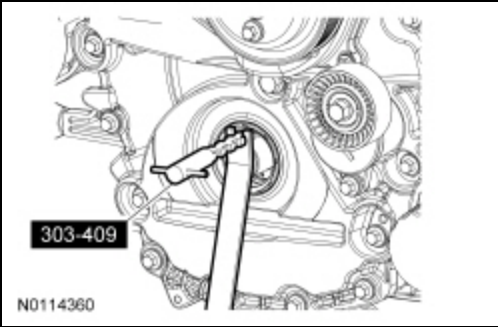

Installation

1. **NOTE:** Apply clean engine oil to the crankshaft front seal bore in the engine front cover.

Using the Front Crankshaft Seal Installer and Crankshaft Vibration Damper Installer, install a new crankshaft front seal.

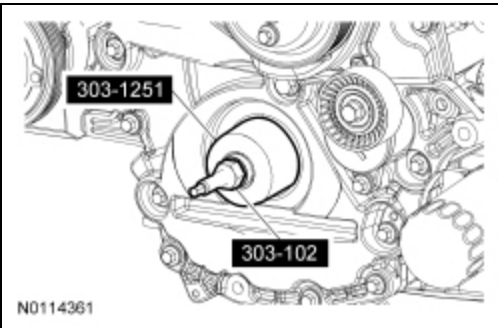

2. Install the crankshaft pulley. For additional information, refer to Crankshaft Pulley in this section.