
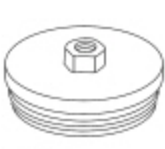


Crankshaft Rear Seal

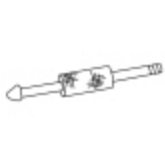

Special Tool(s)

 ST1326-A	Handle 205-153 (T80T-4000-W)
 ST2980-A	Installer, Rear Main Seal 303-1250
 ST1382-A	Remover, Crankshaft Rear Oil Seal 303-519 (T95P-6701-EH)
 ST1187-A	Slide Hammer 307-005 (T59L-100-B)

Material

Item	Specification
Motorcraft® Metal Surface Prep Wipes ZC-31-B	—
Motorcraft® SAE 5W-30 Synthetic Blend Motor Oil (US); Motorcraft® SAE 5W-30 Super Premium Motor Oil (Canada) XO-5W30-QSP (US); CXO-5W30-LSP12 (Canada)	WSS- M2C946-A


Removal

NOTICE: The engine is equipped with a cast aluminum (early build) or stamped steel (late build) crankshaft rear seal retainer plate. This procedure is for engines equipped with a cast aluminum plate only. If the engine is equipped with a stamped steel plate, the seal and plate must be removed as an assembly. Refer to Crankshaft Rear Seal with Retainer Plate.

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Remove the flexplate. For additional information, refer to Flexplate in this section.

3. Remove the crankshaft sensor ring.


4. Using the Crankshaft Rear Oil Seal Remover and Slide Hammer, remove and discard the crankshaft rear seal.
- Clean all sealing surfaces with metal surface prep.

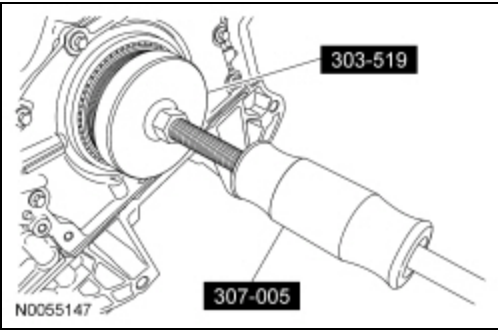


Installation

1. **NOTE:** *Lubricate the seal lips and bore with clean engine oil prior to installation.*

Position the Rear Main Seal Installer onto the end of the crankshaft and slide a new crankshaft rear seal onto the tool.

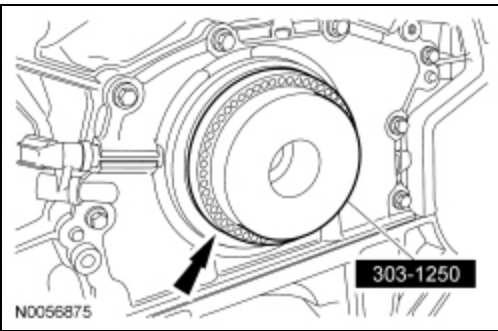

2. Using the Rear Main Seal Installer and Handle, install the new crankshaft rear seal.

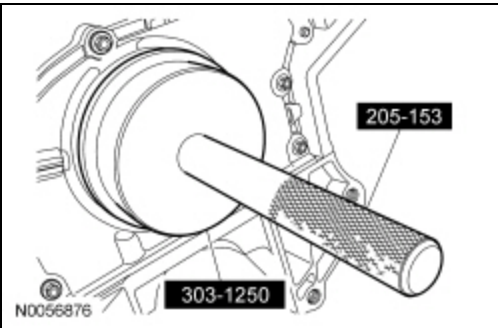

3. Install the crankshaft sensor ring.

4. Install the flexplate. For additional information, refer to Flexplate in this section.