

Engine Oil Pressure (EOP) Switch


 [Ford Ecat Electronic Parts Catalog](#)

Material	
Item	Specification
Motorcraft® Thread Sealant with PTFE TA-24-B	WSK-M2G350-A2

Removal


4x2

1. With the vehicle in NEUTRAL, position it on a hoist. Refer to Section 100-02.
2. Remove the retainers and the underbody shield.

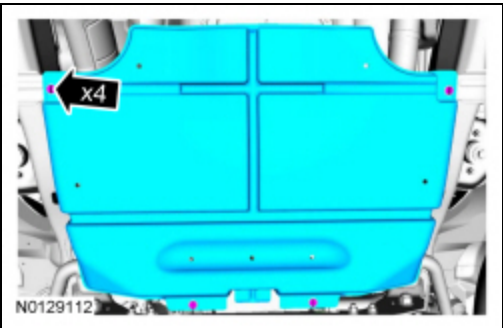


4x4

3. Remove the engine appearance cover.

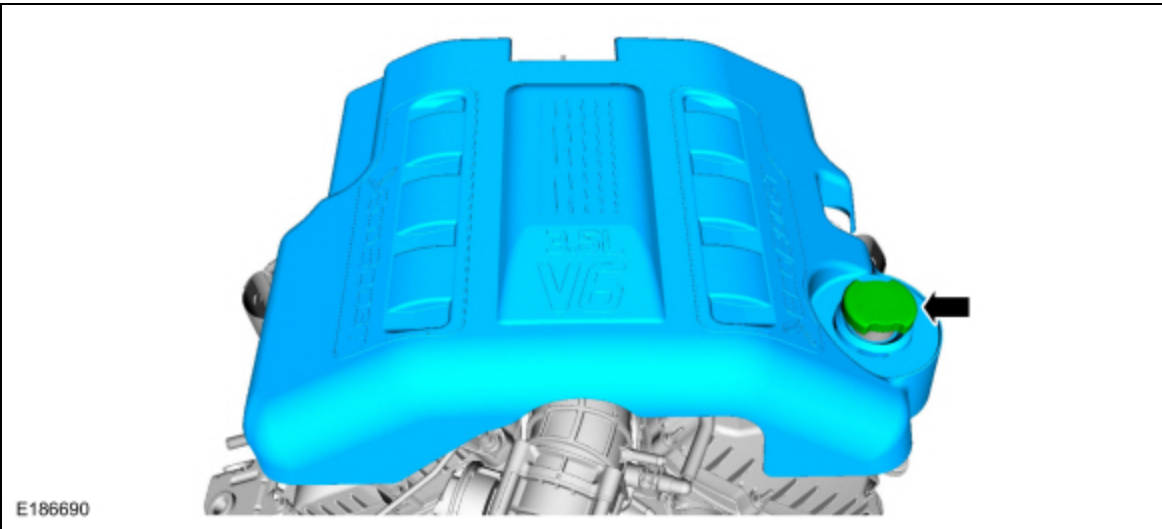


4. Remove the Air Cleaner (ACL) outlet pipe. Refer to Section 303-12.
5. Remove the LH ACL pipe-to-turbocharger pipe and the LH turbocharger-to-Charge Air Cooler (CAC) pipe. Refer to Section 303-12.

6. Disconnect the Engine Oil Pressure (EOP) switch electrical connector.

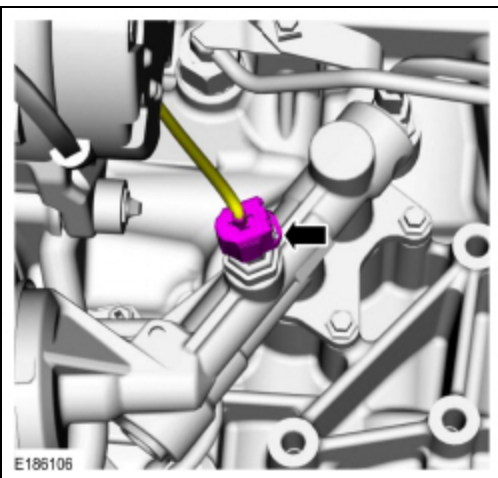

7. Remove the EOP switch.

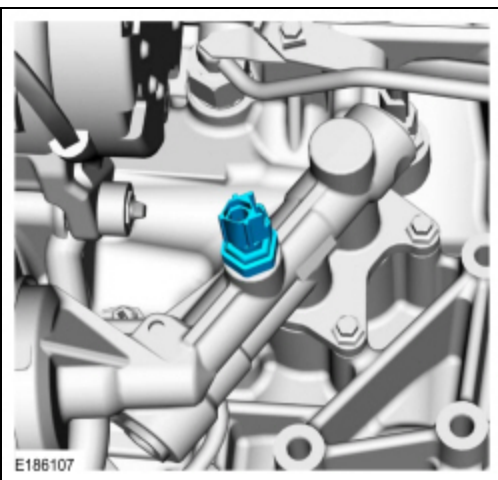


Installation


1. **NOTE:** *If the oil pressure switch is to be reused, apply thread sealant.*

Install the EOP switch.

- Tighten to 14 Nm (124 lb-in) then an additional 180 degrees.

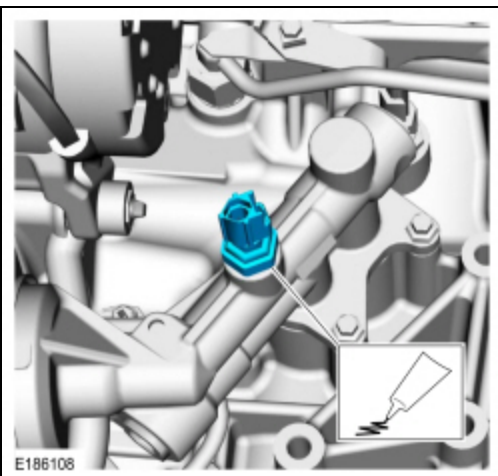


2. Connect the EOP switch electrical connector.

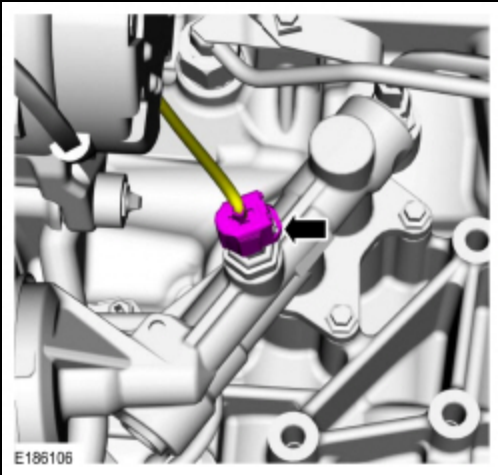

4x4

3. Install the LH ACL pipe-to-turbocharger pipe and the LH turbocharger-to-CAC pipe. Refer to Section 303-12.
4. Install the ACL outlet pipe. Refer to Section 303-12.
5. Install the engine appearance cover.

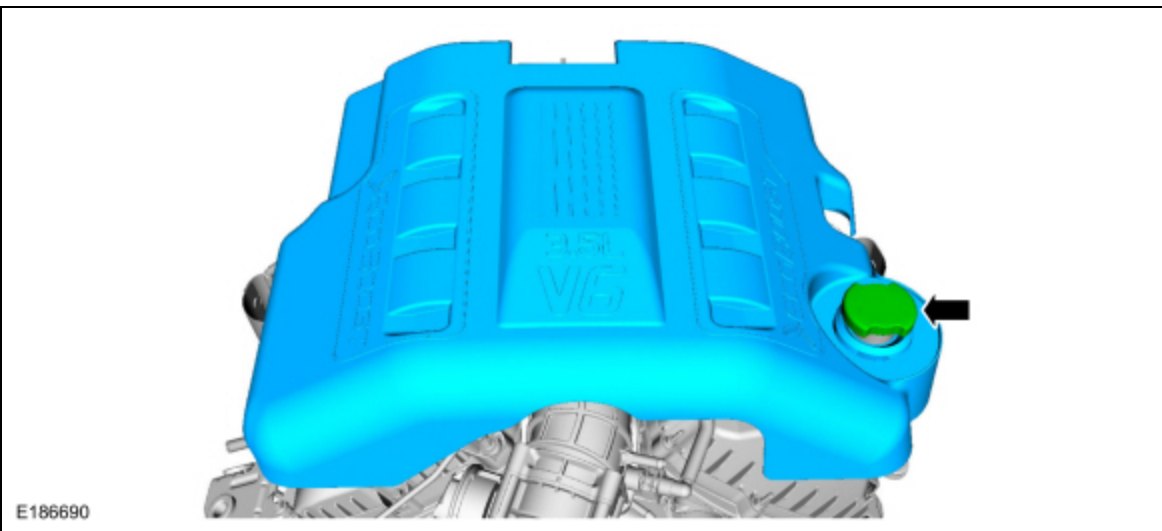

4x2

6. Install the underbody shield and the retainers.

