


Exhaust Manifold — LH

 [Ford Ecat Electronic Parts Catalog](#)

Material

Item	Specification
Motorcraft® Metal Surface Prep Wipes ZC-31-B	—

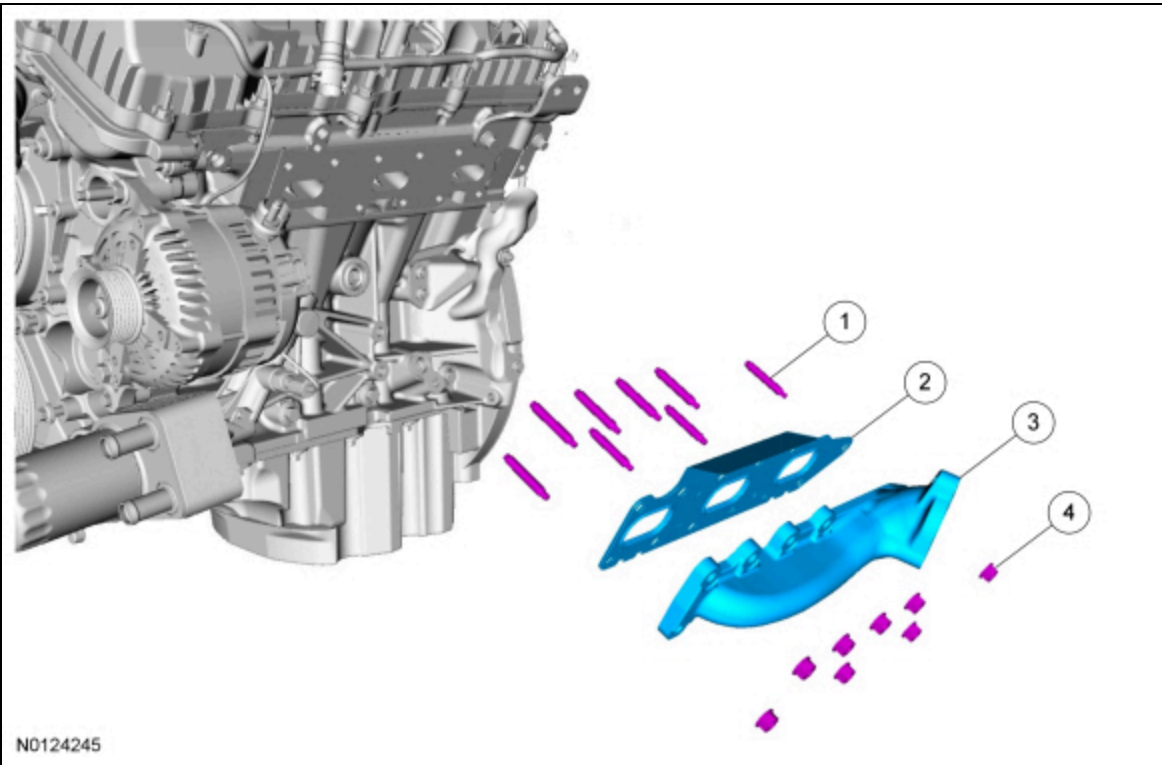

Item	Part Number	Description
1	W712244 W712244	LH exhaust manifold stud (8 required)
2	9448 9448	LH exhaust manifold gasket
3	9431 9431	LH exhaust manifold
4	W701706 W701706	LH exhaust manifold nut (8 required)

Removal

1. Remove the LH turbocharger. For additional information, refer to Section 303-04E.
2. Remove the 8 exhaust manifold nuts and the LH exhaust manifold.
 - Discard the nuts and gasket.
3. Clean and inspect the LH exhaust manifold. For additional information, refer to Section 303-00.
4. Remove and discard the 8 LH exhaust manifold studs.

5. **NOTICE: Do not use metal scrapers, wire brushes, power abrasive discs or other abrasive means to clean the sealing surfaces. These may cause scratches and gouges resulting in leak paths. Use a plastic scraper to clean the sealing surfaces.**


Clean the exhaust manifold mating surface of the cylinder head with metal surface prep. Follow the directions on the packaging.

Installation

1. Install 8 new LH exhaust manifold studs.
 - Tighten to 12 Nm (106 lb-in).
2. **NOTICE: Failure to tighten the exhaust manifold nuts to specification a second time will cause the exhaust manifold to develop an exhaust leak.**

Using a new gasket, install the LH exhaust manifold and 8 new nuts. Tighten in 2 stages in the sequence shown:

- Stage 1: Tighten to 19 Nm (168 lb-in).
- Stage 2: Tighten to 25 Nm (18 lb-ft).

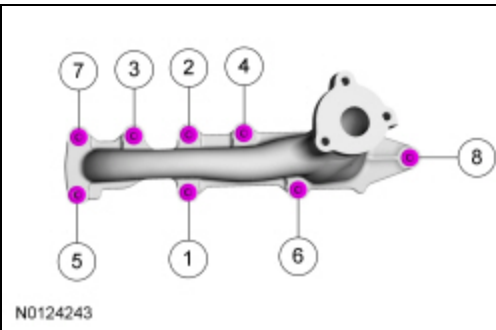

3. Install the LH turbocharger. For additional information, refer to Section 303-04E.