


Oil Cooler


 [Ford Ecat Electronic Parts Catalog](#)

Removal

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information refer to Section 100-02.
2. Remove the Air Cleaner (ACL) outlet pipe and the LH ACL -to-turbocharger pipe. For additional information, refer to Intake Air System Components — Exploded View, 3.5L Gasoline Turbocharged Direct Injection (GTDI) in Section 303-12.
3. If equipped, rotate the 4 retainers and position the air deflector down. Rotate the skid plate cover counterclockwise and remove.

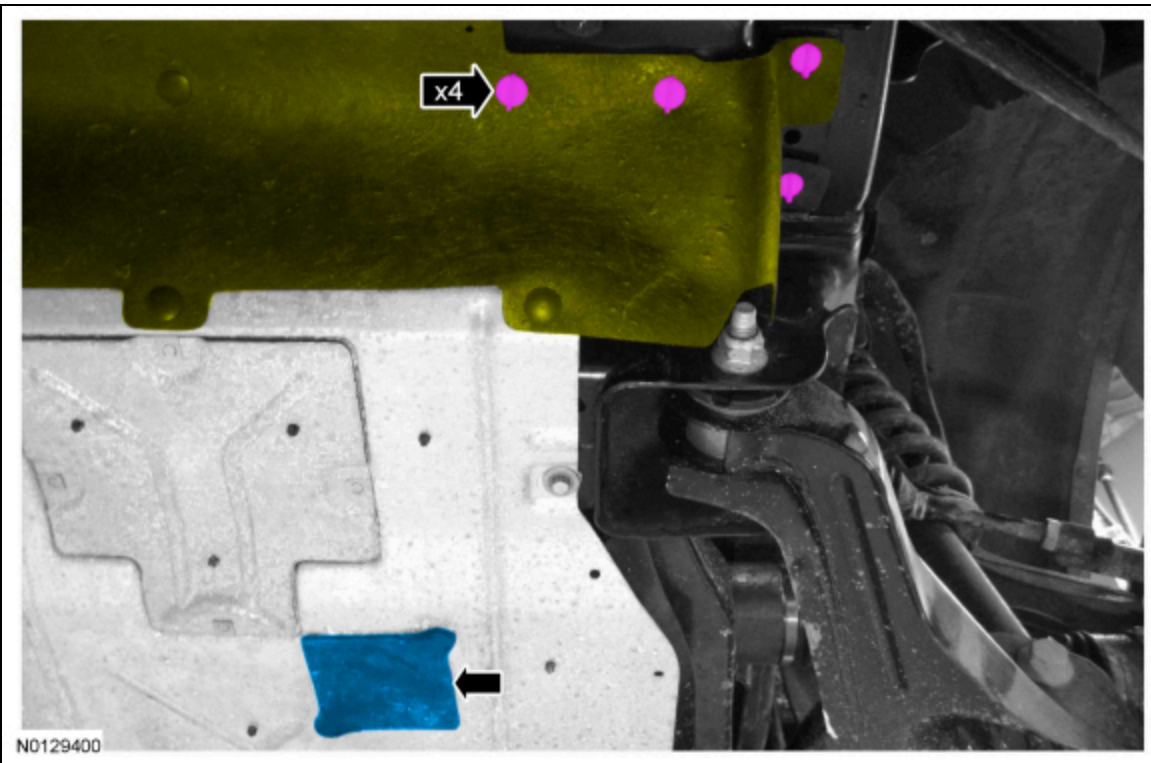


4. Remove and discard the engine oil filter.
5. Using hose clamp pliers, clamp the 2 oil cooler coolant hoses.
 - Disconnect the 2 coolant hoses from the oil cooler.

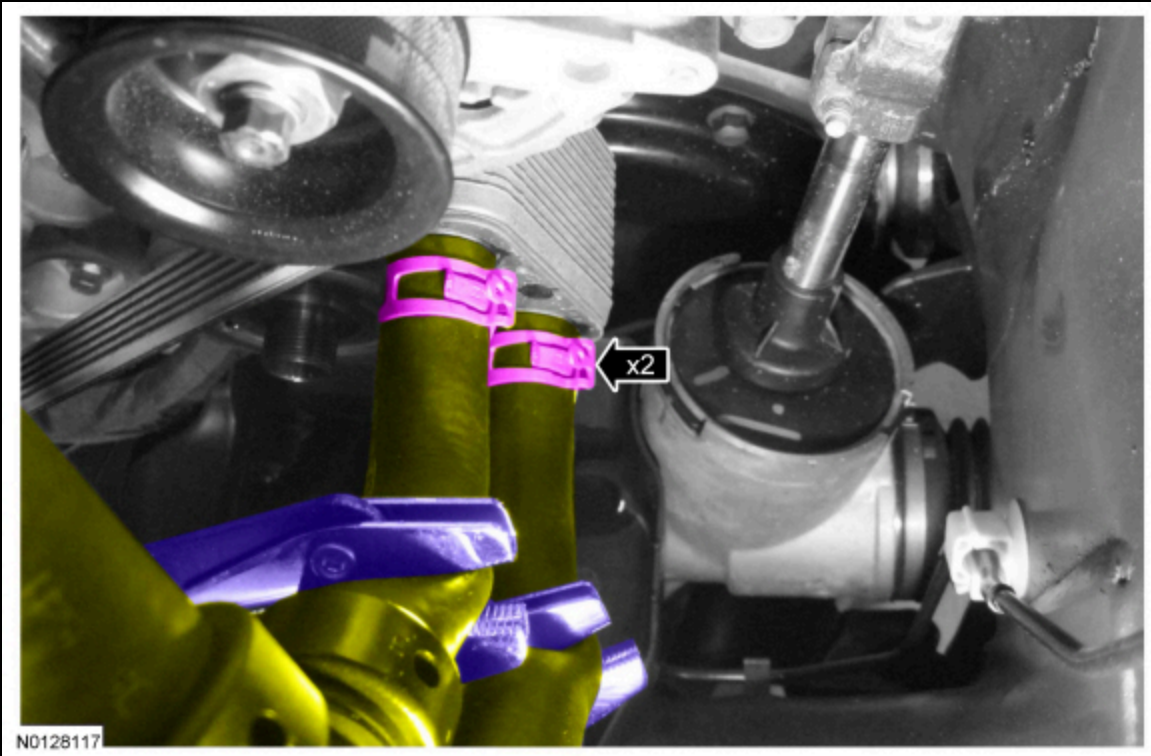

6. NOTICE: If metal or foreign material is present in the oil cooler, mechanical concerns exist. To diagnose the mechanical concerns, refer to Section 303-00.


Remove the oil cooler insert bolt and the oil cooler.

- Inspect the oil cooler gasket, replace if necessary.

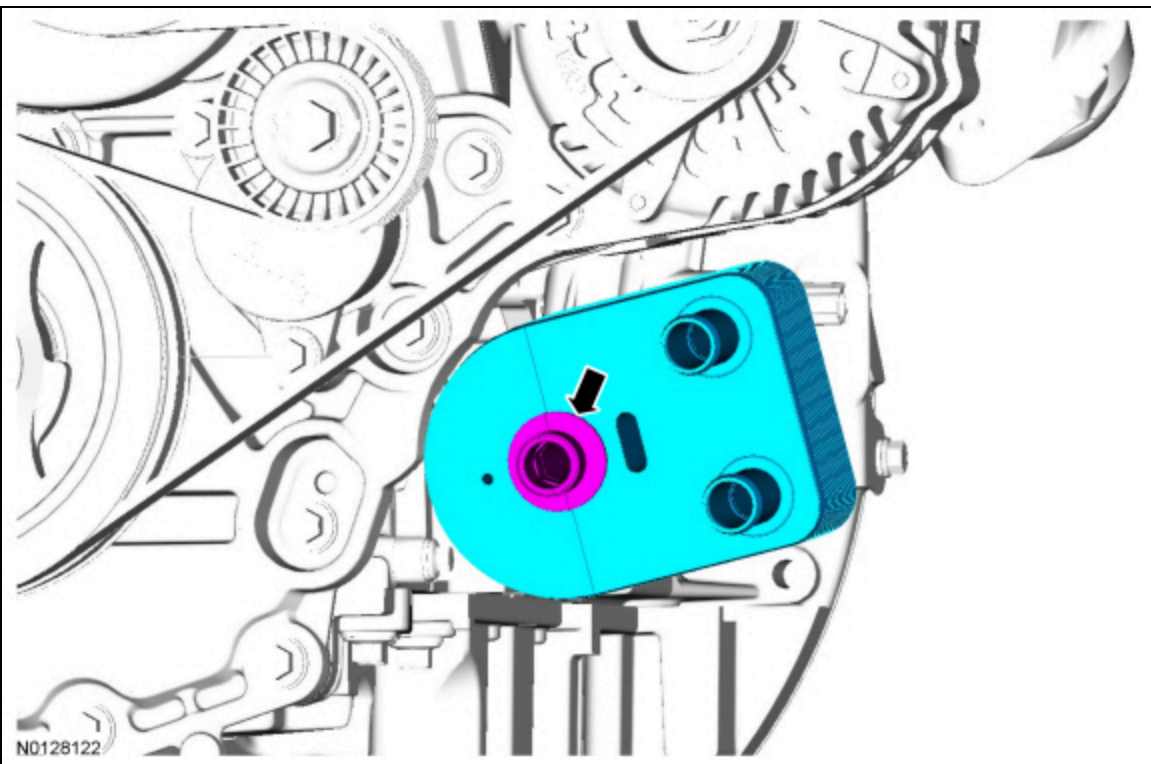


Installation

1. Align the oil cooler to the oil filter adapter and install the oil cooler insert bolt.
 - Tighten to 58 Nm (43 lb-ft).

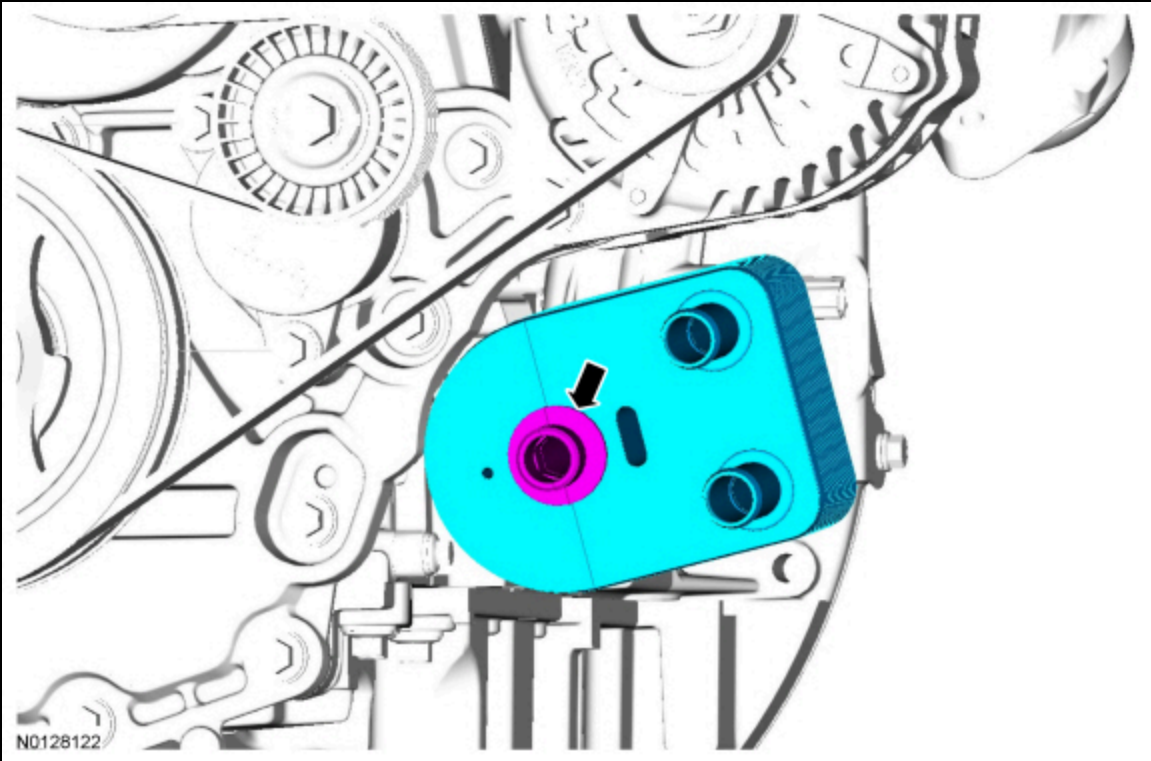

2. Connect the oil cooler coolant hoses.
 - Remove the hose clamp pliers.

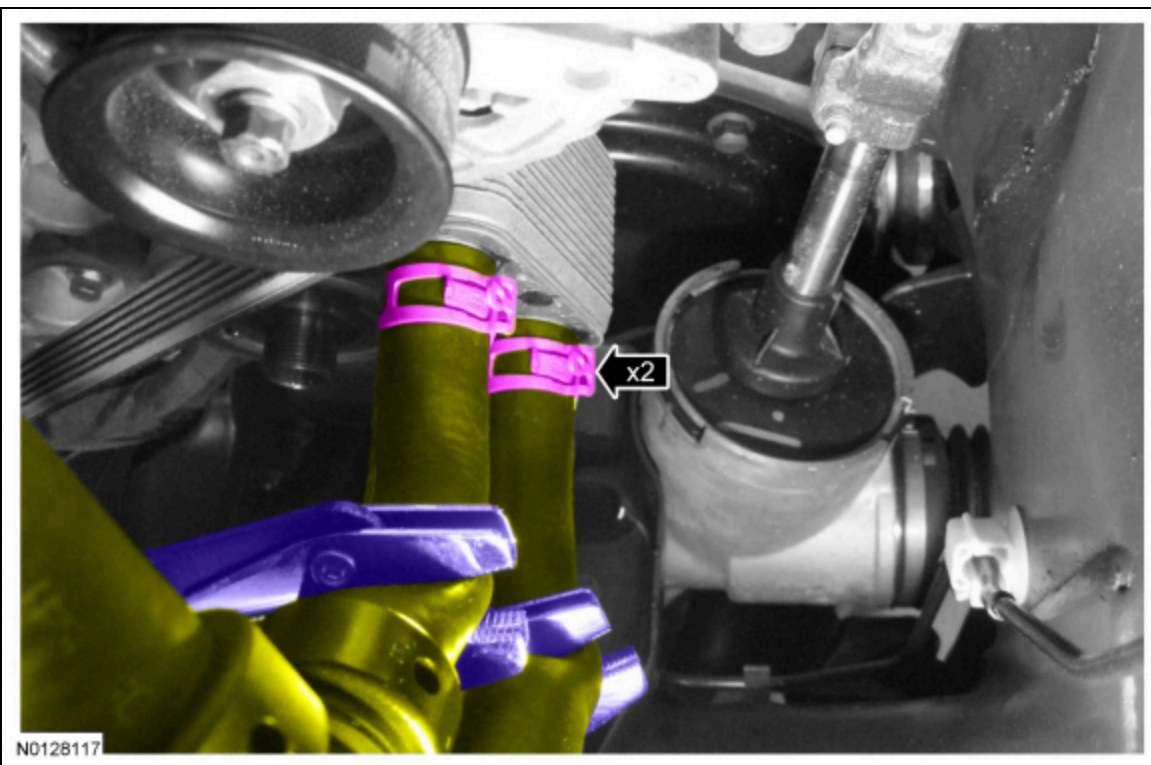


3. **NOTE:** Do not lubricate the engine oil filter gasket.

Install a new engine oil filter.

- Tighten to 5 Nm (44 lb-in) and then rotate an additional 180 degrees.

4. If equipped, position the air deflector and fasten the 4 retainers. Install the skid plate cover.

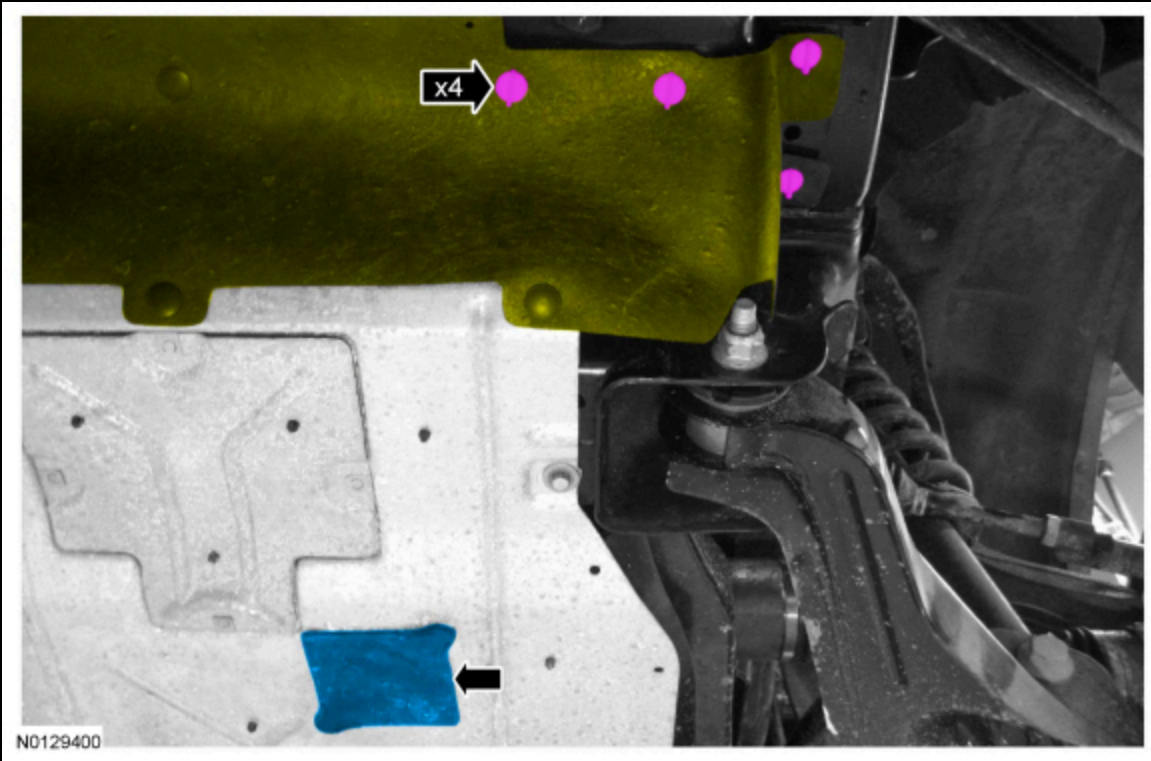

5. Install the ~~ACL~~ outlet pipe and the LH ~~ACL~~ -to-turbocharger pipe. For additional information, refer to Intake Air System Components — Exploded View, 3.5L ~~GTDI~~ in Section 303-12.
6. Inspect and adjust the coolant level in the degas bottle.
7. Inspect and adjust the engine oil level.