


Oil Filter Adapter

 [Ford Ecat Electronic Parts Catalog](#)

Removal

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information refer to Section 100-02.
2. Disconnect the battery ground cable. For additional information, refer to Section 414-01.
3. Remove the Air Cleaner (ACL) outlet pipe and the LH ACL -to-turbocharger pipe. For additional information, refer to Intake Air System Components — Exploded View, 3.5L Gasoline Turbocharged Direct Injection (GTDI) in Section 303-12.
4. If equipped, rotate the 4 retainers and position the air deflector down. Rotate the skid plate cover counterclockwise and remove.

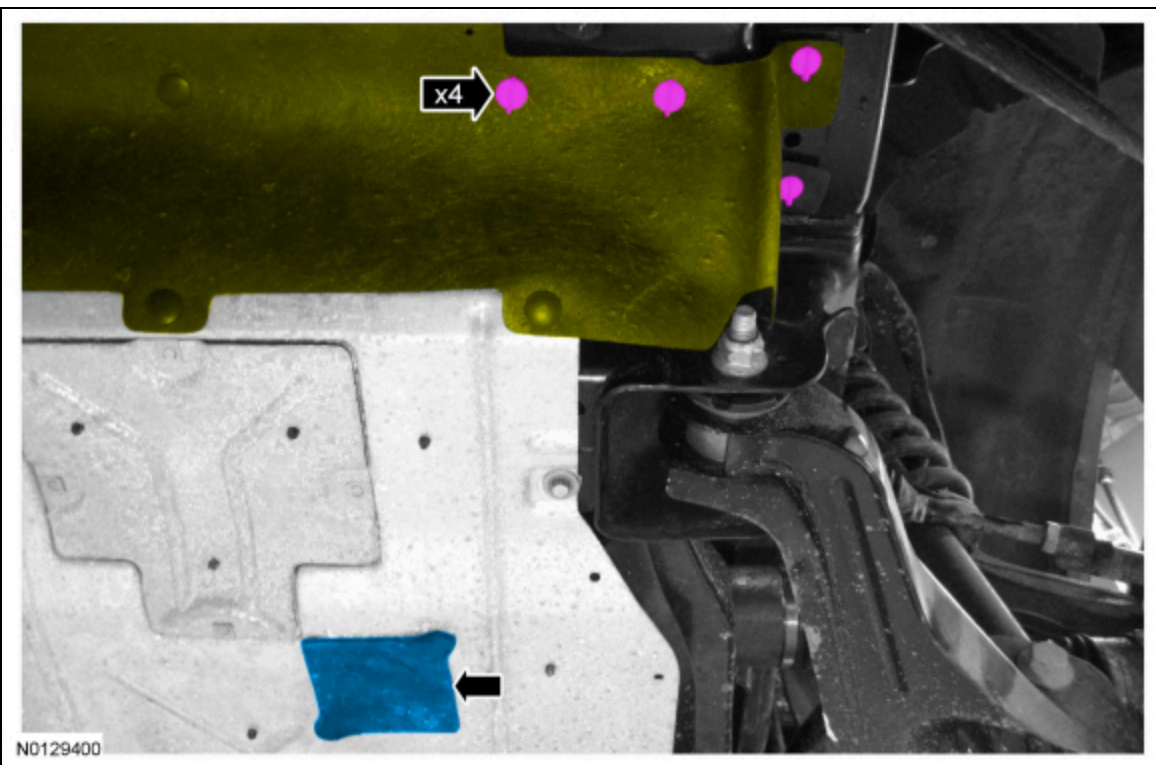


5. Remove and discard the engine oil filter.
6. **NOTICE: If metal or foreign material is present in the oil cooler, mechanical concerns exist. To diagnose the mechanical concerns, refer to Section 303-00.**

Remove the oil cooler insert bolt and position the oil cooler aside.


- Inspect the oil cooler gasket, replace if necessary.

7. Disconnect the generator electrical connector.

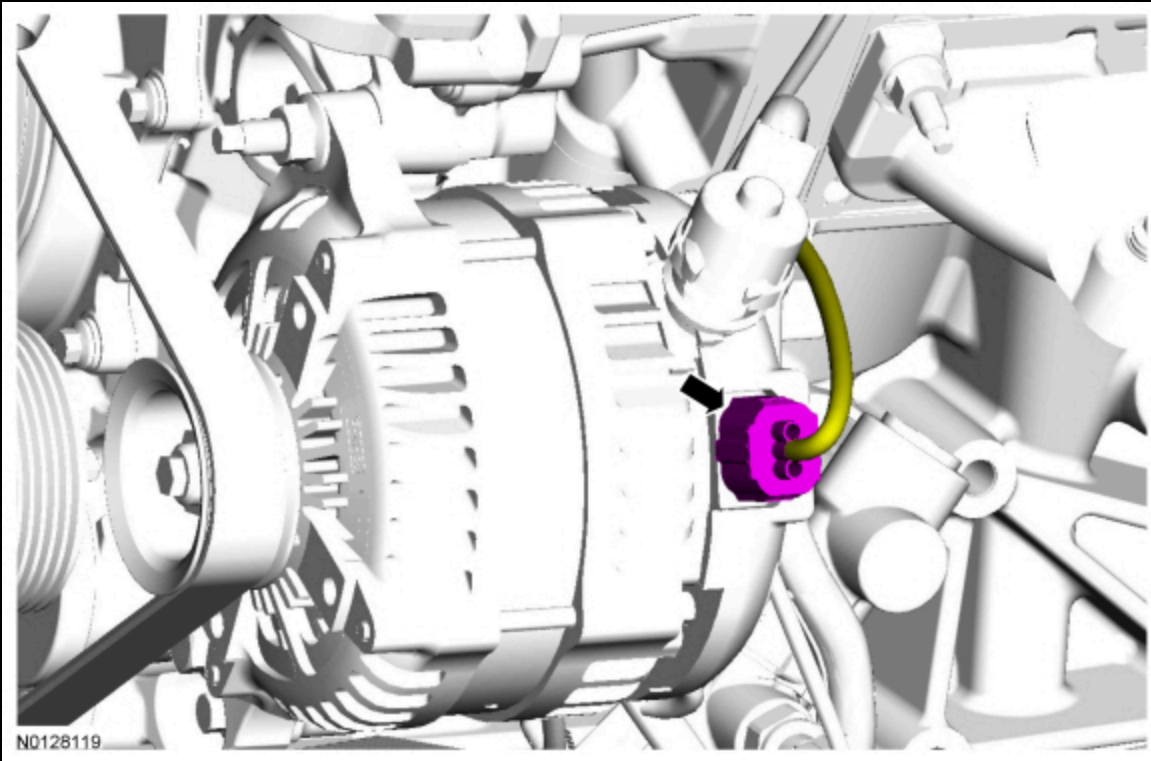

8. Position the generator B+ protective boot aside, remove the B+ nut and position the B+ terminal aside.

- Detach the generator wiring harness retainer from the oil filter adapter and position the generator wiring harness aside.

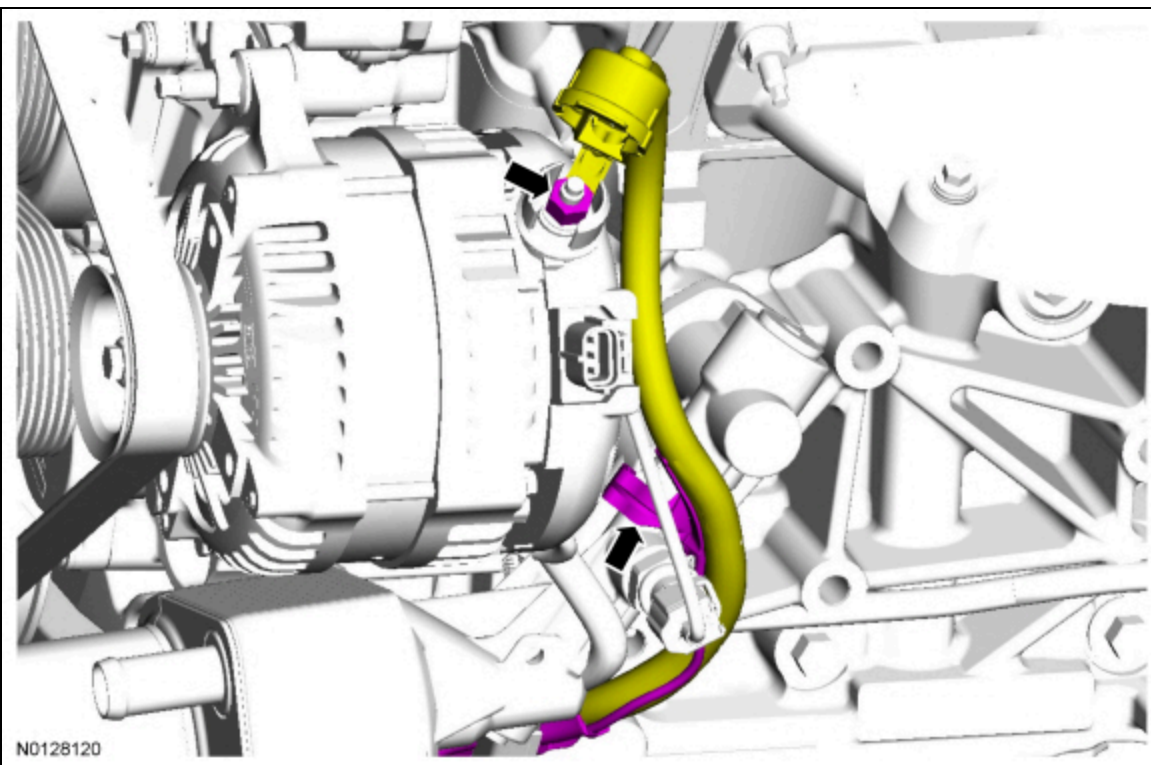

9. Disconnect the Engine Oil Pressure (EOP) electrical connector.


10. Remove the 5 bolts and the oil filter adapter.

- Discard the gasket.
- Clean and inspect all sealing surfaces.

Installation

1. Using a new gasket, install the oil filter adapter and the 5 bolts. Tighten in sequence shown.

- Tighten to 10 Nm (89 lb-in) and then an additional 45 degrees.

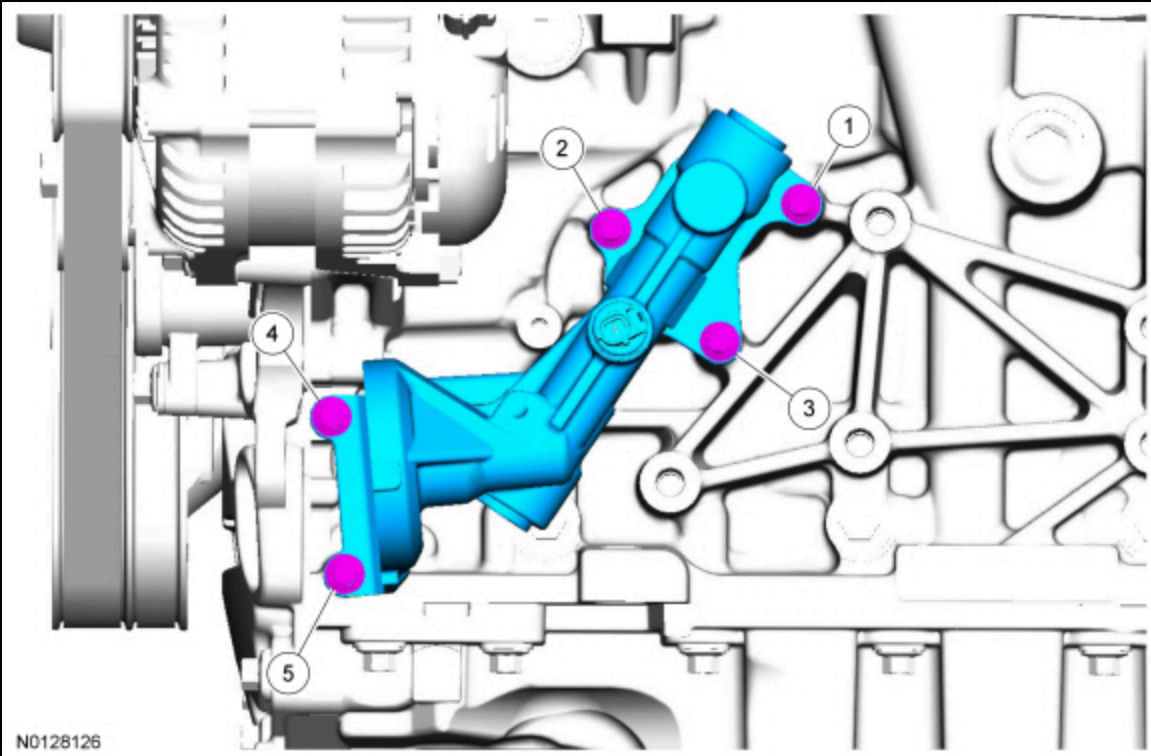


N0128126

2. Connect the EOP electrical connector.


3. Position back the generator wiring harness and B+ terminal and install the nut.

- Tighten to 17 Nm (150 lb-in).
- Position back the generator B+ protective boot.
- Attach the generator wiring harness retainer to the oil filter adapter.

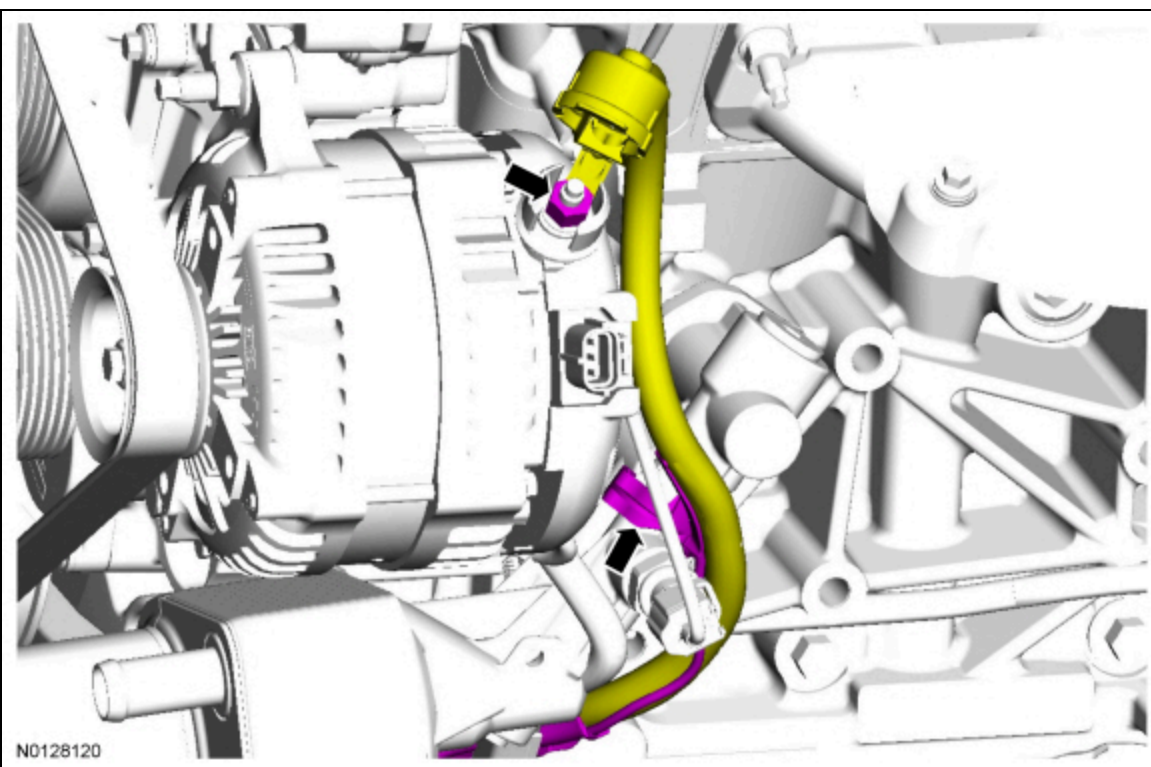

N0128120

4. Connect the generator electrical connector.

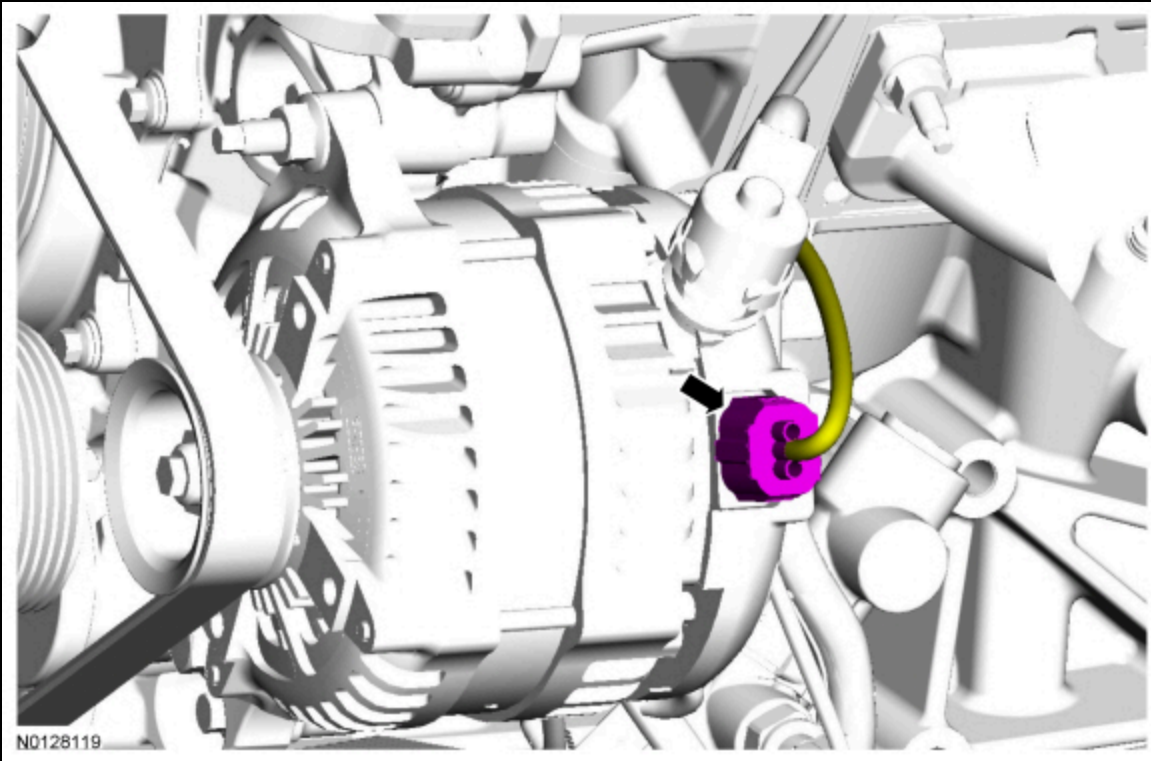

5. Position back the oil cooler and install the oil cooler insert bolt.


- Tighten to 58 Nm (43 lb-ft).

6. **NOTE:** Do not lubricate the engine oil filter gasket.

Install the engine oil filter.

- Tighten to 5 Nm (44 lb-in) and then rotate an additional 180 degrees.

7. If equipped, position the air deflector and fasten the 4 retainers. Install the skid plate cover.

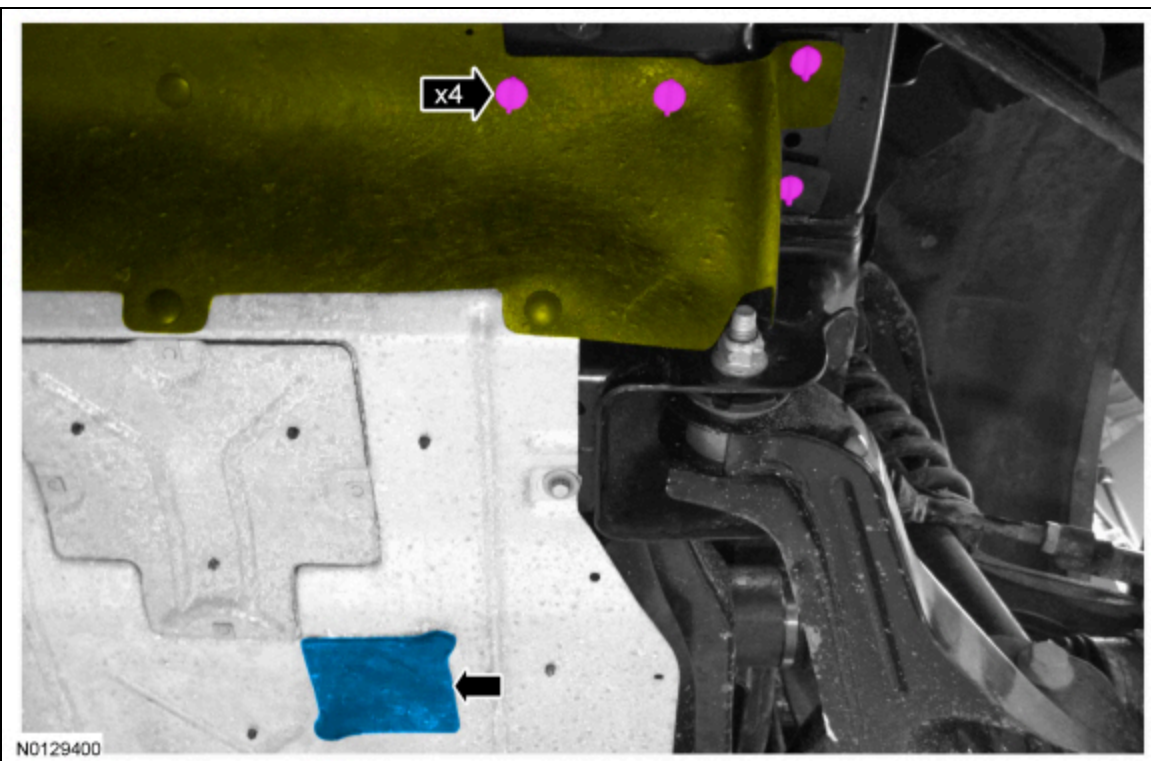

8. Install the ACL outlet pipe and the LH ACL -to-turbocharger pipe. For additional information, refer to Intake Air System Components — Exploded View, 3.5L GTDI in Section 303-12.

9. Connect the battery ground cable. For additional information, refer to Section 414-01.

10. Inspect and adjust the engine oil level.