


Piston



Material


Item	Specification
Motorcraft® SAE 5W-20 Synthetic Blend Motor Oil (US); Motorcraft® SAE 5W-20 Super Premium Motor Oil (Canada) XO-5W20-QSP (US); CXO-5W20-LSP12 (Canada)	WSS-M2C945-A

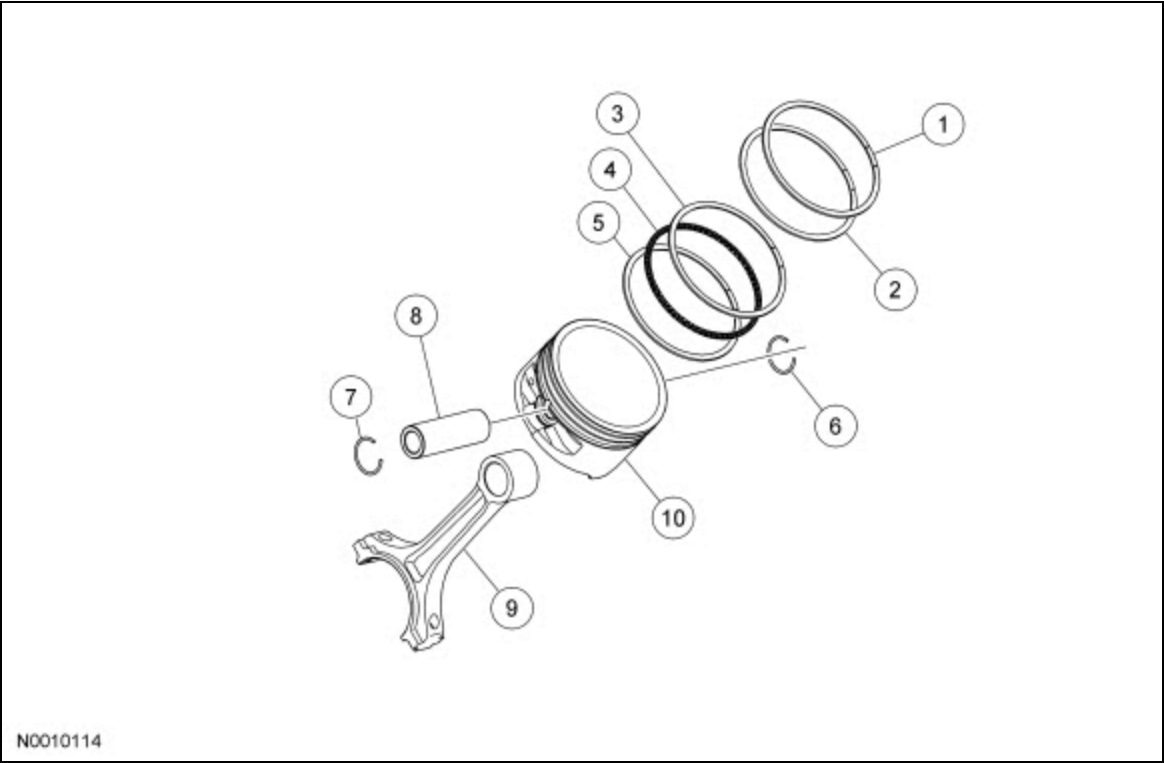

Item	Part Number	Description
1	—	Upper compression ring (part of 6148)
2	—	Lower compression ring (part of 6148)
3	—	Upper oil control ring (part of 6148)
4	—	Oil control expander ring (part of 6148)
5	—	Lower oil control ring (part of 6148)
6	61406140	Piston pin retainer
7	61406140	Piston pin retainer
8	61356135	Piston pin
9	62006200	Connecting rod
10	61106110	Piston

Disassembly

1. Remove and discard the piston rings.

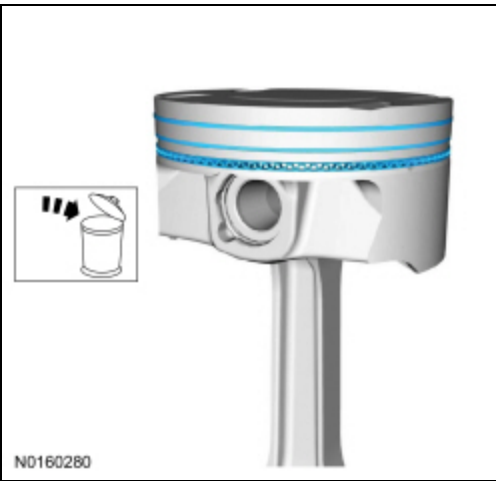


2. Remove and discard the piston pin retainers.
 - Remove the piston pin.



3. **NOTE:** *If the piston and connecting rod are to be reinstalled, they must be assembled in the same orientation. Mark the piston orientation to the connecting rod for reassembly.*

Separate the piston from the connecting rod.

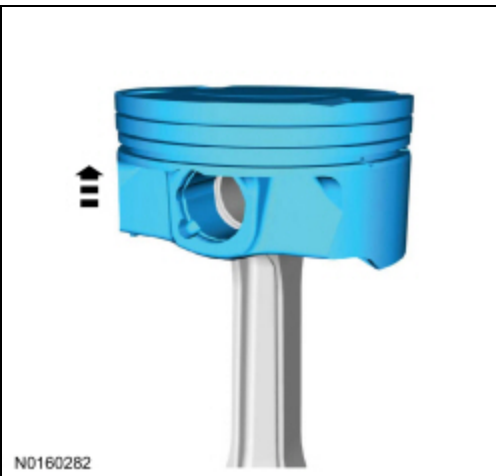

4. Clean and inspect the piston and connecting rod. For additional information, refer to Section 303-00.





N0160263

Assembly


NOTE: *Lubricate the components with clean engine oil prior to assembly.*

1. If the piston and/or connecting rod are being installed new, the connecting rod orientation marks and the arrow on the top of the dome of the piston should be facing toward the front of the engine block.

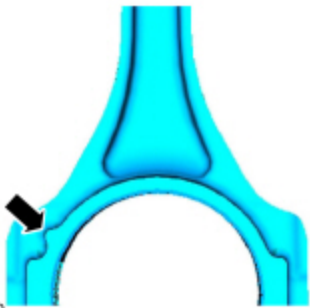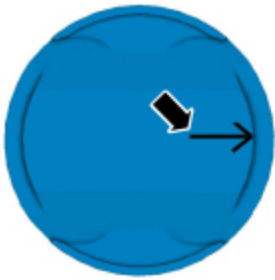

N0160290

2. Position the piston on the connecting rod.

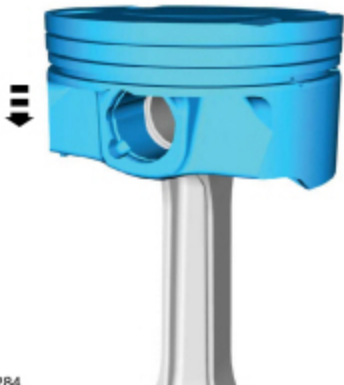

N0160264

3. Install the piston pin.



4. **NOTE:** *The piston pin retainer gap orientation must be toward the top of the piston.*

Install the piston pin retainers.



5. Install the oil control rings.

1. Upper oil control ring.
2. Oil control expander ring.
3. Lower oil control ring.



6. Install the lower compression ring.

1. The "O" mark on the ring pointing up toward the top of the piston.
2. Hook feature will point down toward the bottom of piston.



7. Install the upper compression ring.

1. The "O" mark on the ring pointing up toward the top of the piston.



8. Position the piston ring gaps.

1. Center line of the piston parallel to the wrist pin bore.
2. Upper compression ring gap.
3. Upper oil control ring gap.
4. Lower oil control ring gap.
5. Oil control expander ring and lower compression ring gap.

