


Crankshaft Front Seal



Special Tool(s)

 ST1328-A	Installer, Front Cover Oil Seal 303-335 (T88T-6701-A2 plate only)
 ST3249-A	Installer, Front Crank Seal and Damper 303-1531
 ST1385-A	Remover, Oil Seal 303-409 (T92C-6700-CH)

Material


Item	Specification
Motorcraft® SAE 5W-20 Synthetic Blend Motor Oil (US); Motorcraft® SAE 5W-20 Super Premium Motor Oil (Canada) XO-5W20-QSP (US); CXO-5W20-LSP12 (Canada)	WSS-M2C945-A

Removal

NOTICE: During engine repair procedures, cleanliness is extremely important. Any foreign material, including any material created while cleaning gasket surfaces, that enters the oil passages, coolant passages or the oil pan, can cause engine failure.

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Remove the crankshaft pulley. For additional information, refer to Crankshaft Pulley in this section.
3. **NOTICE:** Use care not to damage the engine front cover or the crankshaft when removing the seal.


Using the Oil Seal Remover, remove the crankshaft front oil seal.

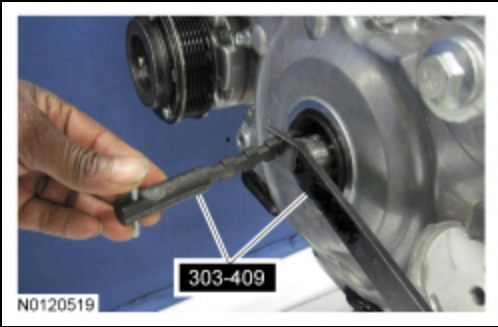

Installation

1. **NOTE:** *Lubricate the engine front cover bore and the crankshaft front oil seal inner lip with clean engine oil.*

Using the Front Crank Seal and Damper Installer and the Front Cover Oil Seal Installer (plate only), install the crankshaft front oil seal.

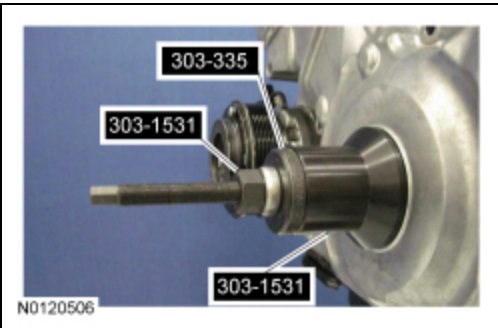

2. Install the crankshaft pulley. For additional information, refer to Crankshaft Pulley in this section.