


Crankshaft Rear Seal

 [Ford Ecat Electronic Parts Catalog](#)

Special Tool(s)

 ST1326-A	Handle 205-153 (T80T-4000-W)
 ST2980-A	Installer, Rear Main Seal 303-1250
 ST1382-A	Remover, Crankshaft Rear Oil Seal 303-519 (T95P-6701-EH)
 ST1185-A	Slide Hammer 100-001 (T50T-100-A)

Material


Item	Specification
Motorcraft® Metal Surface Prep Wipes ZC-31-B	—
Motorcraft® SAE 5W-20 Synthetic Blend Motor Oil (US); Motorcraft® SAE 5W-20 Super Premium Motor Oil (Canada) XO-5W20-QSP (US); CXO-5W20-LSP12 (Canada)	WSS- M2C945-A

Removal

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Remove the flexplate. For additional information, refer to Flexplate or Flywheel and Crankshaft Rear Seal — Exploded View and Flexplate in this section.
3. Remove the engine separator plate.
4. **NOTE:** *Inspect the crankshaft sensor ring for damage. If the crankshaft sensor ring has been dropped or has any visual damage, it must be discarded.*

Remove the crankshaft sensor ring.


5. Using the Slide Hammer and the Crankshaft Rear Oil Seal Remover, remove and discard the crankshaft rear seal.
 - Clean all sealing surfaces with metal surface prep.

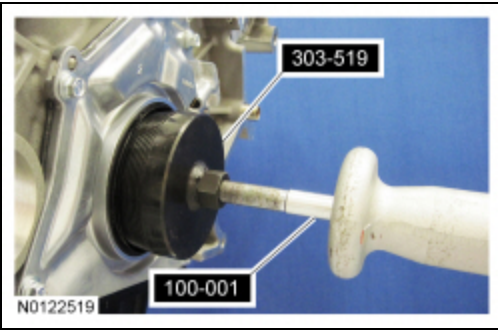


Installation

1. **NOTE:** *Lubricate the seal lips and bore with clean engine oil prior to installation.*

Position the Rear Main Seal Installer onto the end of the crankshaft and slide a new crankshaft rear seal onto the tool.

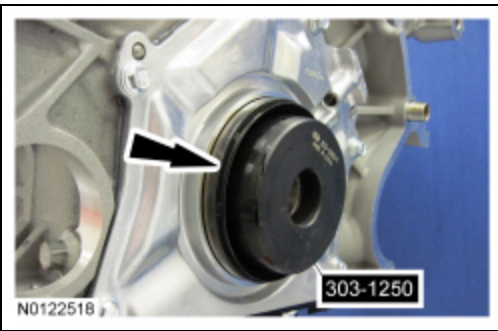

2. Using the Rear Main Seal Installer and Handle, install the new crankshaft rear seal.

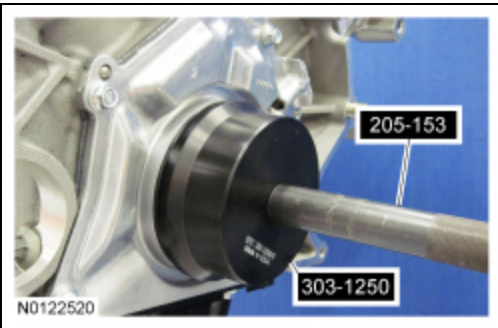

3. Install the crankshaft sensor ring.
4. Install the engine separator plate.
5. Install the flexplate. For additional information, refer to Flexplate or Flywheel and Crankshaft Rear Seal — Exploded View and Flexplate in this section.