

Engine Oil Pressure (EOP) Switch



Material	
Item	Specification
Motorcraft® Thread Sealant with PTFE TA-24-B	WSK-M2G350-A2

Removal

4x2 vehicles


1. With the vehicle in NEUTRAL, position it on a hoist. Refer to Section 100-02.

4x4 vehicles

2. Remove the generator. Refer to Section 414-00.

All vehicles

3. Disconnect the EOP switch electrical connector.
 - Remove the EOP switch.

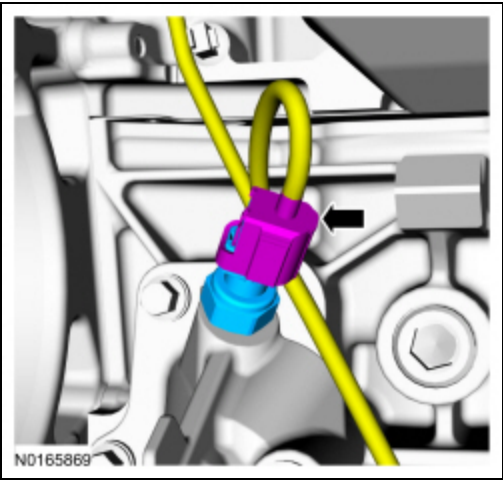


Installation

All vehicles

1. **NOTE:** If the oil pressure switch is to be reused, apply thread sealant.

Install the EOP switch.

- Tighten in 2 stages.
 - Stage 1: Tighten to 14 Nm (124 lb-in).
 - Stage 2: Tighten an additional 180 degrees.
- Connect the EOP switch electrical connector.

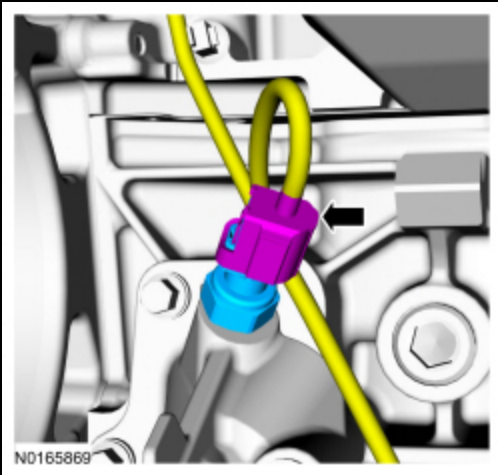

4x4 vehicles

- 2. Install the generator. Refer to Section 414-00.