


Exhaust Manifold — LH

 [Ford Ecat Electronic Parts Catalog](#)

Material	
Item	Specification
Motorcraft® Metal Surface Prep Wipes ZC-31-B	—

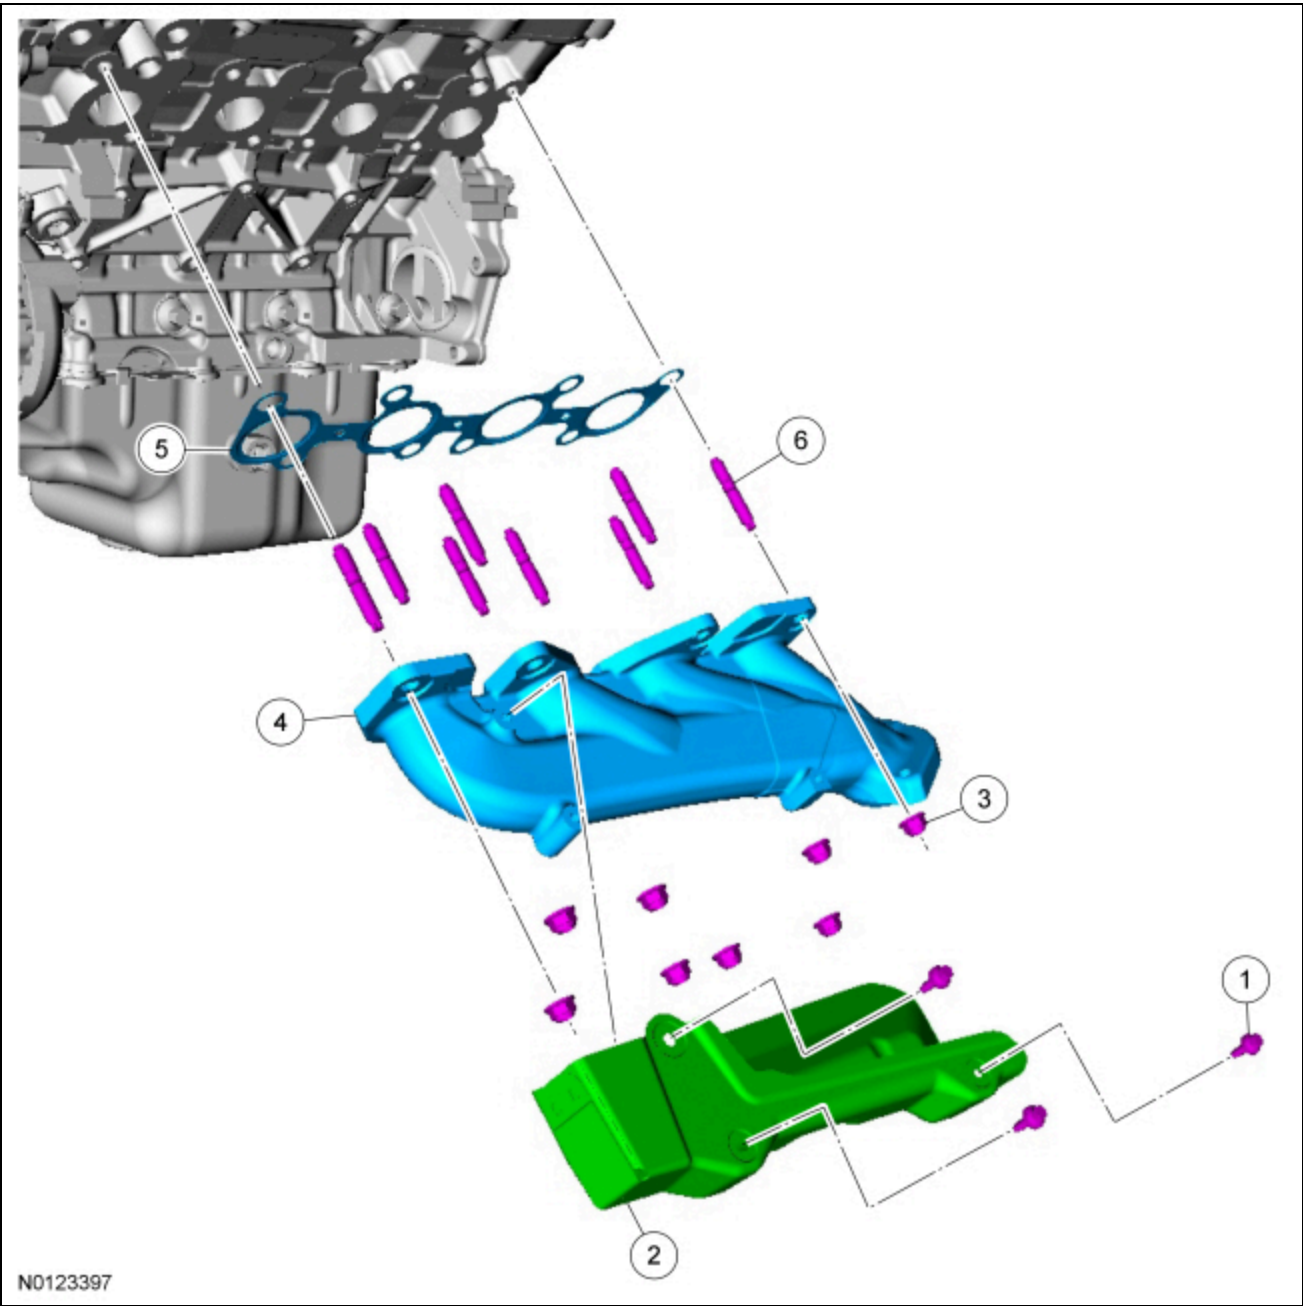


Item	Part Number	Description
1	W714133 W714133	LH exhaust manifold heat shield bolts (3 required) - 12 Nm (106 lb-in)
2	9Y4279 Y427	LH exhaust manifold heat shield

3	W714870 W714870	LH exhaust manifold nuts (8 required)
4	9431 9431	LH exhaust manifold
5	9448 9448	LH exhaust manifold gasket
6	W714869 W714869	LH exhaust manifold studs (8 required) - 25 Nm (18 lb-ft)


Removal

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. **NOTE:** Use a steering wheel holding device (such as Hunter® 28-75-1 or equivalent).


Using a suitable holding device, hold the steering wheel in the straight-ahead position.

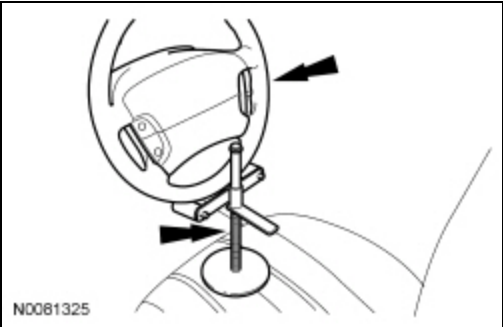

3. Remove the air cleaner outlet pipe and air cleaner cover as an assembly. For additional information, refer to Section 303-12.
4. Remove the 2 bolts and remove the lower steering column shaft.

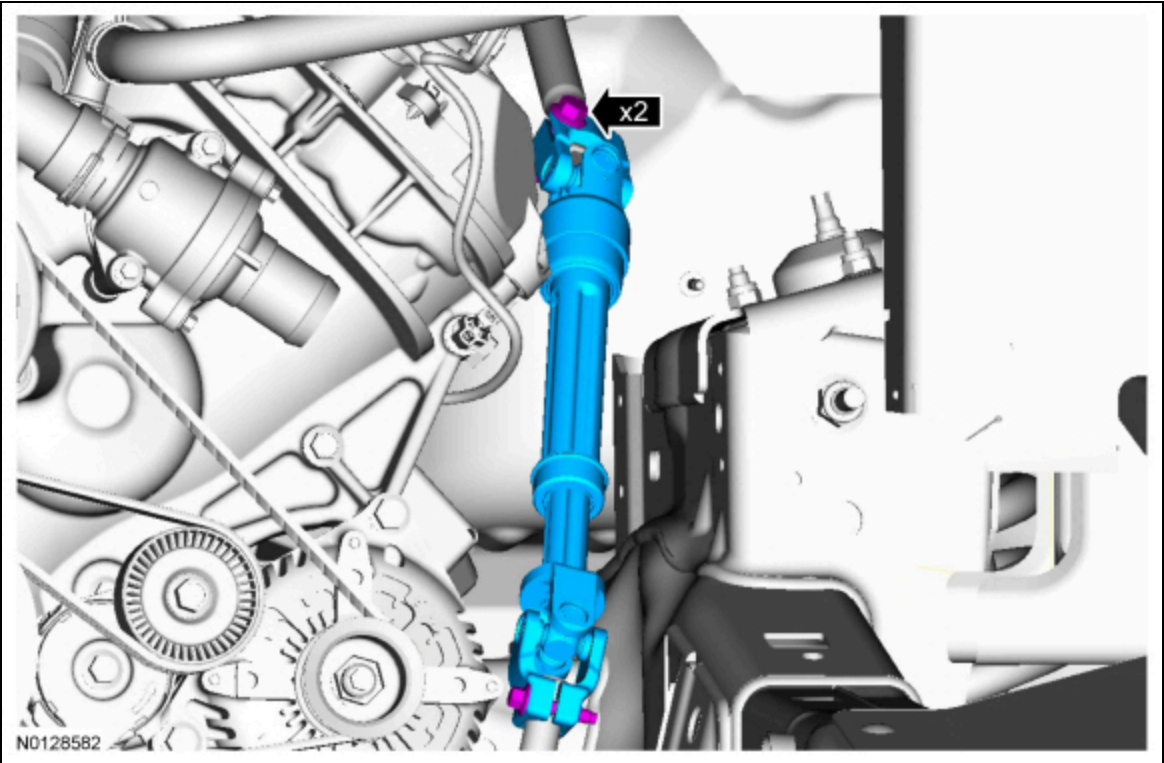


5. Remove the 3 bolts and the LH exhaust manifold heat shield.
6. Remove the 2 catalytic converter-to-LH exhaust manifold nuts.

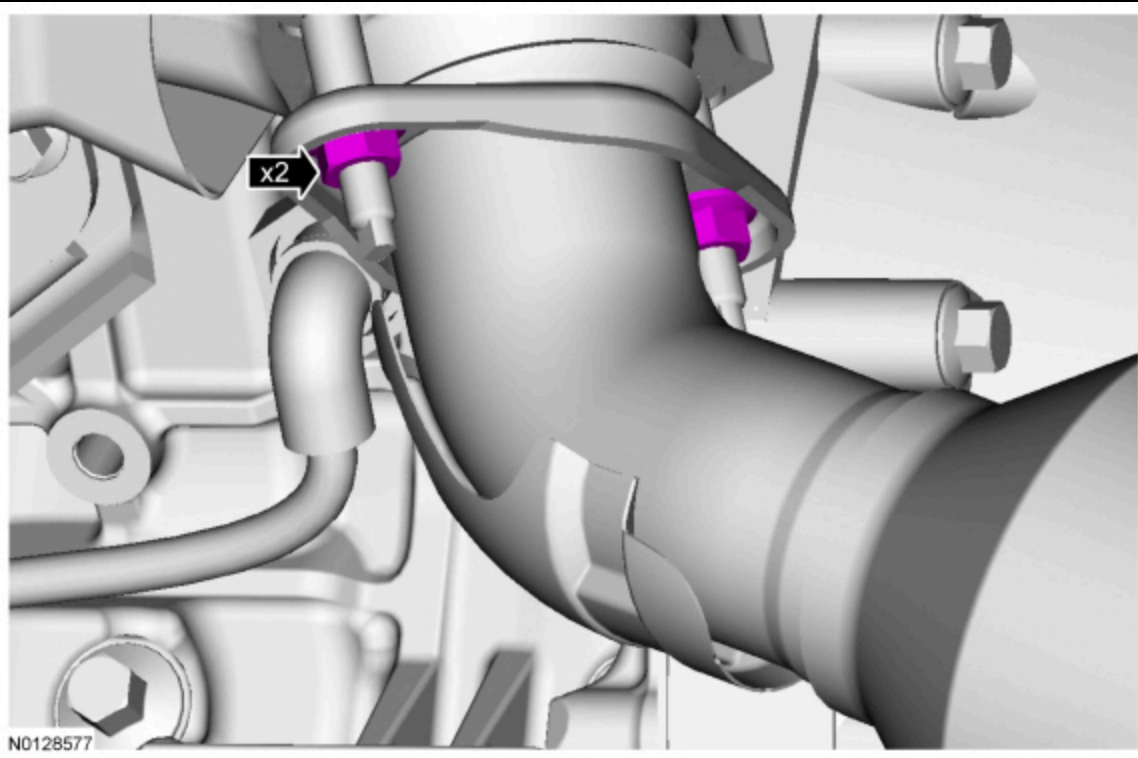

7. Loosen the LH catalytic converter-to-RH catalytic converter Torca® clamp.

- Lower the catalytic converter to disengage the catalytic converter flange from the LH exhaust manifold studs.

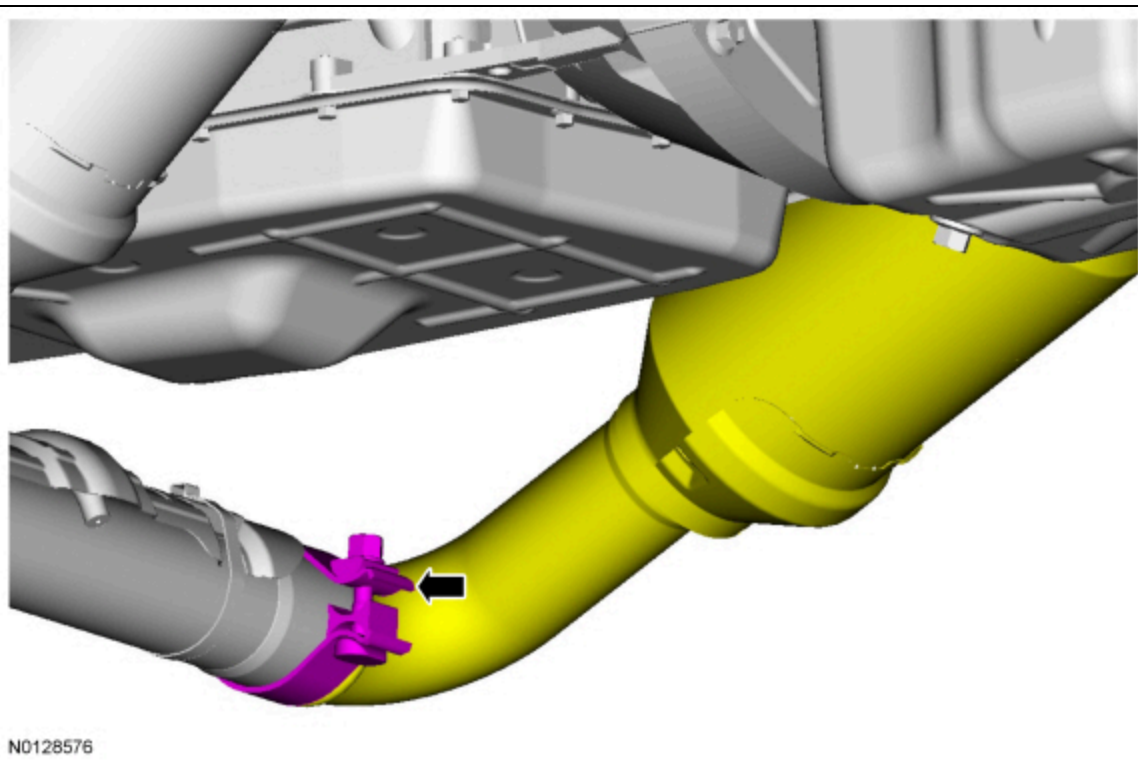

8. Remove the 8 LH exhaust manifold nuts.

9. Working from under the hood, remove the LH exhaust manifold and gasket.

- Discard the gasket.

10. Clean and inspect the LH exhaust manifold. For additional information, refer to Section 303-00.


11. Remove and discard the 8 LH exhaust manifold studs.

12. **NOTICE:** Do not use metal scrapers, wire brushes, power abrasive discs or other abrasive means to clean the sealing surfaces. These tools cause scratches and gouges which make leak paths. Use a plastic scraper to clean the sealing surfaces.

Clean the exhaust manifold mating surface of the cylinder head with metal surface prep. Follow the directions on the packaging.

Installation


1. Install 8 new LH exhaust manifold studs.
 - Tighten to 25 Nm (18 lb-ft).
2. Install a new gasket, the LH exhaust manifold and 8 new nuts.
 - Tighten in the sequence shown in 2 stages.
 - Stage 1: Tighten to 24 Nm (18 lb-ft).
 - Stage 2: Tighten to 32 Nm (24 lb-ft).

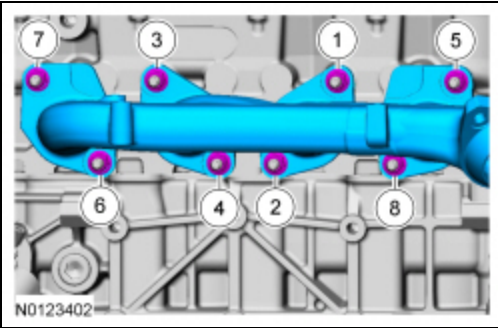


3. **NOTE:** *Some replacement exhaust manifolds do not come with studs.*

If necessary, install new studs.


- Tighten to 40 Nm (30 lb-ft)

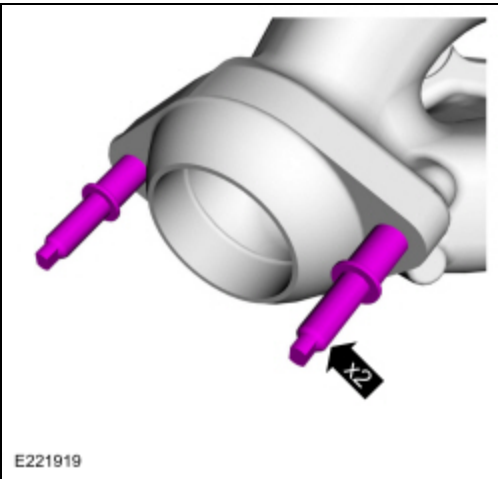


4. Position the LH catalytic converter onto the LH exhaust manifold and loosely install the 2 nuts.

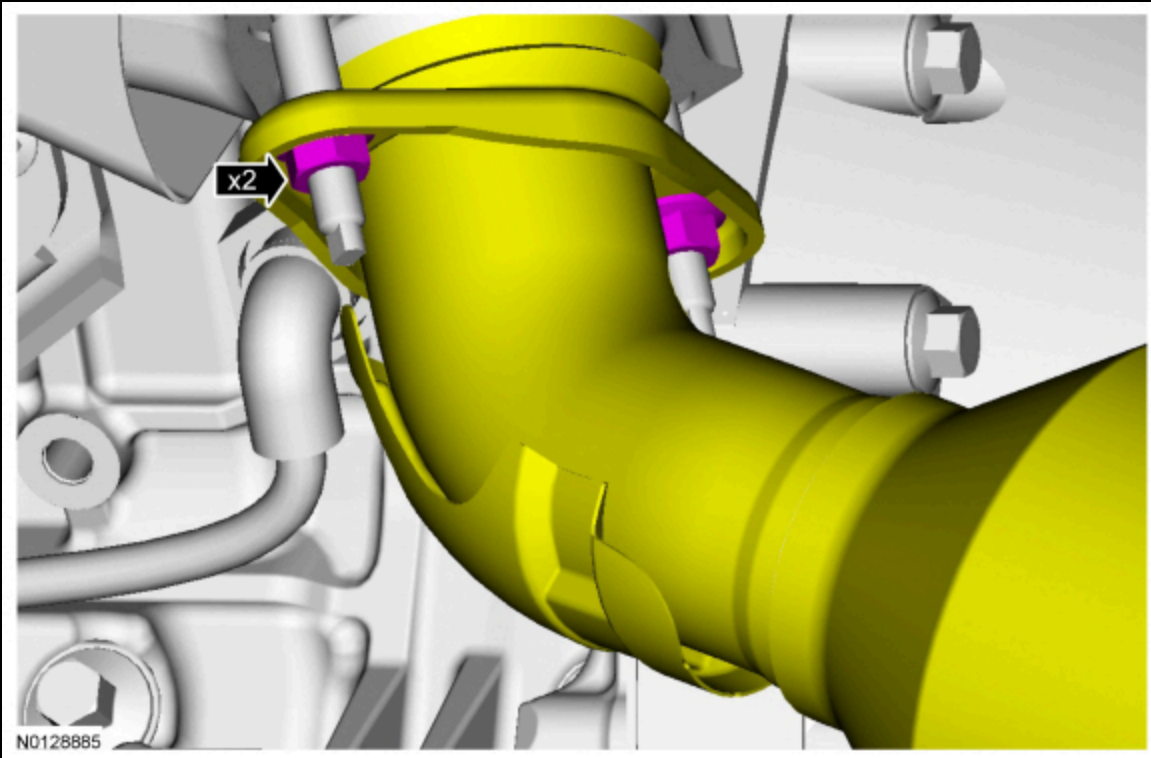


5. Tighten the LH catalytic converter-to-RH catalytic converter Torca® clamp to 55 Nm (41 lb-ft).

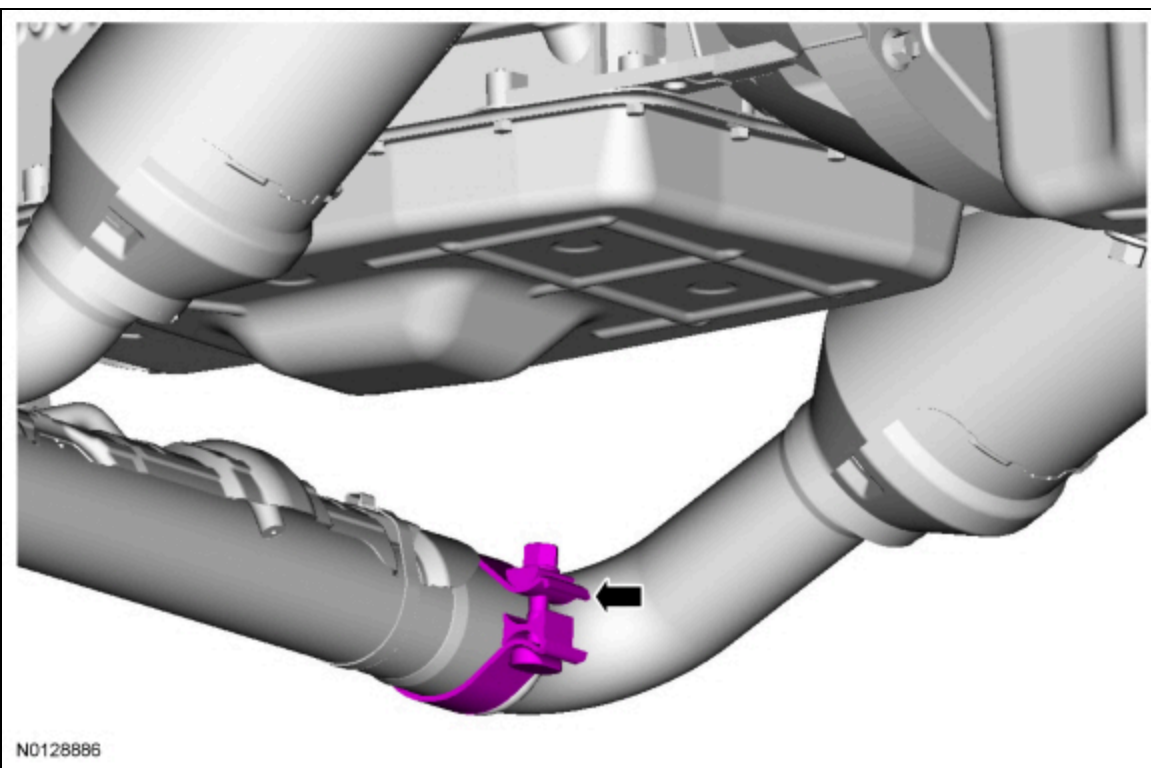

6. Tighten the 2 new LH catalytic converter-to-exhaust manifold nuts in the following sequence.
1. Tighten the LH outer catalytic converter-to-exhaust manifold nut to 40 Nm (30 lb-ft).
 2. Tighten the LH inner catalytic converter-to-exhaust manifold nut to 40 Nm (30 lb-ft).

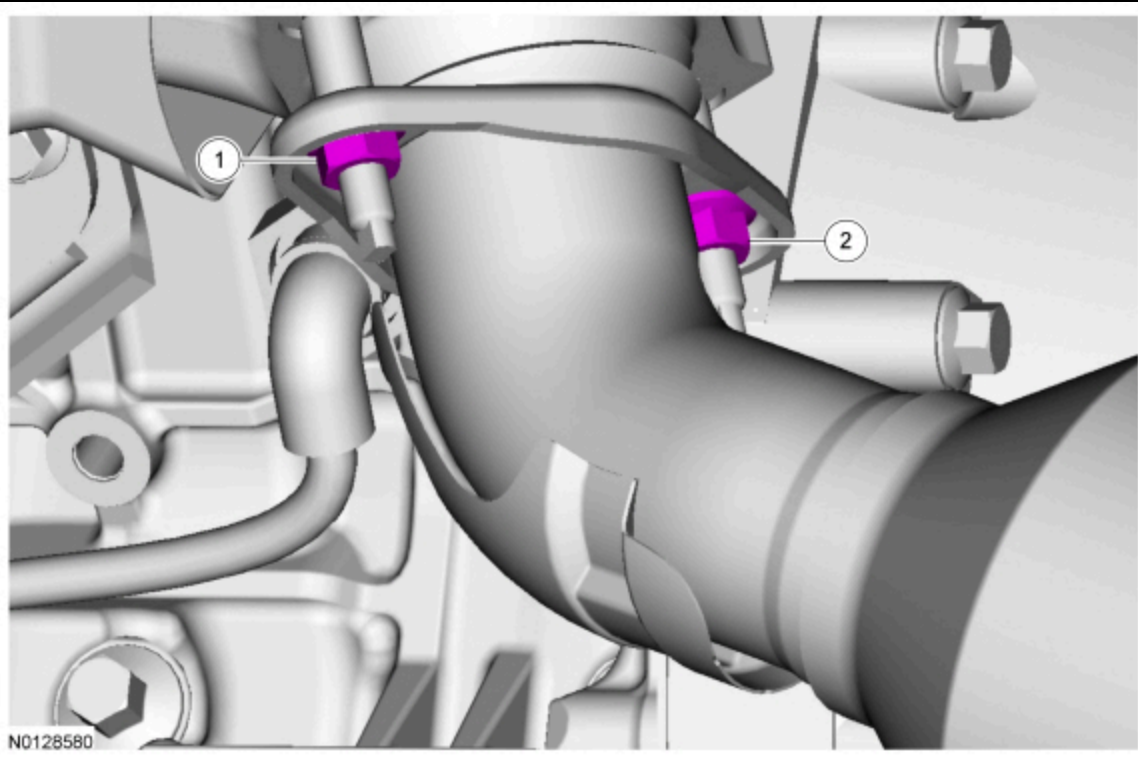

7. Install the LH exhaust manifold heat shield and the 3 bolts.
 - Tighten to 12 Nm (106 lb-in).
8. Install the lower steering column shaft and the 2 bolts.
 1. Tighten the upper bolt to 48 Nm (35 lb-ft).
 2. Tighten the lower bolt to 30 Nm (22 lb-ft).

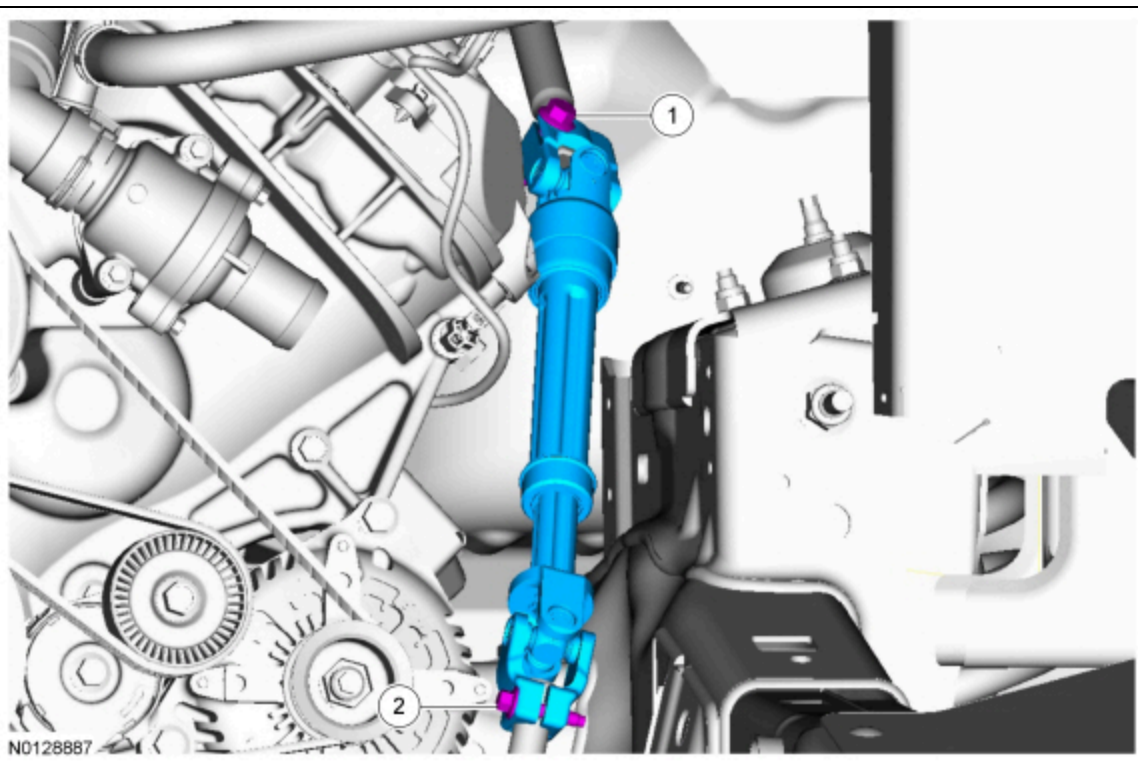

9. Install the air cleaner outlet pipe and air cleaner cover assembly. For additional information, refer to Section 303-12.