


Exhaust Manifold — RH

 [Ford Ecat Electronic Parts Catalog](#)

| Material                                        |               |
|-------------------------------------------------|---------------|
| Item                                            | Specification |
| Motorcraft® Metal Surface Prep Wipes<br>ZC-31-B | —             |

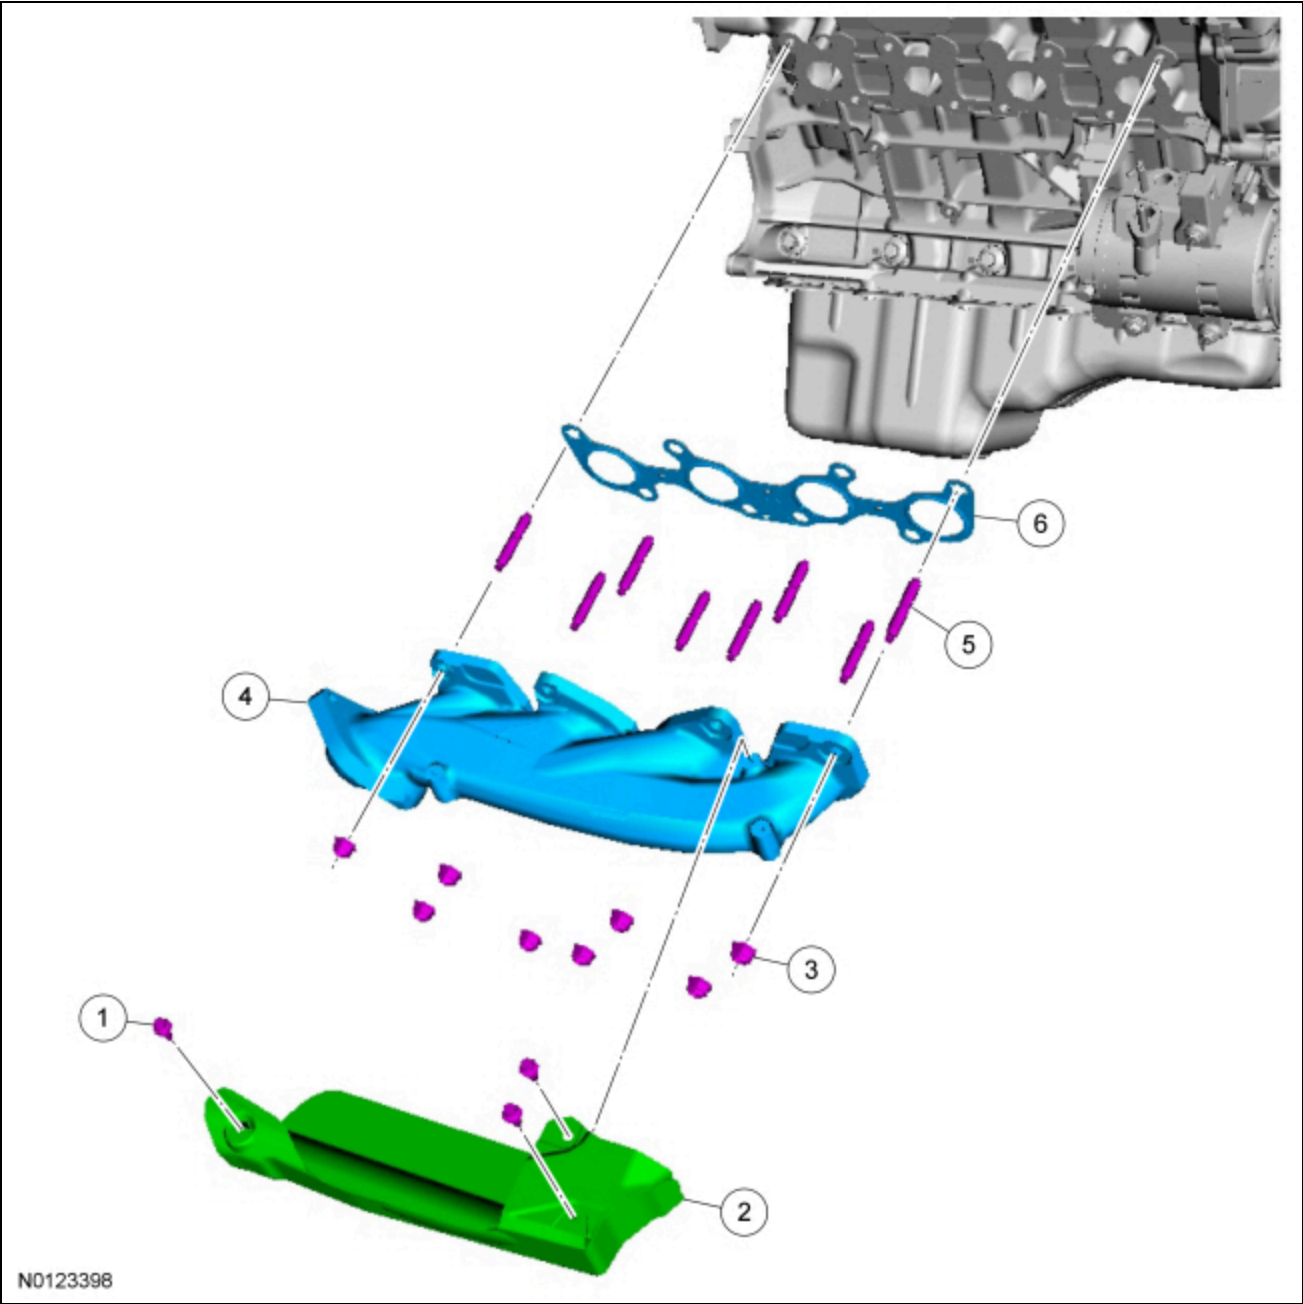


| Item | Part Number                     | Description                                                            |
|------|---------------------------------|------------------------------------------------------------------------|
| 1    | W714133 <a href="#">W714133</a> | RH exhaust manifold heat shield bolts (3 required) - 12 Nm (106 lb-in) |
| 2    | 9A4629 <a href="#">A462</a>     | RH exhaust manifold heat shield                                        |


|   |                                 |                                                           |
|---|---------------------------------|-----------------------------------------------------------|
| 3 | W714870 <a href="#">W714870</a> | RH exhaust manifold nuts (8 required)                     |
| 4 | 9430 <a href="#">9430</a>       | RH exhaust manifold                                       |
| 5 | W714869 <a href="#">W714869</a> | RH exhaust manifold studs (8 required) - 25 Nm (18 lb-ft) |
| 6 | 9448 <a href="#">9448</a>       | RH exhaust manifold gasket                                |

## Removal


1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Remove the A/C compressor. For additional information, refer to Section 412-01.
3. Disconnect the battery ground cable. For additional information, refer to Section 414-01.
4. Remove the 3 bolts and the RH exhaust manifold heat shield.
5. Remove the 2 exhaust Y-pipe dual catalytic converter-to-exhaust intermediate pipe bolts and separate.
  - Discard the bolts.

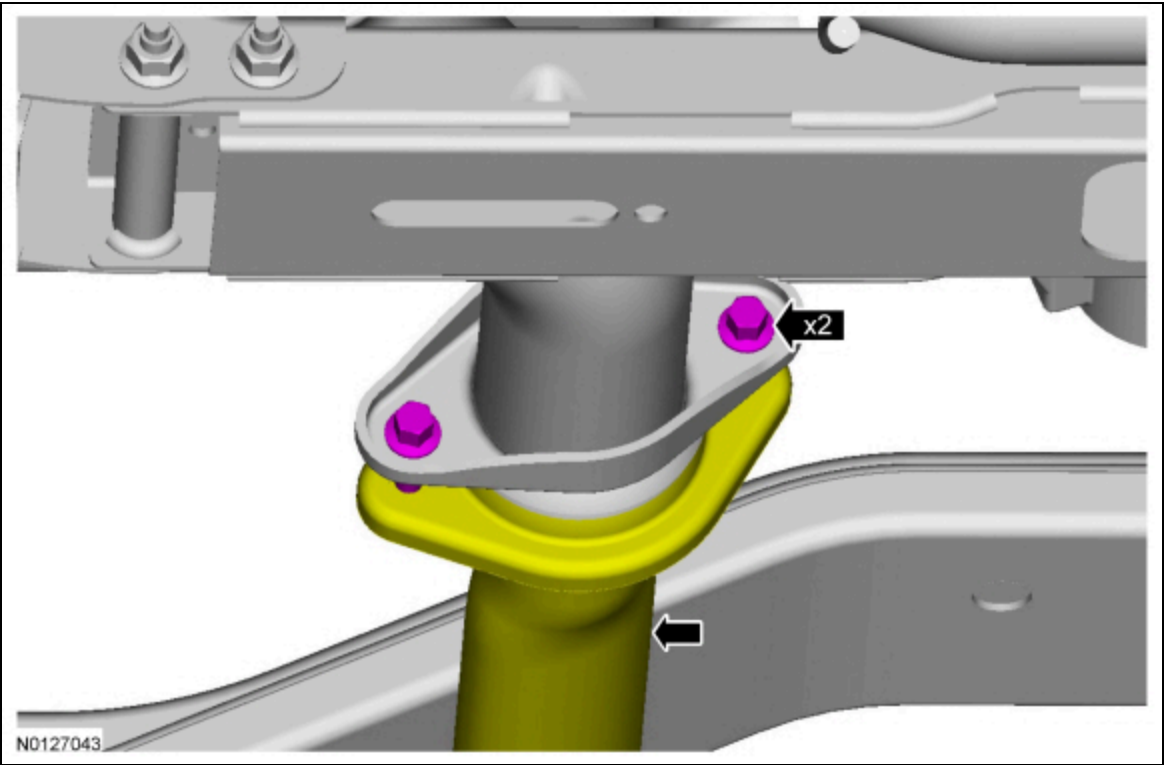

6. Remove the 2 catalytic converter-to-LH exhaust manifold nuts.

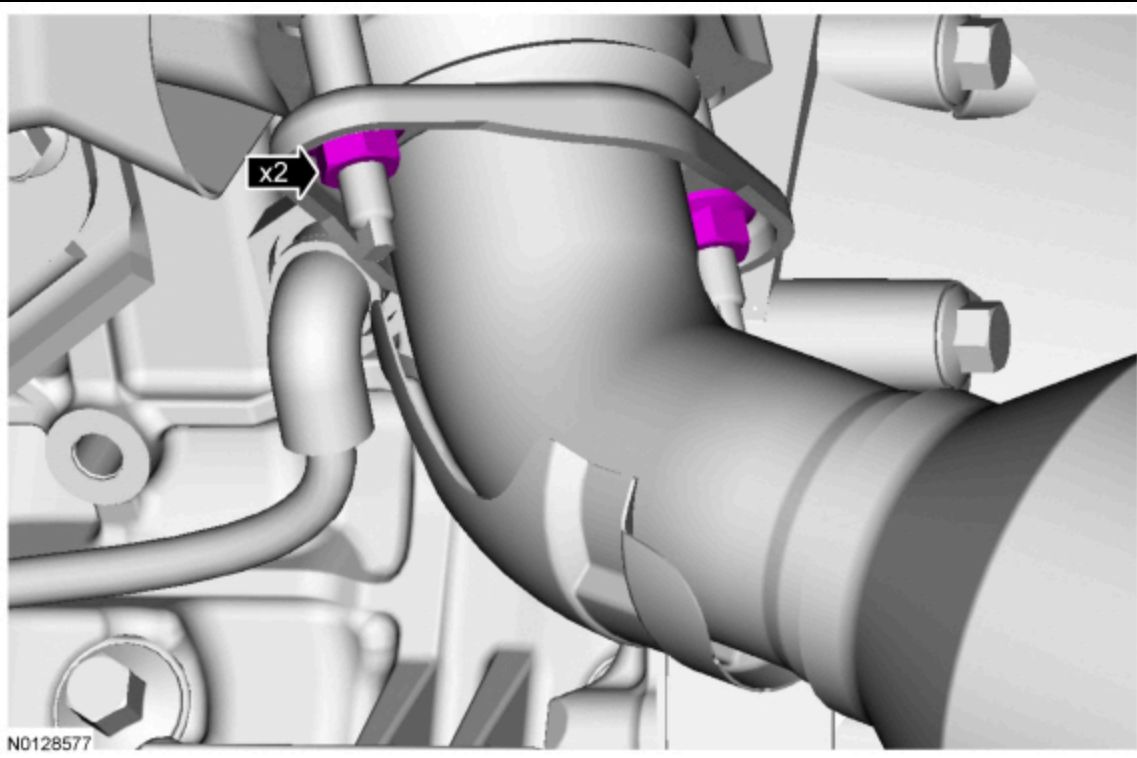

7. Remove the 2 catalytic converter-to-RH exhaust manifold nuts.
  - Separate the exhaust Y-pipe dual catalytic converter from the exhaust manifolds.

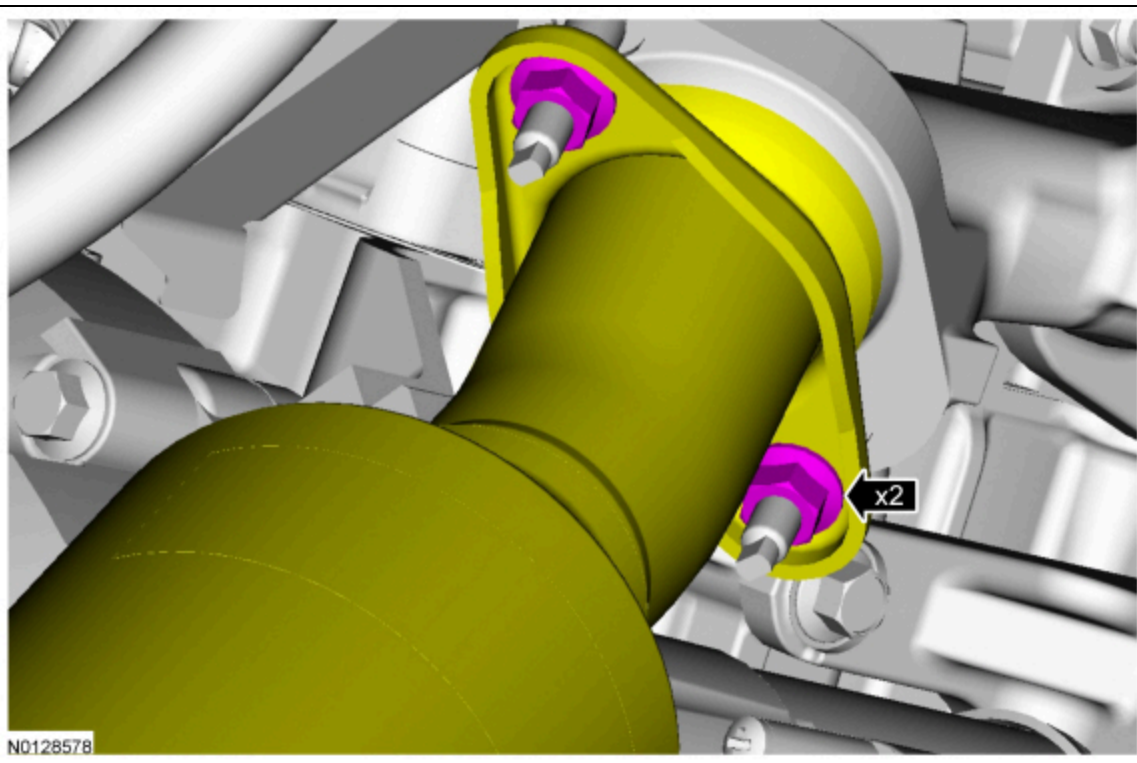


8. Remove the 4 lower RH exhaust manifold nuts.
9. Remove the 4 top RH exhaust manifold nuts.
  - Remove and discard the 4 top RH exhaust manifold studs.
10. Working from under the hood, remove the RH exhaust manifold and gasket.
  - Discard the gasket.
11. Clean and inspect the RH exhaust manifold. For additional information, refer to Section 303-00.
12. Remove and discard the 4 lower RH exhaust manifold studs.

13. **NOTICE:** Do not use metal scrapers, wire brushes, power abrasive discs or other abrasive means to clean the sealing surfaces. These tools cause scratches and gouges which make leak paths. Use a plastic scraper to clean the sealing surfaces.

Clean the exhaust manifold mating surface of the cylinder head with metal surface prep. Follow the directions on the packaging.

## Installation


1. Install 4 new lower RH exhaust manifold studs.
  - Tighten to 25 Nm (18 lb-ft).
2. Install a new gasket, the RH exhaust manifold and 4 new lower exhaust manifold nuts.
  - Do not tighten the nuts at this time.
3. Install 4 new upper RH exhaust manifold studs.
  - Tighten to 25 Nm (18 lb-ft).
4. Install 4 new upper RH exhaust manifold nuts.
  - Do not tighten the nuts at this time.
5. Tighten the nuts in the sequence shown in 2 stages.
  - Stage 1: Tighten to 24 Nm (18 lb-ft).
  - Stage 2: Tighten to 32 Nm (24 lb-ft).

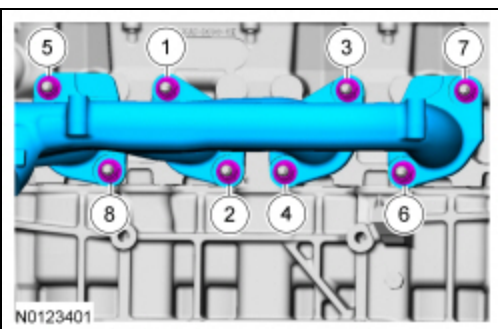


6. **NOTE:** Some replacement exhaust manifolds do not come with studs.

If necessary, install new studs.


- Tighten to 40 Nm (30 lb-ft)

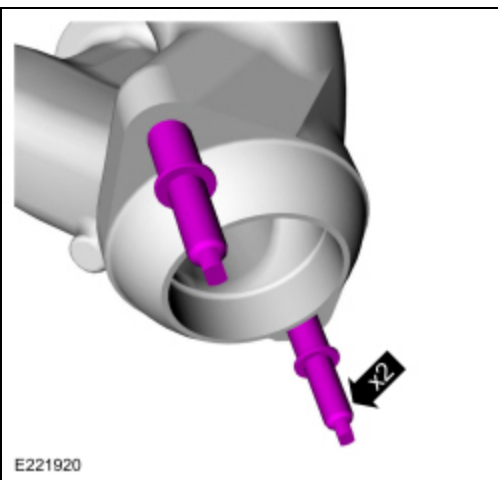

7. Position the exhaust Y-pipe dual catalytic converter onto the exhaust manifolds and loosely install 2 new RH catalytic converter-to-exhaust manifold nuts.

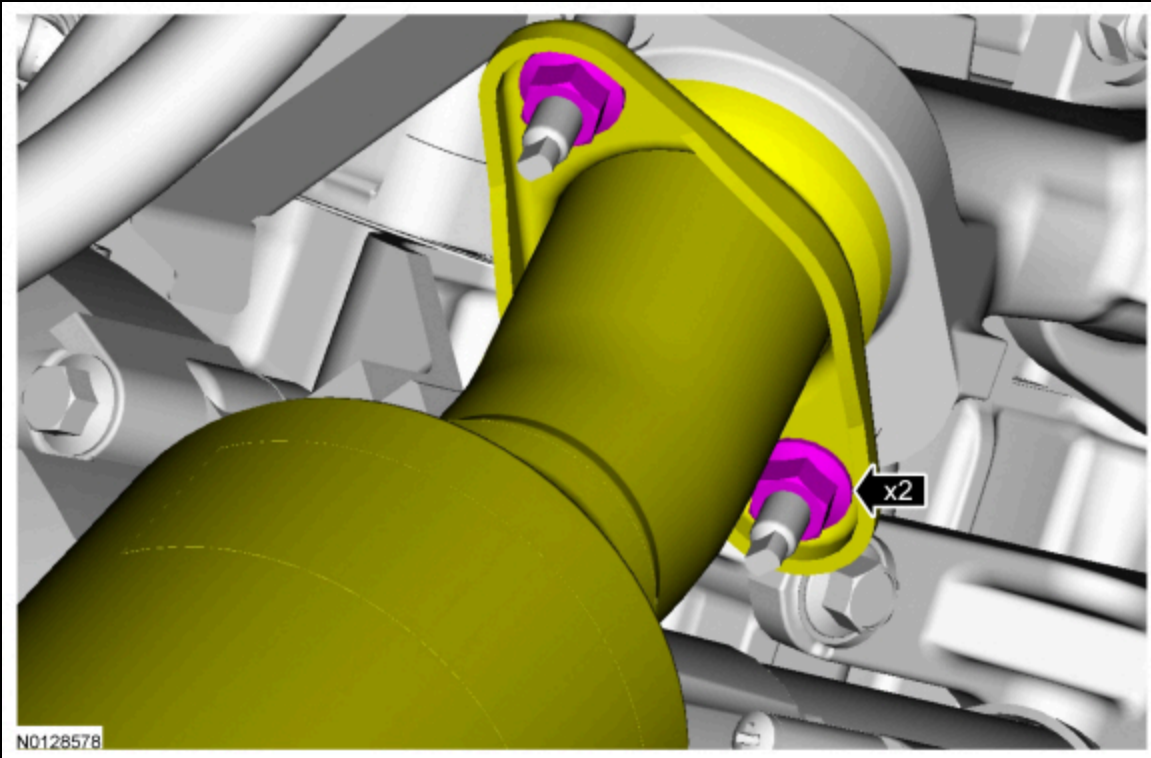


8. Loosely install 2 new LH catalytic converter-to-exhaust manifold nuts.

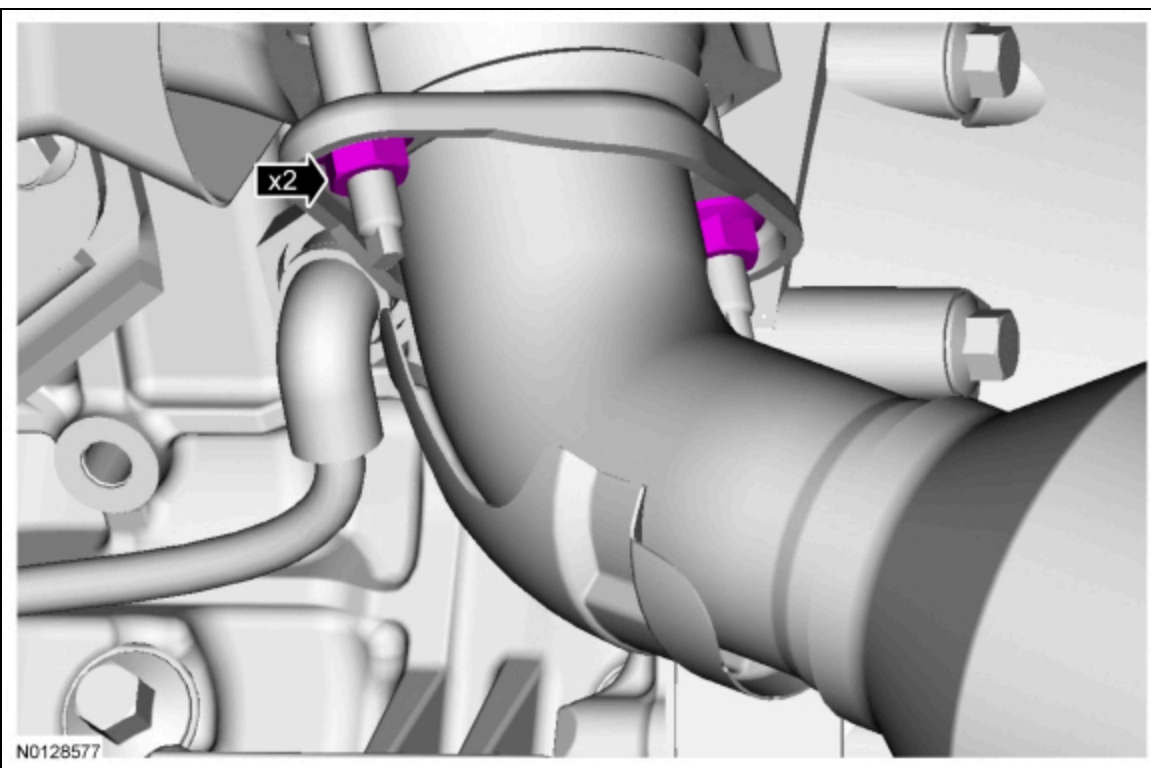


9. Tighten the 2 new RH catalytic converter-to-exhaust manifold nuts in the following sequence.


1. Tighten the RH lower catalytic converter-to-exhaust manifold nut to 40 Nm (30 lb-ft).
2. Tighten the RH upper catalytic converter-to-exhaust manifold nut to 40 Nm (30 lb-ft).

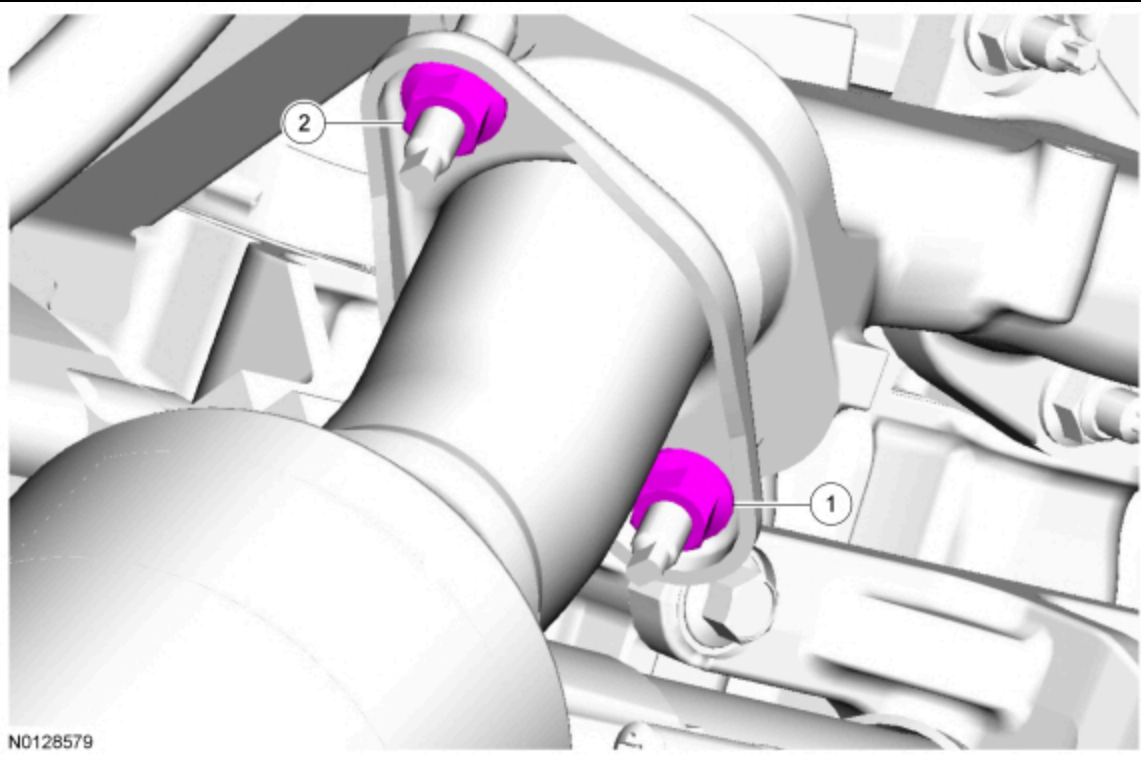

10. Tighten the 2 new LH catalytic converter-to-exhaust manifold nuts in the following sequence.
1. Tighten the LH outer catalytic converter-to-exhaust manifold nut to 40 Nm (30 lb-ft).
  2. Tighten the LH inner catalytic converter-to-exhaust manifold nut to 40 Nm (30 lb-ft).

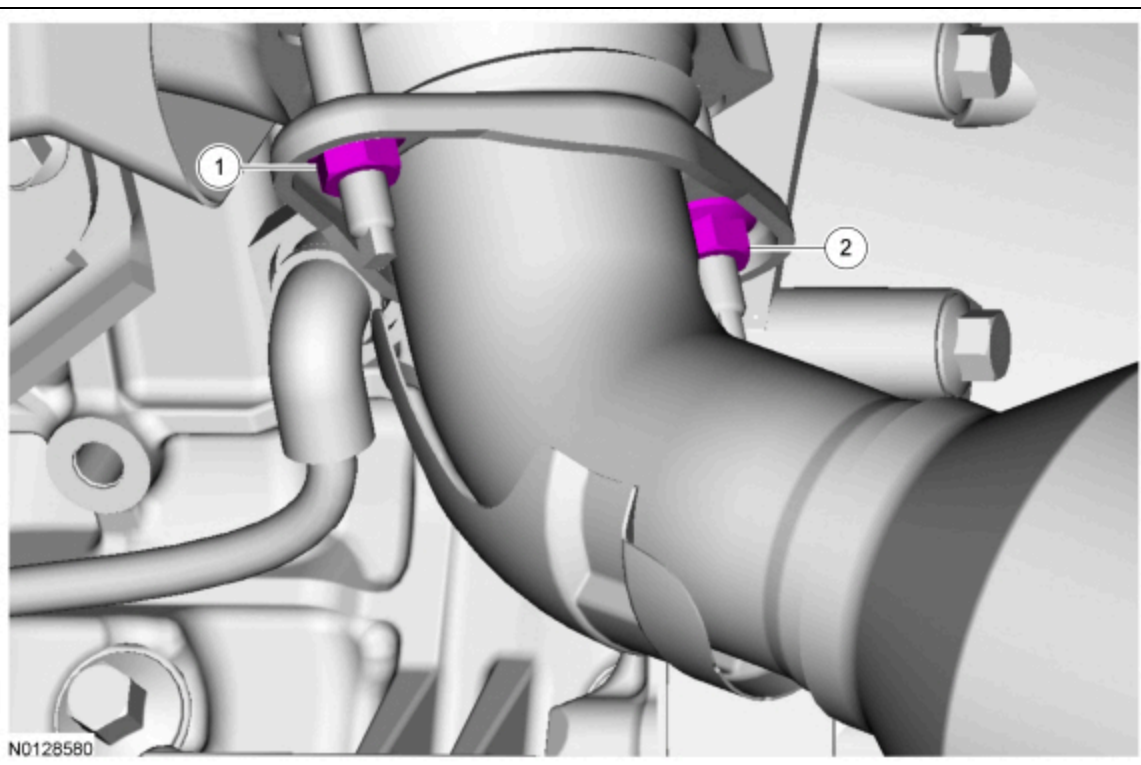

11. Position the exhaust Y-pipe dual catalytic converter-to-exhaust intermediate pipe and install the 2 new bolts.
1. Tighten the inner exhaust Y-pipe dual catalytic converter-to-exhaust intermediate pipe bolt to 63 Nm (46 lb-ft).
  2. Tighten the outer exhaust Y-pipe dual catalytic converter-to-exhaust intermediate pipe bolt to 63 Nm (46 lb-ft).

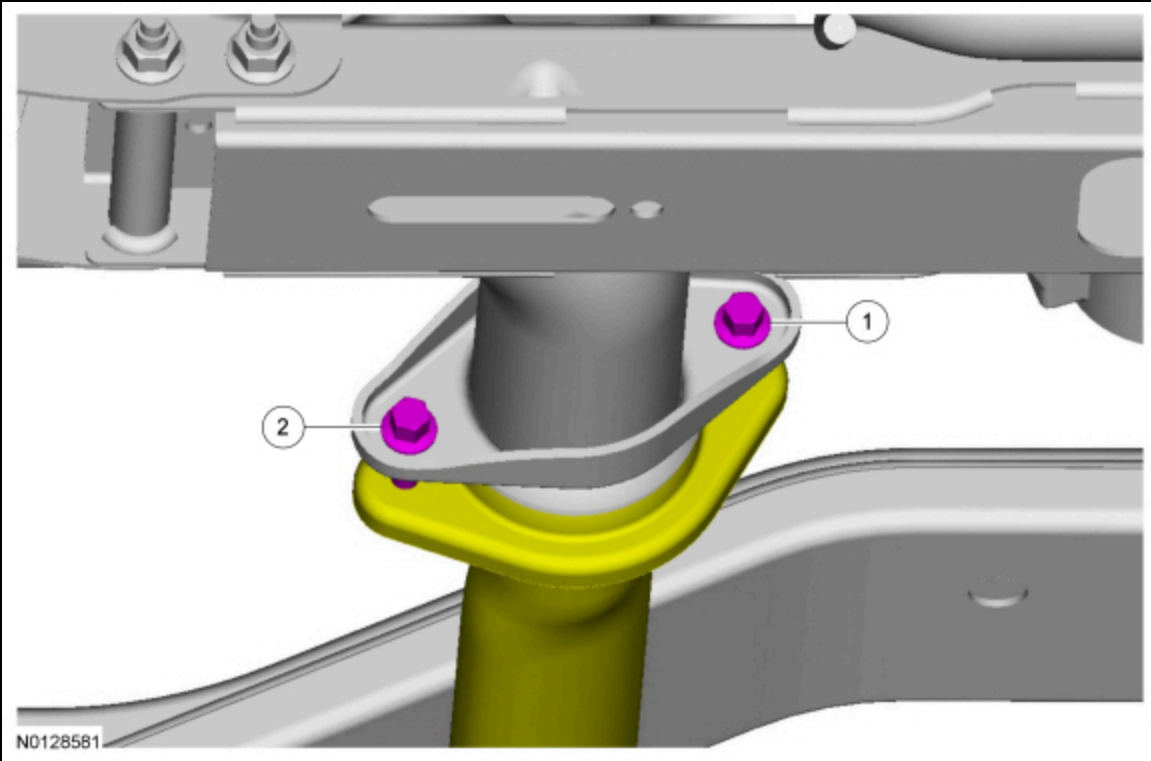

12. Install the RH exhaust manifold heat shield and the 3 bolts.
  - Tighten to 12 Nm (106 lb-in).
13. Connect the battery ground cable. For additional information, refer to Section 414-01.
14. Install the A/C compressor. For additional information, refer to Section 412-01.