


Oil Cooler

 [Ford Ecat Electronic Parts Catalog](#)


Removal

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Remove and discard the engine oil filter.
3. Using hose clamp pliers, clamp the 2 oil cooler coolant hoses.
 - Disconnect the 2 coolant hoses from the oil cooler.

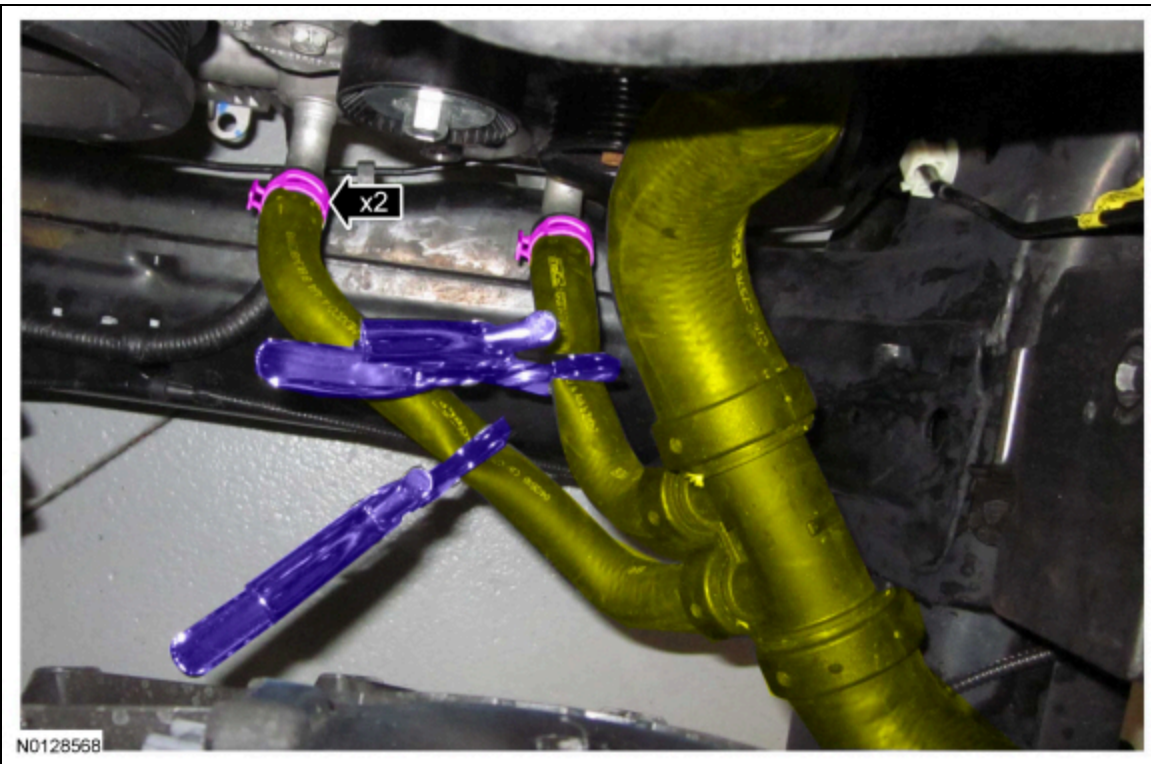


4. **NOTICE:** If metal or aluminum material is present in the oil cooler, mechanical concerns exist. Failure to correct these concerns may cause engine failure. To diagnose mechanical concerns, refer to Section 303-00.

Remove the oil cooler threaded insert and the oil cooler.

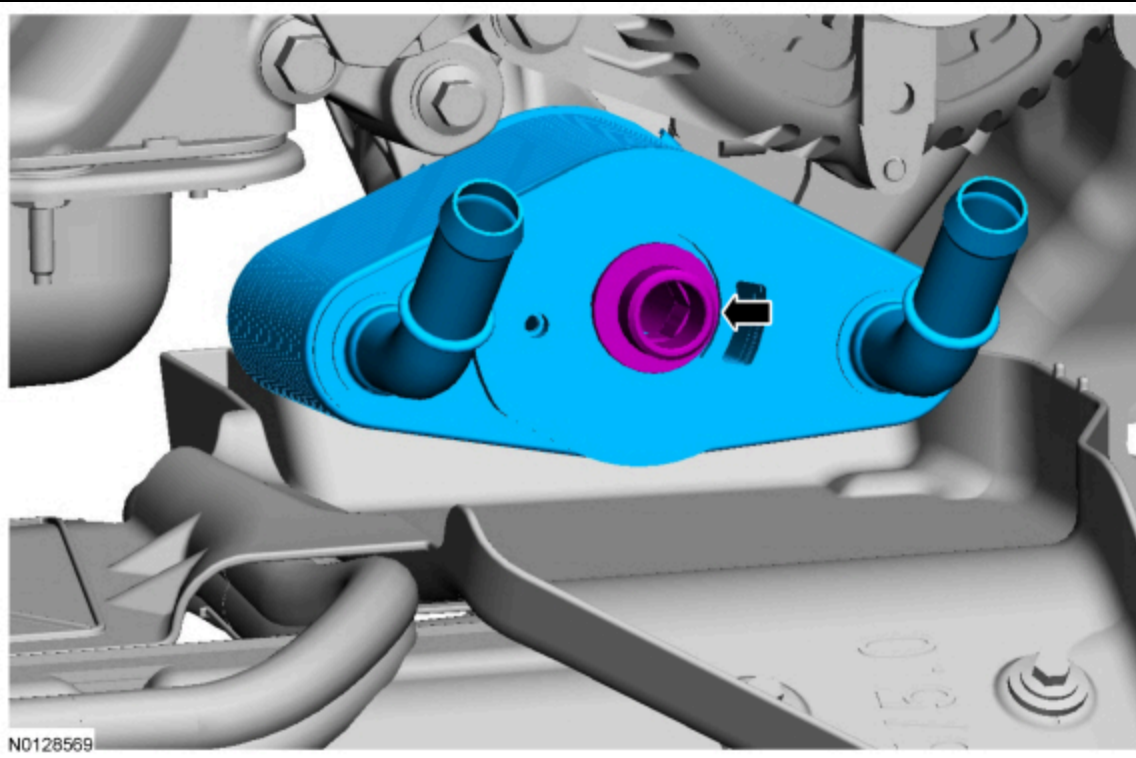


Installation

1. Install the oil cooler and threaded insert.
 - Tighten to 57 Nm (42 lb-ft).

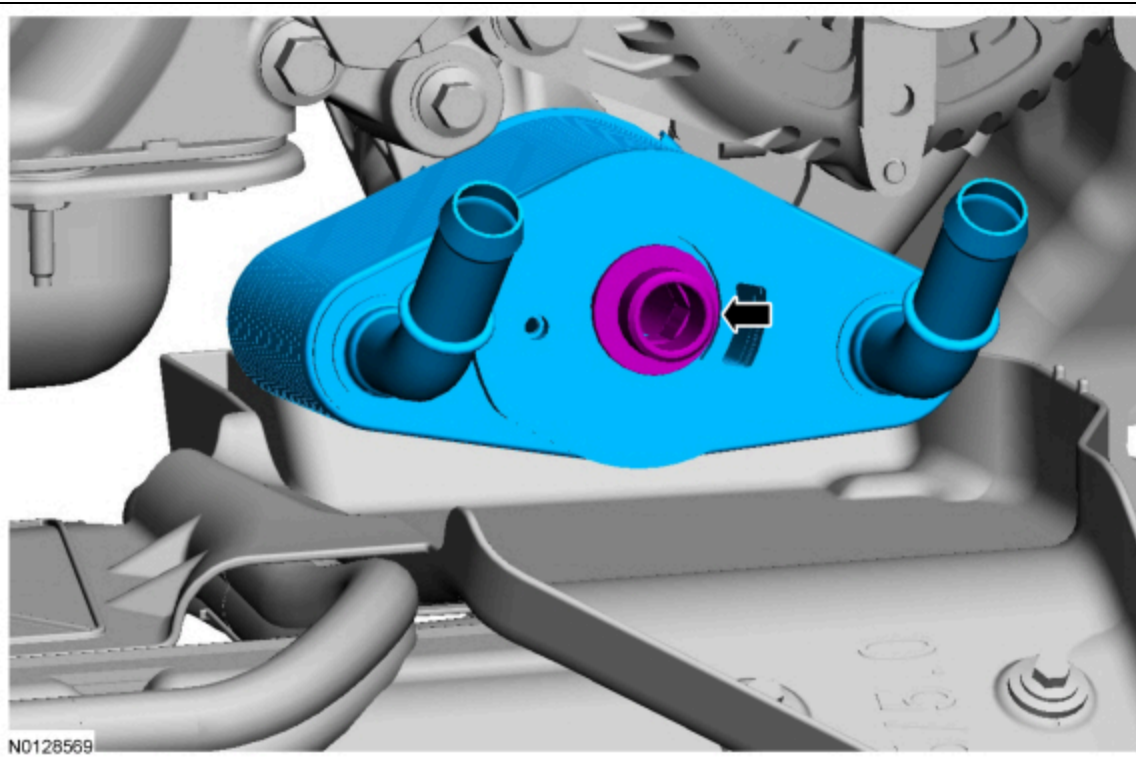

2. Connect the 2 coolant hoses.
 - Release the hose clamp pliers.

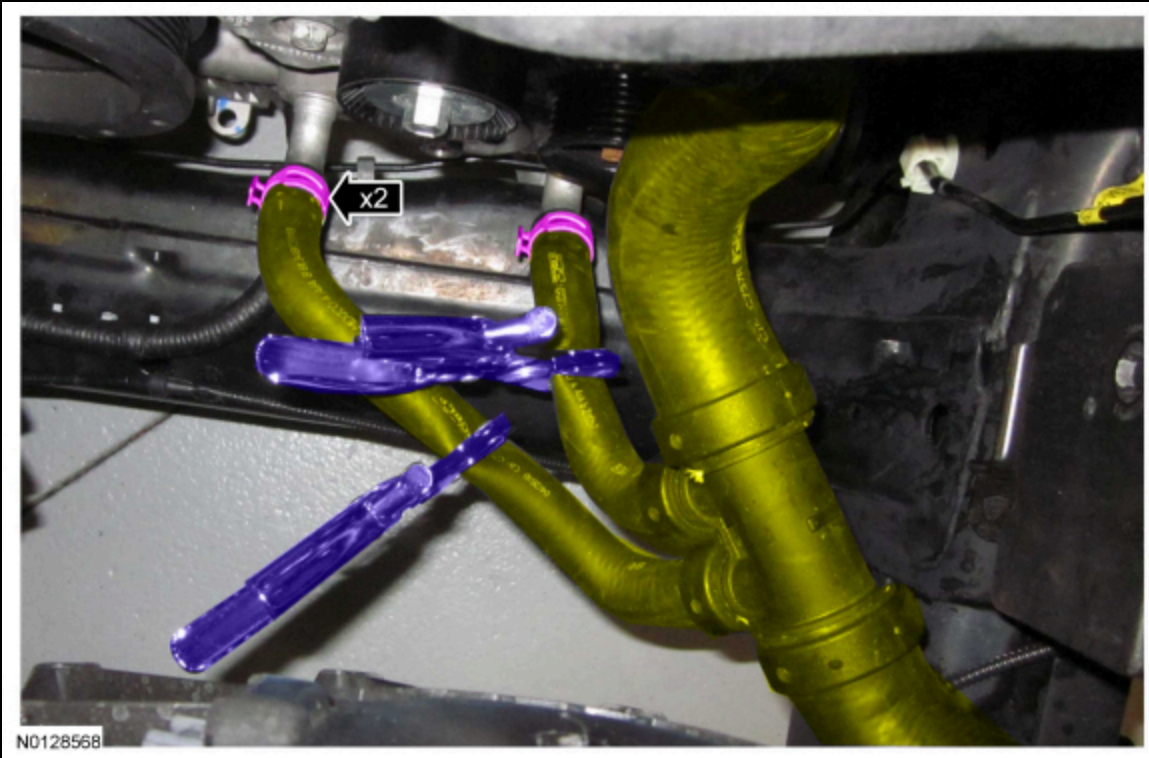

3. **NOTE:** *Do not lubricate the O-ring seal.*

Install a new oil filter.

- Tighten to 16 Nm (142 lb-in).