

Oil Filter Adapter

 [Ford Ecat Electronic Parts Catalog](#)


Removal

NOTICE: During engine repair procedures, cleanliness is extremely important. Any foreign material, including any material created while cleaning gasket surfaces, that enters the oil passages, coolant passages or the oil pan, can cause engine failure.


NOTICE: The engine front cover-to-oil filter adapter bolt must be removed and the engine front cover-to-oil filter adapter jackscrew loosened before removing the oil filter adapter

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Remove the generator. For additional information, refer to Section 414-00.
3. Remove and discard the engine oil filter.
4. **NOTICE:** If metal or aluminum material is present in the oil cooler, mechanical concerns exist. Failure to correct these concerns may cause engine failure. To diagnose mechanical concerns, refer to Section 303-00.


Remove the oil cooler threaded insert and position the oil cooler and hoses aside.

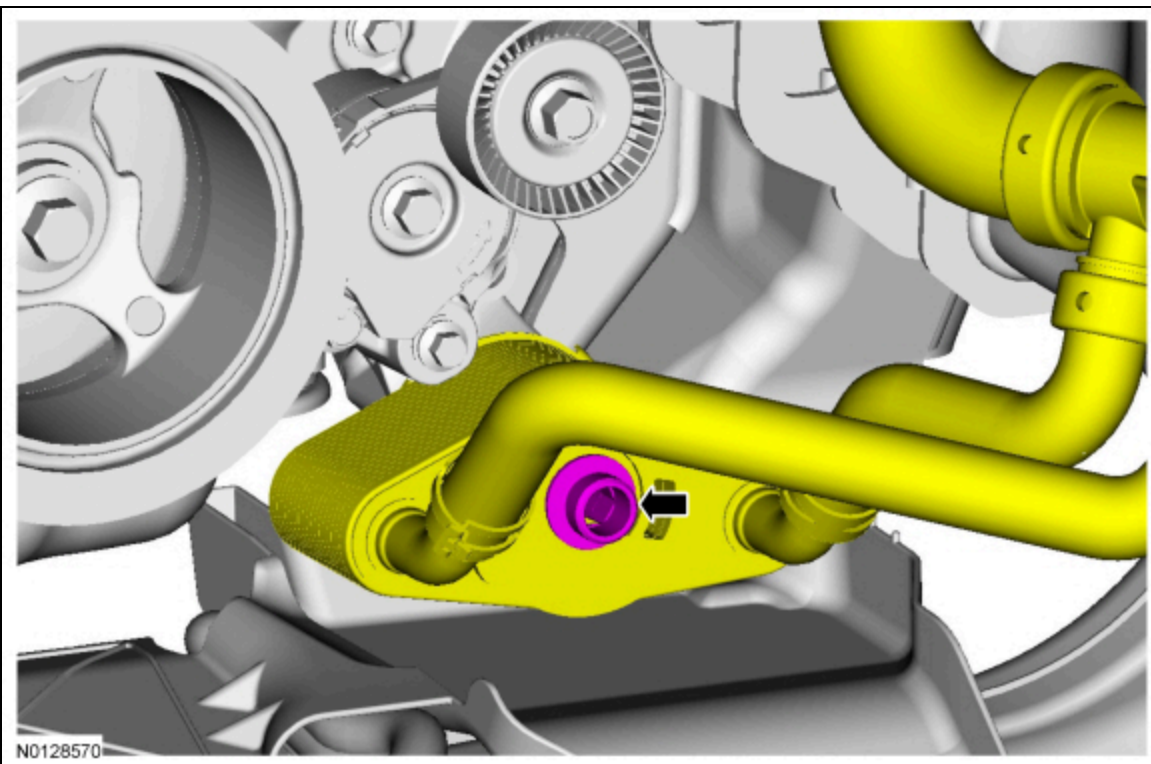


5. Remove the engine front cover-to-oil filter adapter bolt.

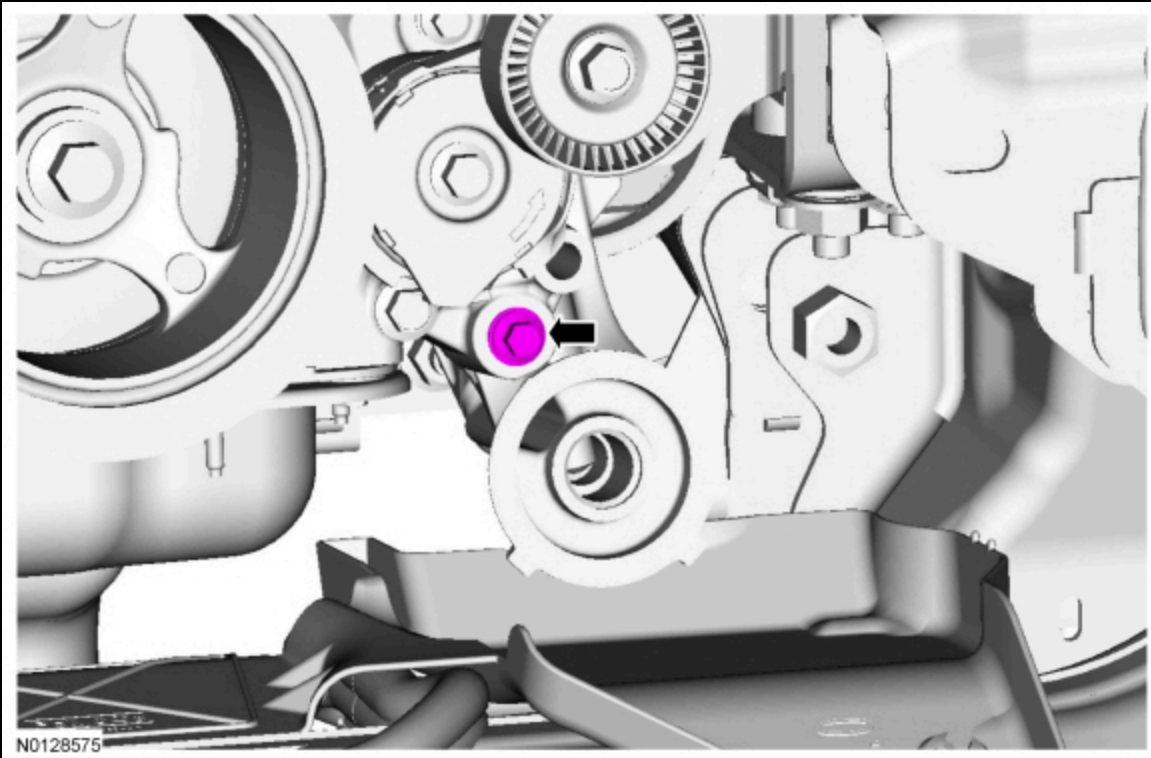

6. Using a 10 mm (0.393 in) Hex Bit loosen the engine front cover-to-oil filter adapter jack screw.

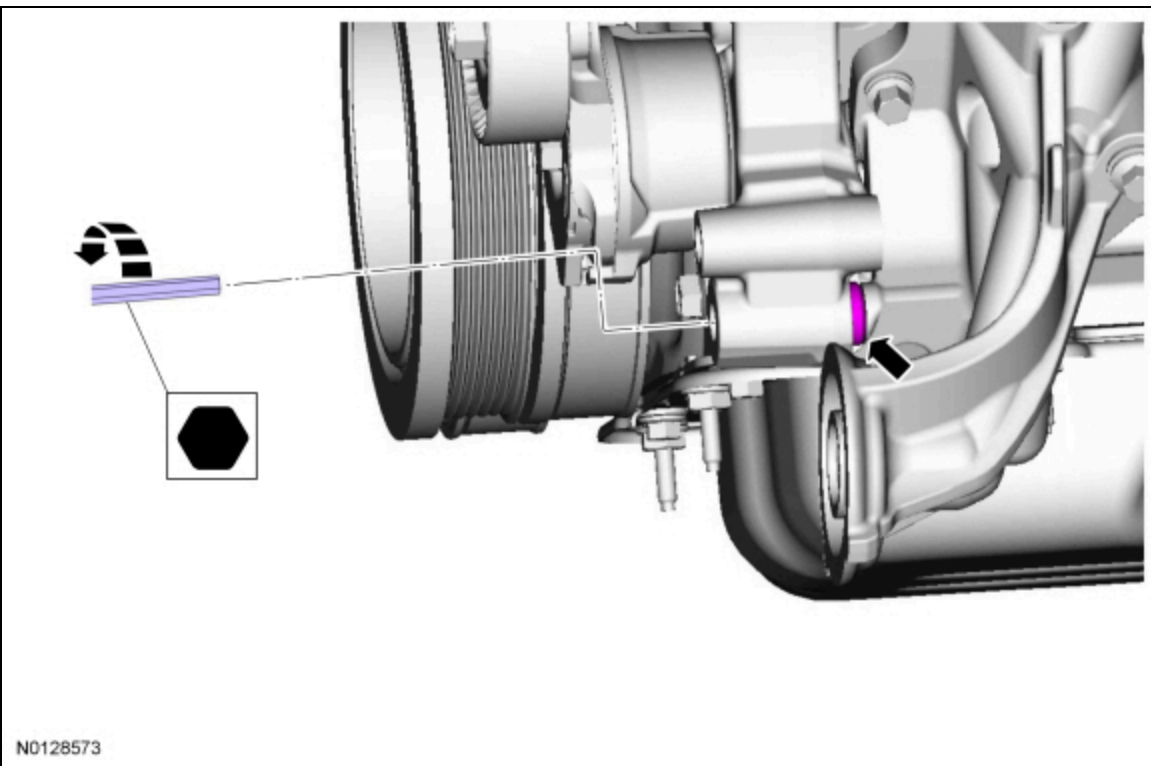


7. Disconnect the engine oil pressure switch electrical connector.

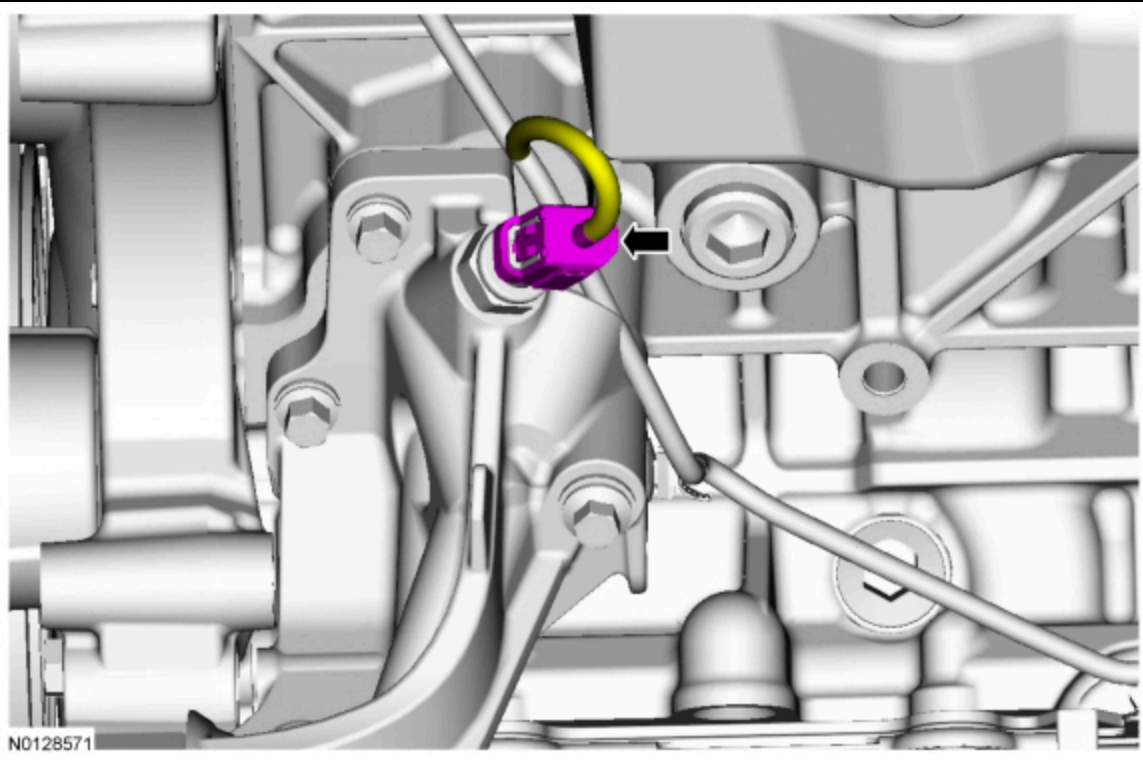

8. **NOTE:** *On 4x4 vehicles, the rear bolt must be removed with the oil filter adapter.*

Remove the 3 oil filter adapter bolts .

- Position the oil filter adapter aside and detach the wiring harness retainer.
- Remove the oil filter adapter and discard the gasket.

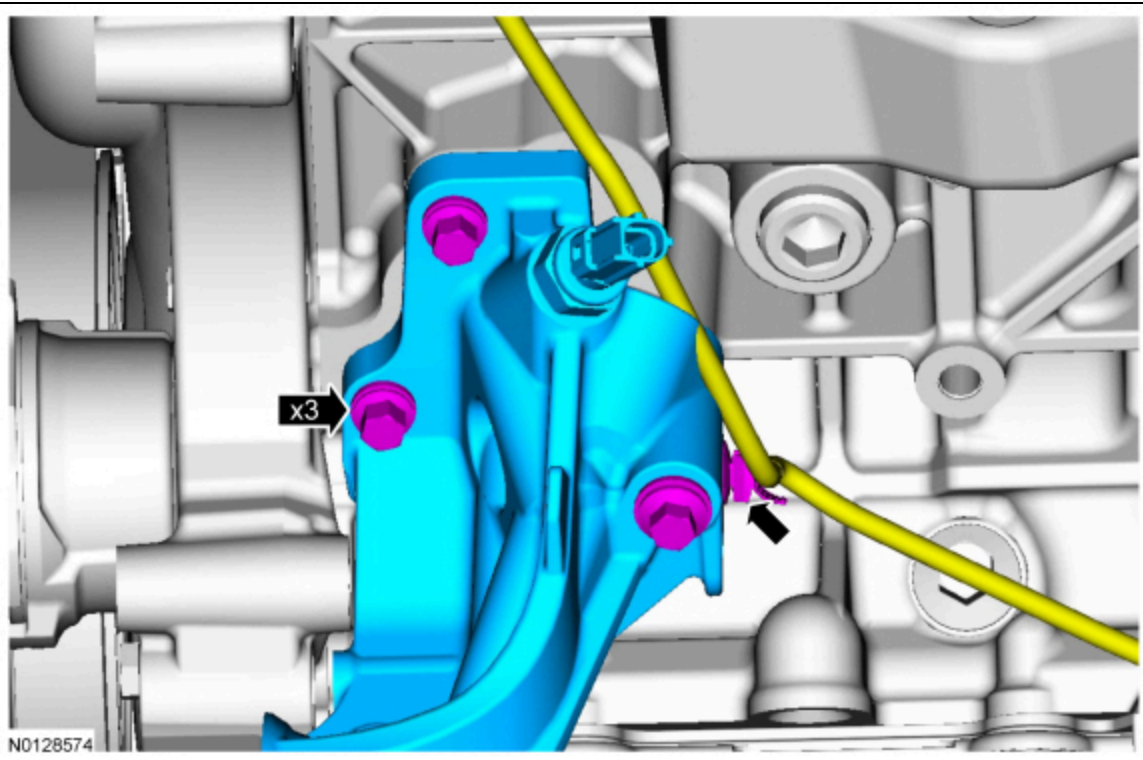


Installation

1. **NOTE:** *Install a new oil filter adapter gasket.*


NOTE: *On 4x4 vehicles, the rear bolt must be positioned with the oil filter adapter.*

Using a new gasket, position the oil filter adapter and attach the wiring harness retainer.


- Install the 3 bolts and tighten to 20 Nm (177 lb-in) plus an additional 60 degrees.

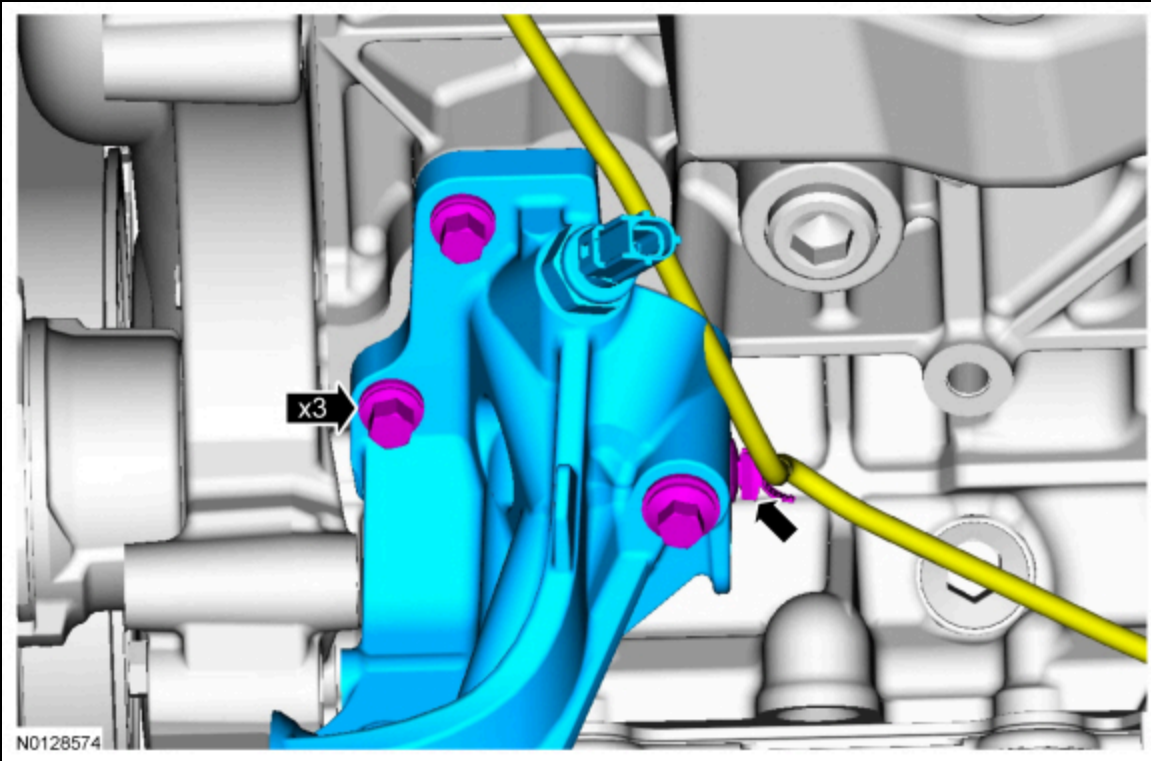


2. Connect the engine oil pressure switch electrical connector.

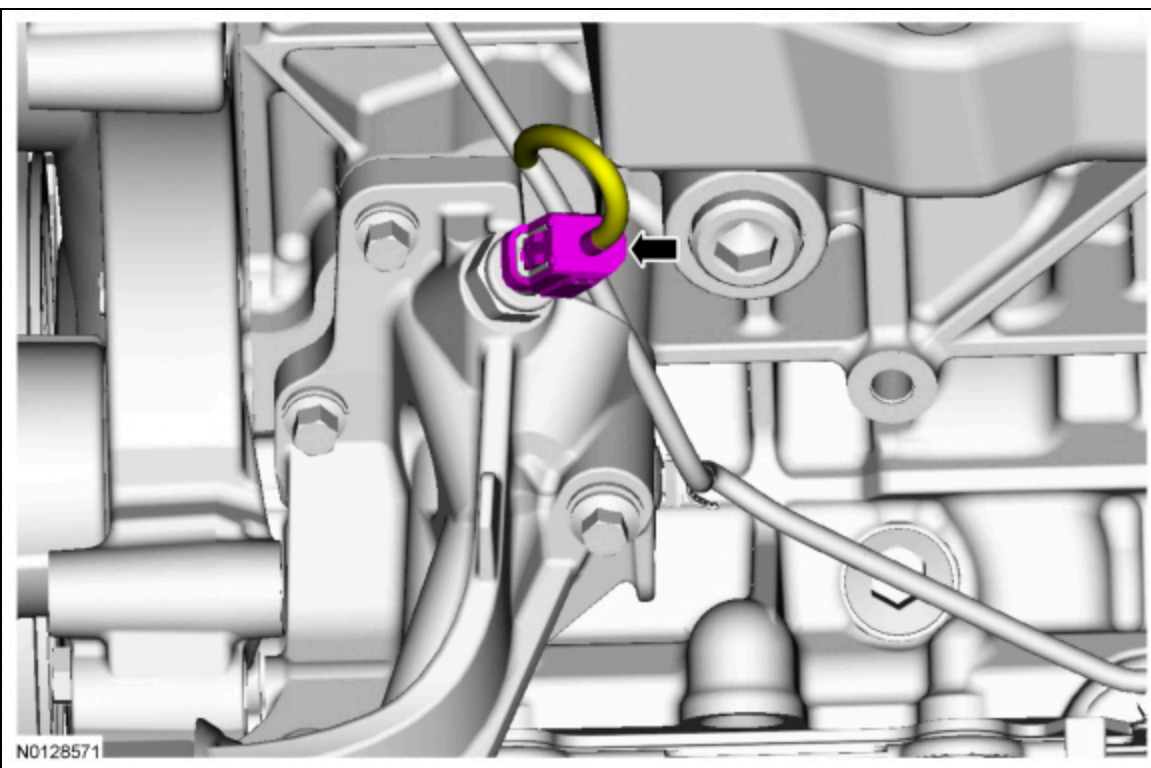

3. Using a 10 mm Hex Bit, rotate the engine front cover jackscrew into contact with the oil filter adapter to 5 Nm (44 lb-in).

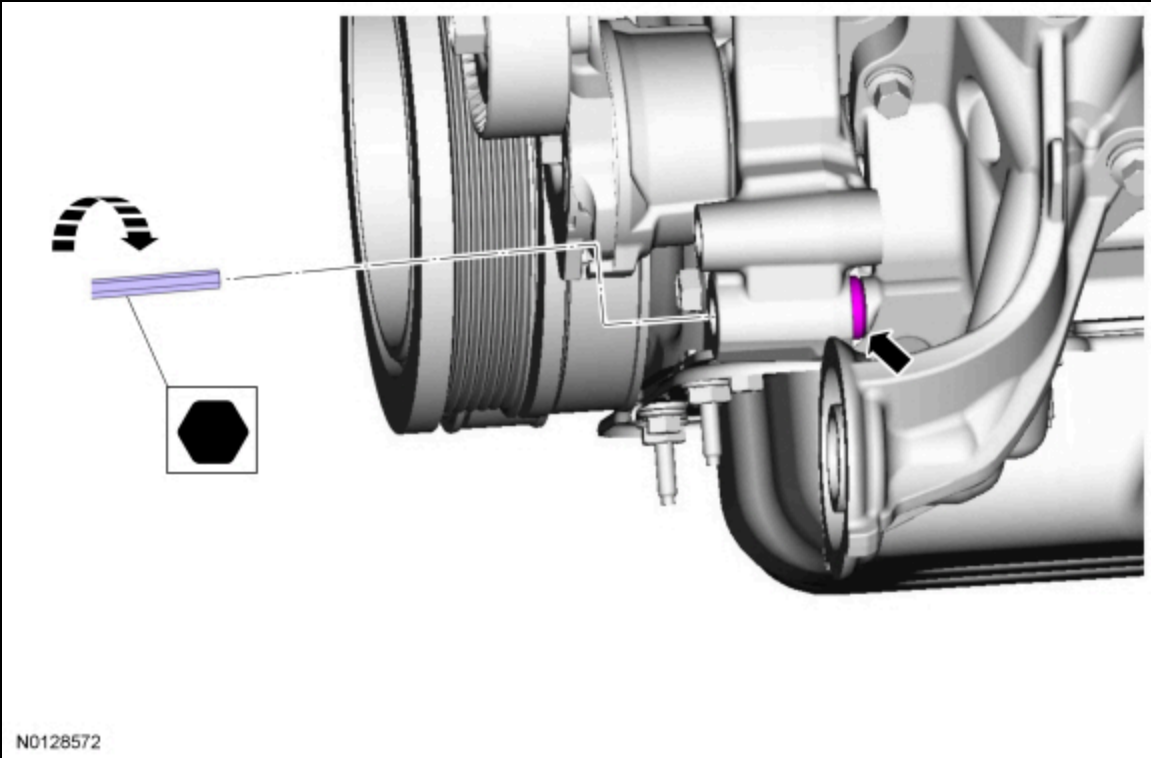


4. Tighten the engine front cover-to-oil filter adapter bolt to 25 Nm (18 lb-ft) plus an additional 60 degrees.

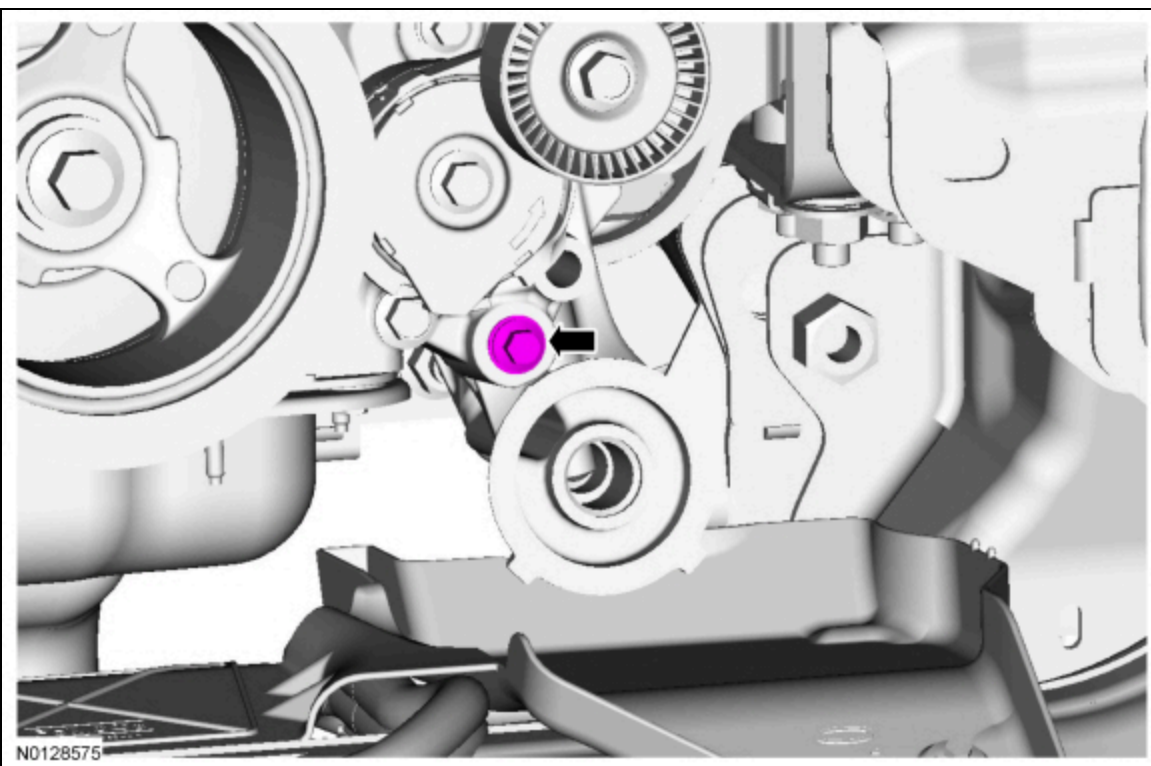

5. NOTICE: If metal or aluminum material is present in the oil cooler, mechanical concerns exist. Failure to correct these concerns may cause engine failure. To diagnose mechanical concerns, refer to Section 303-00.

Position the oil cooler and hoses and install the oil cooler threaded insert.

- Tighten to 57 Nm (42 lb-ft).

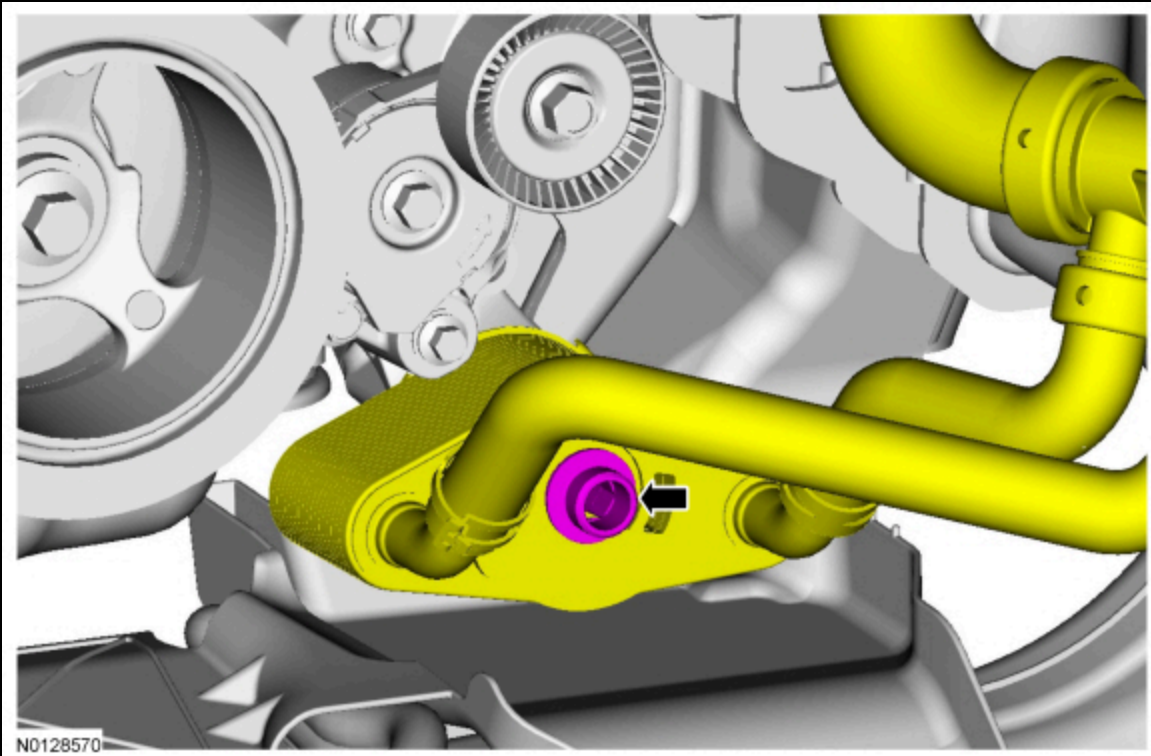

6. **NOTE:** *Do not lubricate the O-ring seal.*

Install a new oil filter.

- Tighten to 16 Nm (142 lb-in).

7. Install the generator. For additional information, refer to Section 414-00.