


Valve Cover — LH


 [Ford Ecat Electronic Parts Catalog](#)

Special Tool(s)

 ST1326-A	Handle 205-153 (T80T-4000-W)
 ST2212-A	Installer, Differential Bearing Cone 205-142 (T80T-4000-J)
 ST2983-A	Installer, Spark Plug Tube Seal 303-1247/2
 ST2982-A	Remover, Spark Plug Tube Seal 303-1247/1

Material

Item	Specification
Motorcraft® Metal Surface Prep Wipes ZC-31-B	—
Motorcraft® Silicone Gasket Remover ZC-30-A	—
Motorcraft® Silicone Gasket and Sealant TA-30	WSE-M4G323-A4

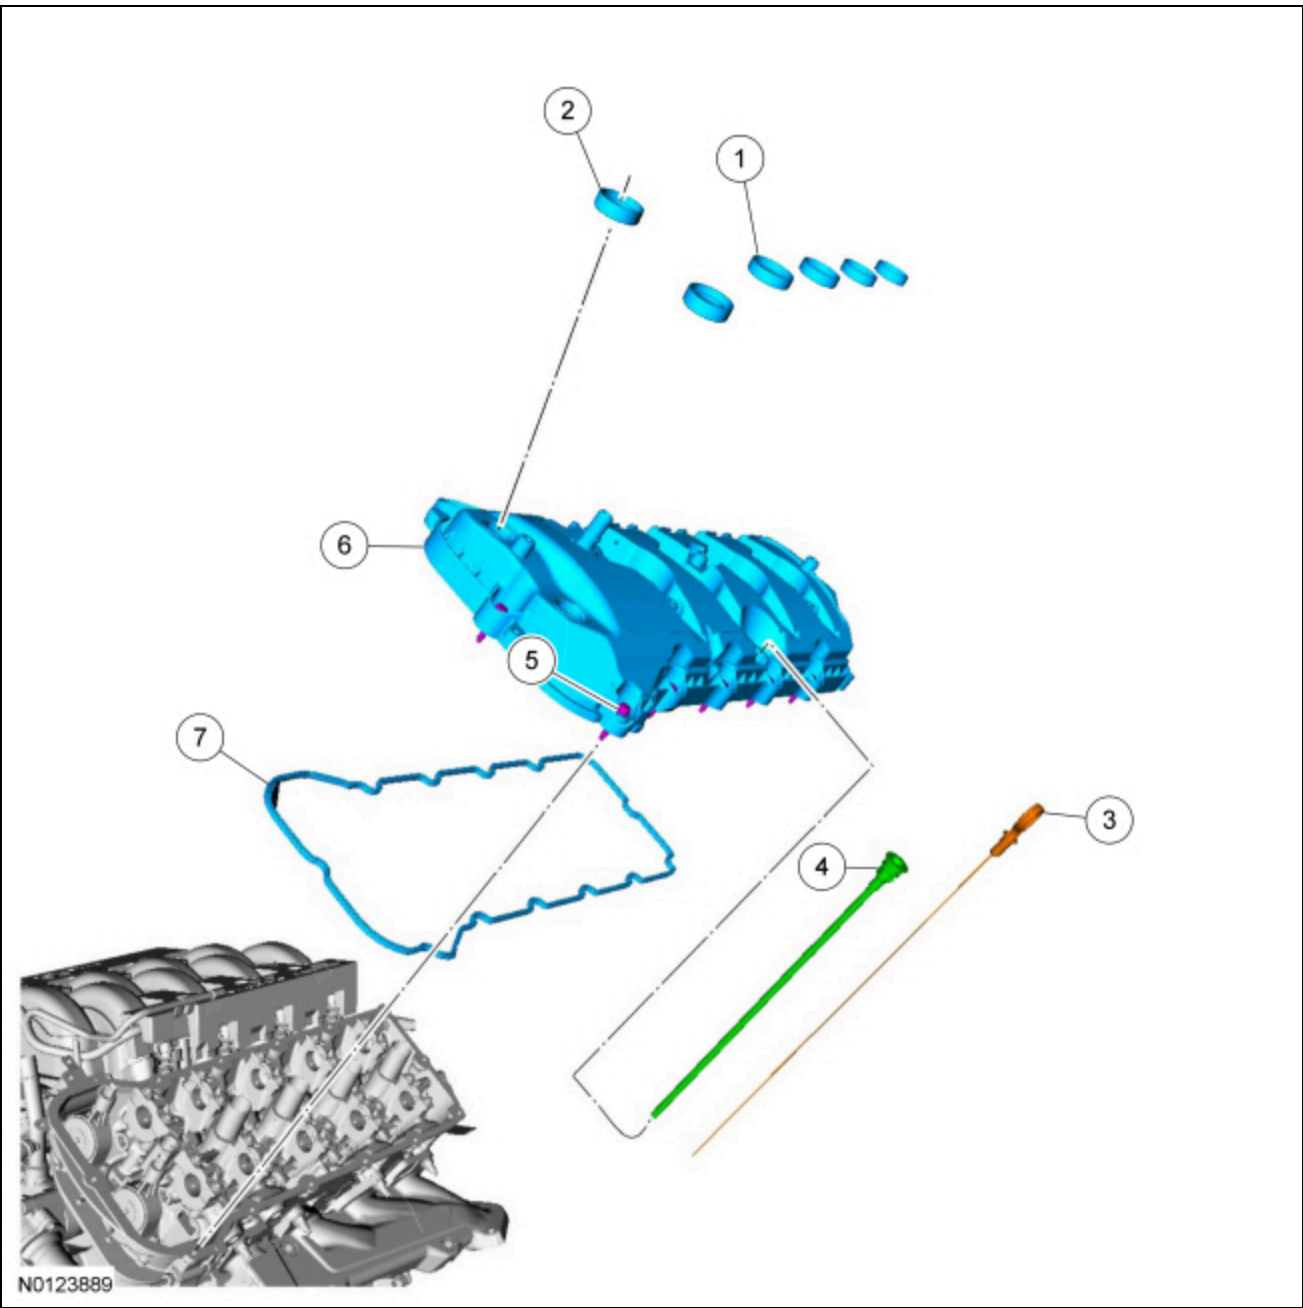


Item	Part Number	Description
1	6C535 6C535	Spark plug tube seal (4 required)
2	6C535 6C535	Variable Camshaft Timing (VCT) solenoid seal (2 required)
3	6750 6750	Oil level indicator
4	6754 6754	Oil level indicator tube
5	6C519 6C519	Valve cover bolt (part of 6582) (14 required)
6	6582 6582	LH valve cover
7	6584 6584	LH valve cover gasket

Removal


NOTICE: During engine repair procedures, cleanliness is extremely important. Any foreign material, including any material created while cleaning gasket surfaces, that enters the oil passages, coolant passages or the oil pan, can cause engine failure.

1. Remove the Air Cleaner (ACL) outlet pipe and the ACL cover as an assembly. For additional information, refer to Section 303-12.

2. Remove the crankcase ventilation tube. For additional information, refer to the quick connect coupling procedure in Section 310-00.

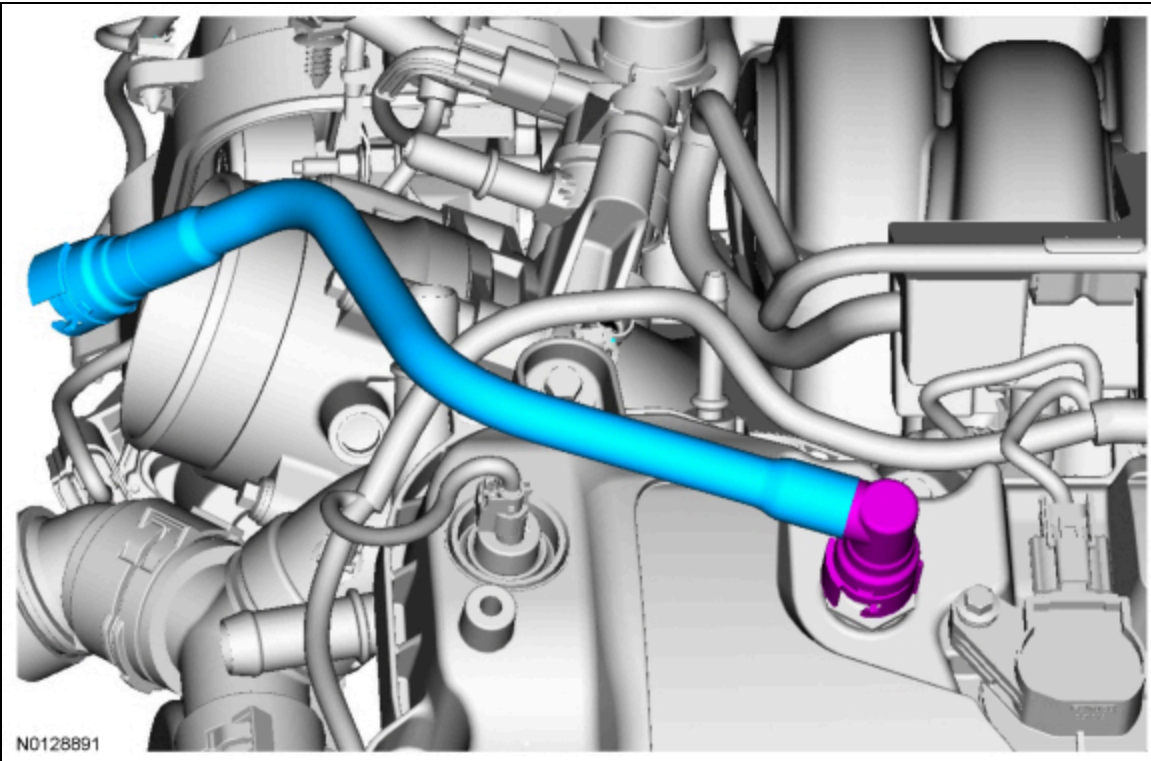

3. Remove the LH ignition coils. For additional information, refer to Section 303-07C.
4. Disconnect the 2 LH Variable Camshaft Timing (VCT) variable force solenoid electrical connectors.
- Detach the 10 wiring harness retainers.

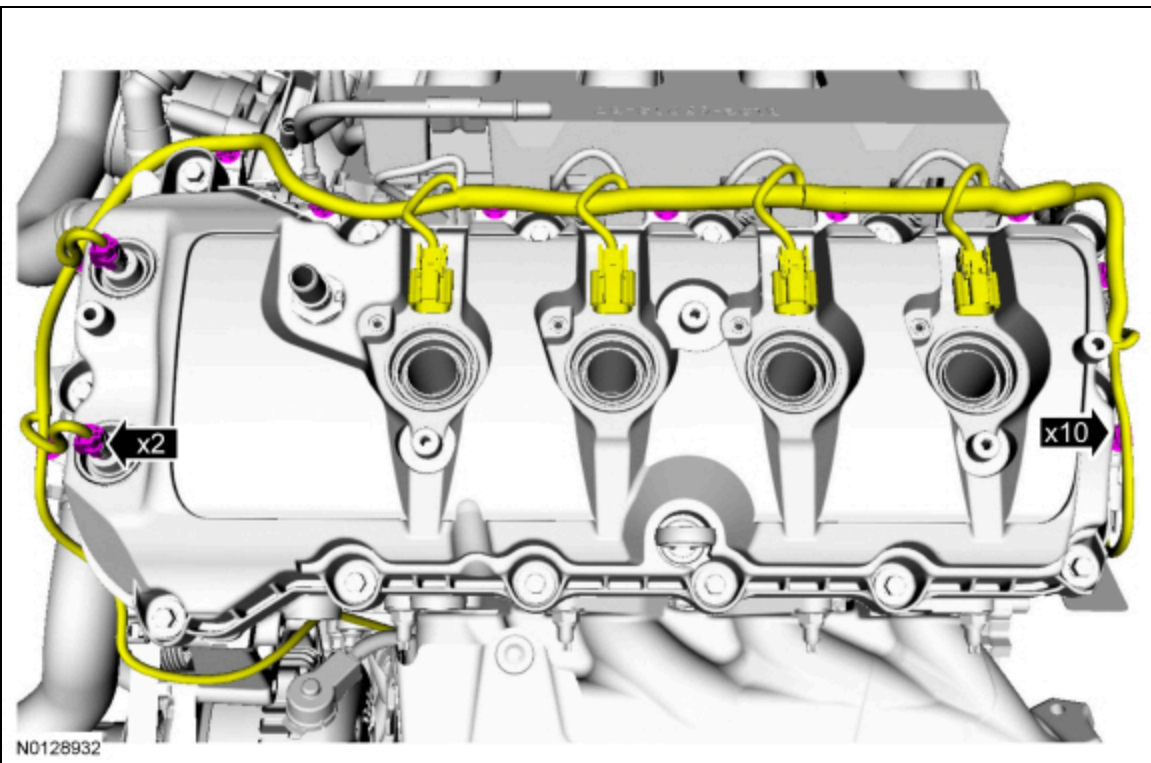


5. Remove the oil level indicator.
6. **NOTICE:** Do not use metal scrapers, wire brushes, power abrasive discs or other abrasive means to clean the sealing surfaces. These tools cause scratches and gouges which make leak paths. Use a plastic scraping tool to remove all traces of old sealant.

Loosen the 14 bolts and remove the LH valve cover and gasket.


- Clean the valve cover mating surface of the cylinder head with silicone gasket remover and metal surface prep. Follow the directions on the packaging.
- Discard the valve cover gasket. Clean the valve cover gasket groove with soap and water or a suitable solvent.

7. Depress the 4 tabs and remove the oil level indicator tube.

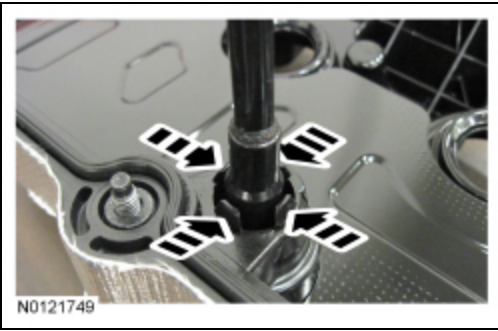


8. Inspect the 2 Y.C.T variable force solenoid seals. Remove any damaged seals.

- Using the Differential Bearing Cone Installer and Handle, remove the seal(s).

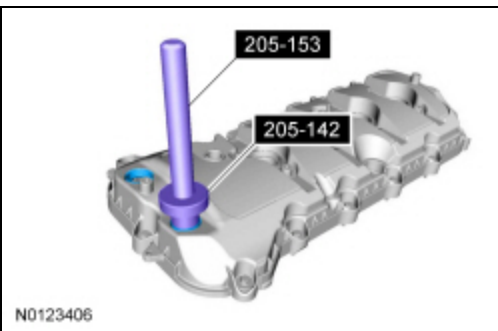

9. Inspect the spark plug tube seals. Remove any damaged seals.


- Using the Y.C.T Spark Plug Tube Seal Remover and Handle, remove the seal(s).

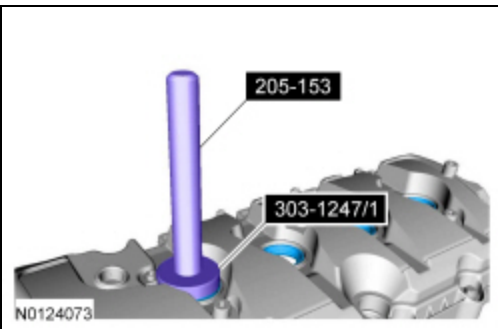

Installation


1. **NOTE:** *Installation of new seals is only required if damaged seals were removed.*

Using the Y.C.T Spark Plug Tube Seal Installer and Handle, install new spark plug tube seals.

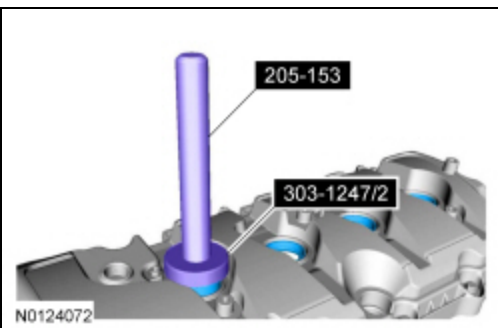


2. **NOTE:** *Installation of new seals is only required if damaged seals were removed.*

Using the Differential Bearing Cone Installer and Handle, install new $\sqrt{CT}$ variable force solenoid seal(s).

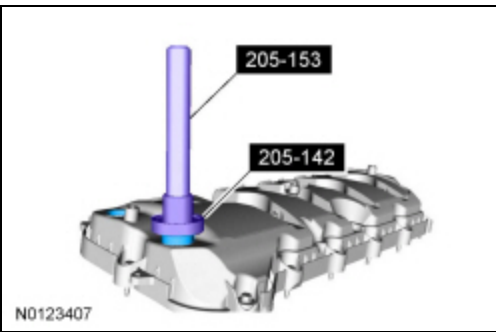


3. **NOTE:** *If the valve cover is not installed and the fasteners tightened within 5 minutes, the sealant must be removed and the sealing area cleaned. To clean the sealing area, use silicone gasket remover and metal surface prep. Failure to follow this procedure can cause future oil leakage.*


Apply an 8 mm (0.31 in) bead of silicone gasket and sealant to the engine front cover-to-LH cylinder head joints.

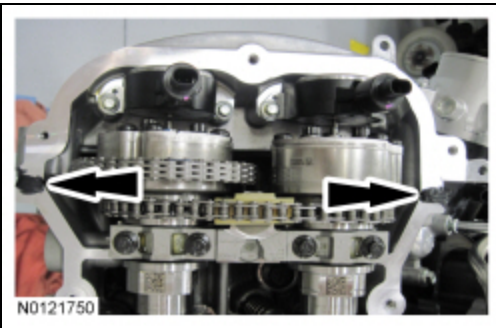

4. Position the LH valve cover and new gasket on the cylinder head.
- Tighten the bolts in the sequence shown to 10 Nm (89 lb-in).

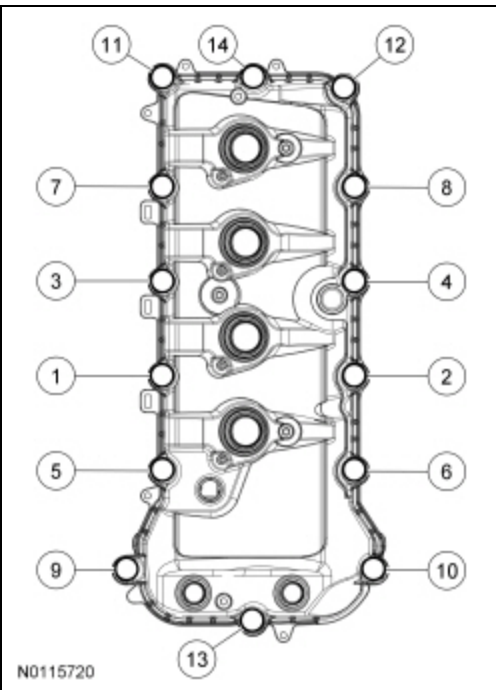


5. Install the oil level indicator tube.
- Push the oil level indicator tube into the valve cover until it clicks into place.
6. Install the oil level indicator.
7. Connect the 2 LH $\sqrt{CT}$ variable force solenoid electrical connectors.
- Attach the 10 wiring harness retainers.

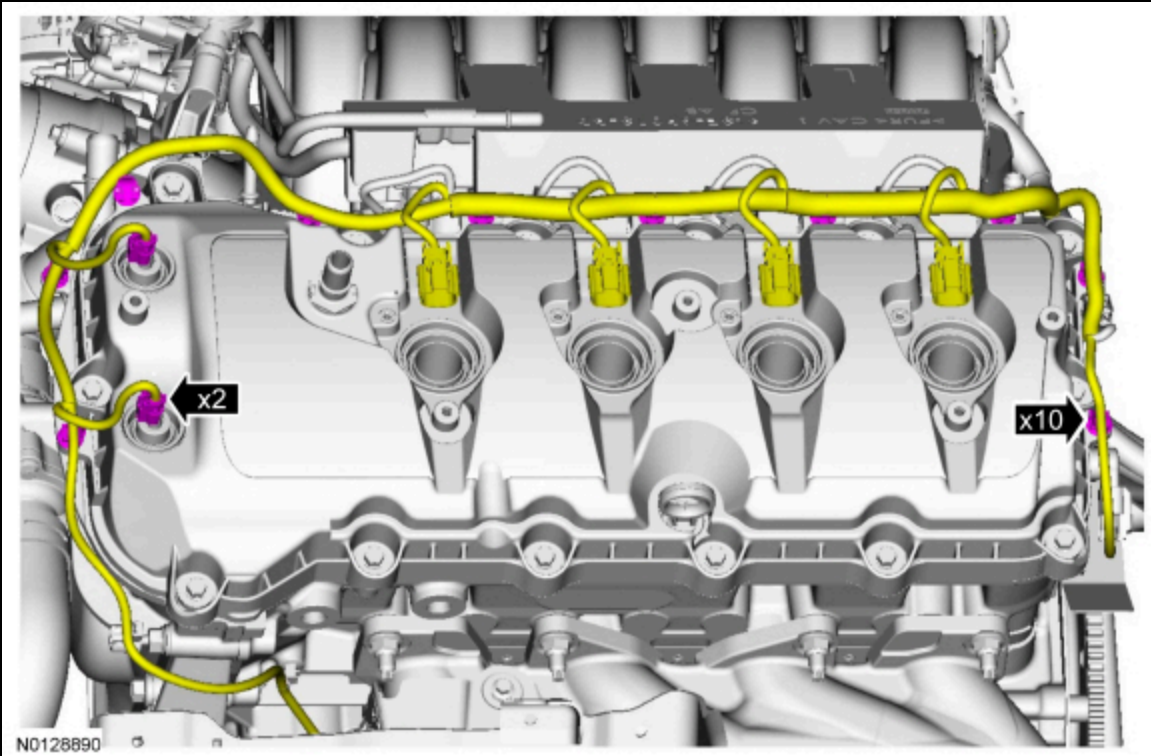

8. Install the LH ignition coils. For additional information, refer to Section 303-07C.

9. Install the crankcase ventilation tube. For additional information, refer to the quick connect coupling procedure in Section 310-00.

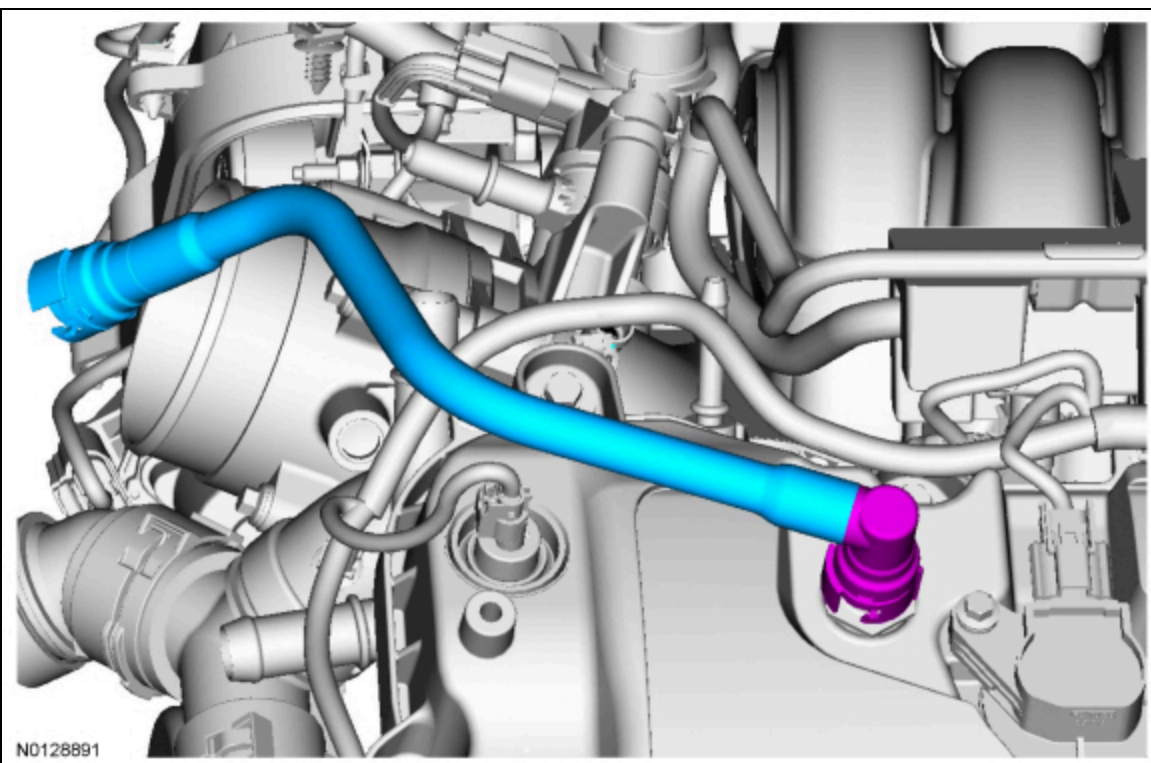

10. Install the Air Cleaner (ACL) outlet pipe and ACL cover assembly. For additional information, refer to Section 303-12.