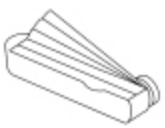


Piston Ring End Gap


 [Ford Ecat Electronic Parts Catalog](#)

Special Tool(s)

 ST1271-A	Feeler Gauge Set 303-D027 (D81L-4201-A) or equivalent
--	--

- NOTICE:** Use care when fitting piston rings to avoid possible damage to the piston ring or the cylinder bore.
- NOTE:** *Piston rings should not be transferred from one piston to another.*
- NOTE:** *Refer to the appropriate Section 303-01 for the specification.*
- NOTE:** *The cylinder bore must be within specification for taper and out-of-round.*

1. Use a piston without rings to push a piston ring in a cylinder to the bottom of ring travel.

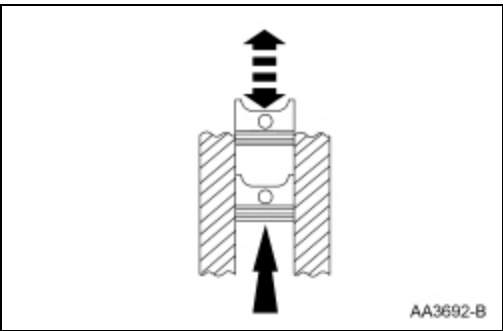

2. Use the Feeler Gauge Set to measure the top piston ring end gap and the second piston ring end gap.

