


Piston



Material

Item	Specification
Motorcraft® SAE 5W-20 Synthetic Blend Motor Oil (US); Motorcraft® SAE 5W-20 Super Premium Motor Oil (Canada) XO-5W20-QSP (US); CXO-5W20-LSP12 (Canada)	WSS-M2C945-A

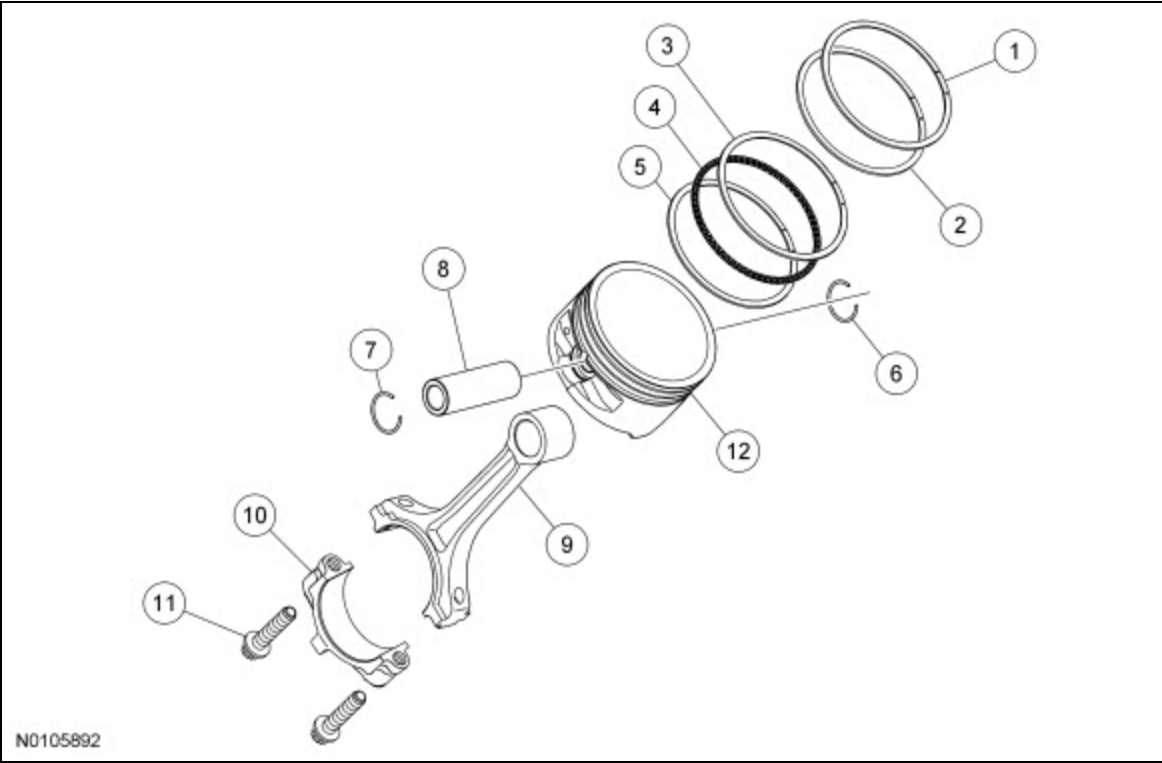


Item	Part Number	Description
1	61506150	Piston compression upper ring
2	61526152	Piston compression lower ring
3	61596159	Piston oil control upper segment ring
4	61616161	Piston oil control spacer
5	61596159	Piston oil control lower segment ring
6	61406140	Piston pin retainer
7	61406140	Piston pin retainer
8	61356135	Piston pin
9	62006200	Connecting rod
10	—	Connecting rod bearing cap (part of 6200)
11	64146414	Connecting rod bearing cap bolt (2 required)

12	61106110	Piston
----	----------	--------

Disassembly

WARNING: Since the retainer ring has a tendency to spring out, cover the end of the pin bore with a hand or shop rag when removing the ring. Wear eye protection. Failure to follow these instructions may result in serious personal injury.

1. Remove the piston rings from the piston.
 - Discard the piston rings.
2. Mark the piston and connecting rod on the same side for assembly reference.

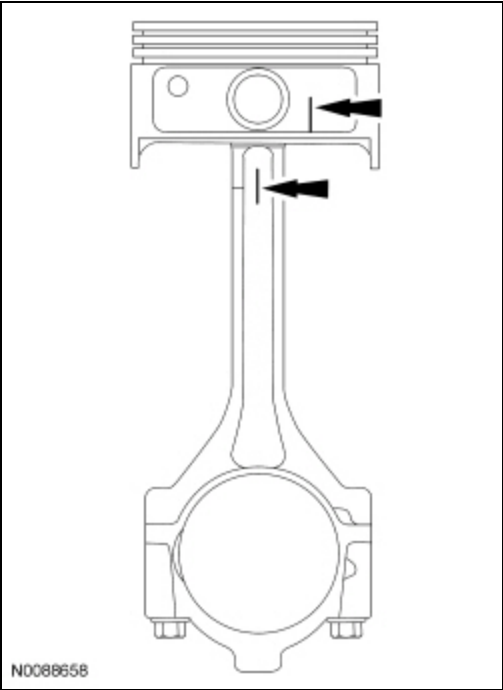


3. Remove the 2 piston pin retainers and the piston pin.
4. Separate the piston from the connecting rod.
5. Clean and inspect the piston and connecting rod. For additional information, refer to Section 303-00.

Assembly

1. **NOTE:** The connecting rod must be installed into the piston with the marks made during disassembly on the same side. If a new piston or connecting rod is being installed, it can be installed in either direction.

Position the connecting rod in the piston.

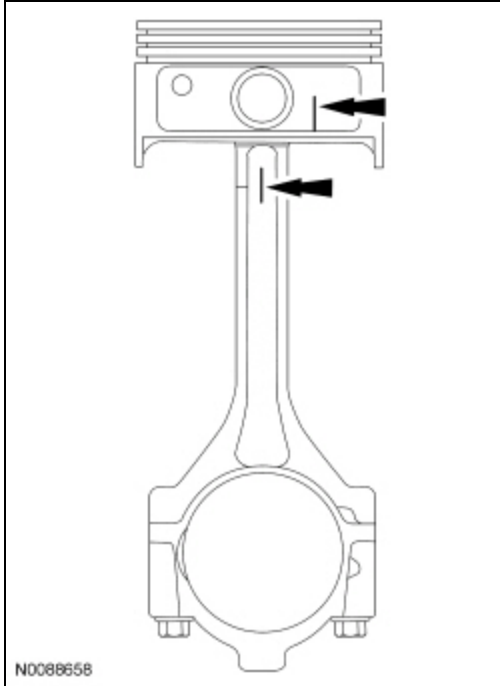

2. Lubricate the piston pin and pin bore with clean engine oil.
3. Install the piston pin in the piston and connecting rod assembly.
4. Install the 2 piston pin retaining clips in the piston.
5. Lubricate the piston and the new piston rings with clean engine oil.
6. Install the piston rings onto the piston.