

Exhaust Manifold — RH


 [Ford Ecat Electronic Parts Catalog](#)

Special Tool(s)

 ST2176-B	Support Bar, Engine 303-F070 or equivalent
 ST3110-A	Support Brackets, Engine 303-1507 or equivalent

Material

Item	Specification
Motorcraft® Metal Surface Prep Wipes ZC-31-B	—
Motorcraft® Threadlock 262 TA-26	WSK-M2G351-A6

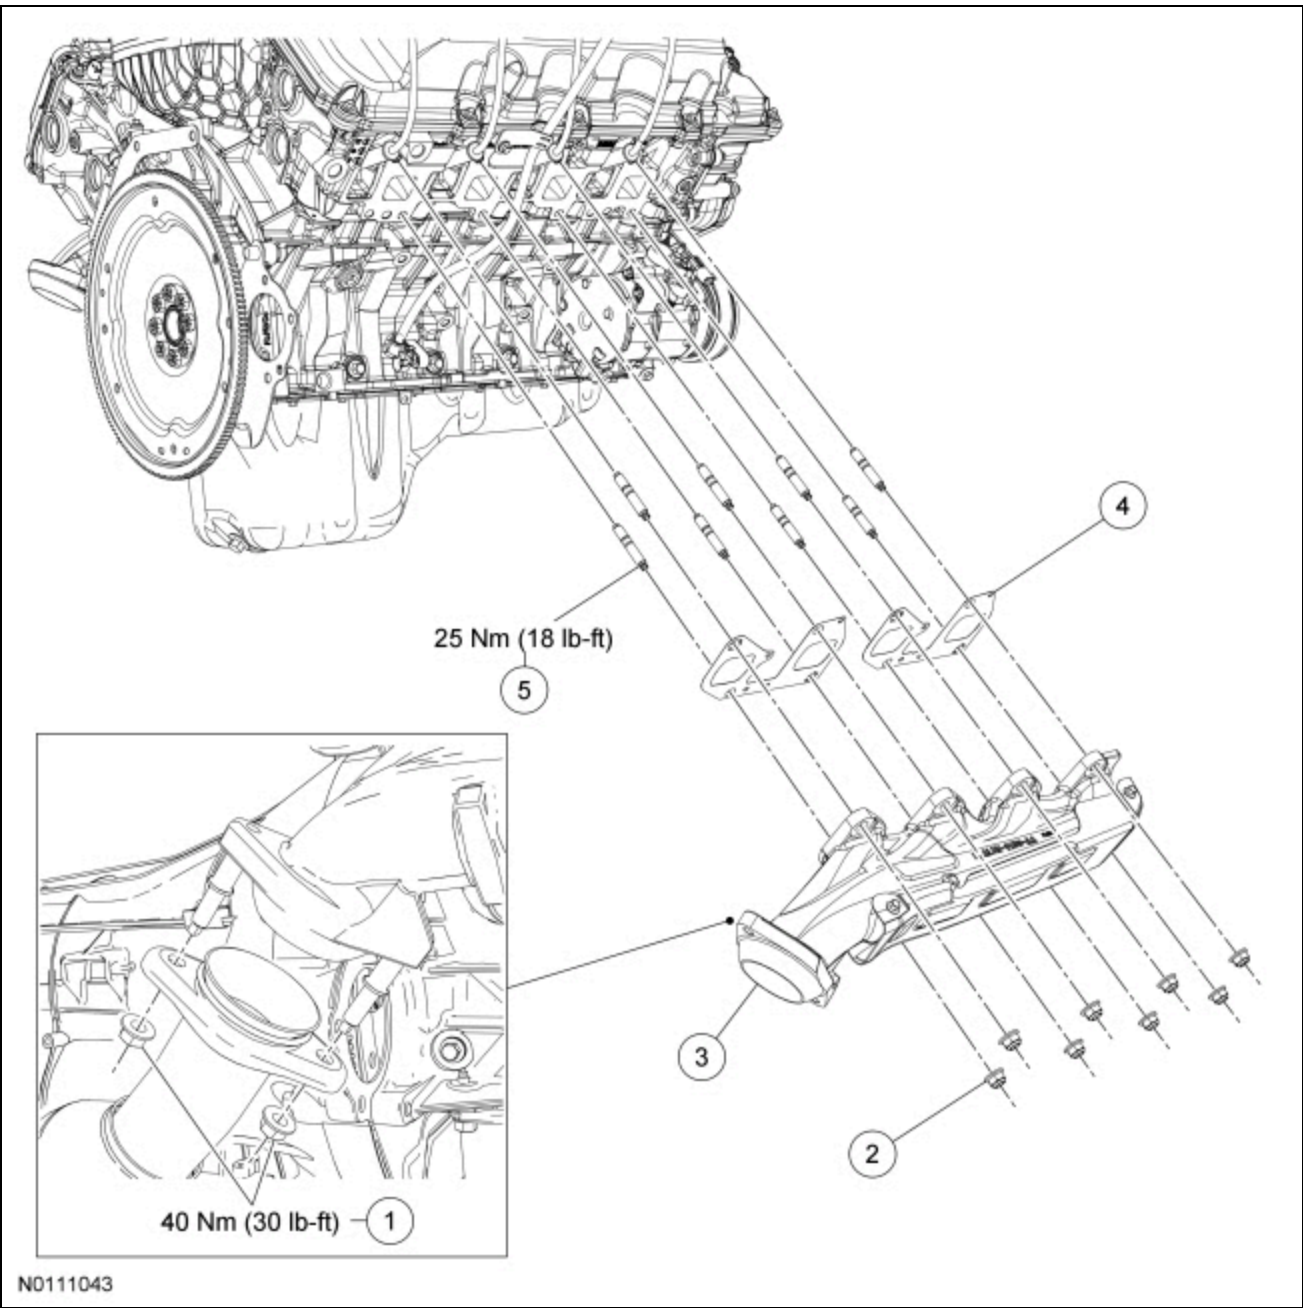


Item	Part Number	Description
1	W705443 W705443	Exhaust Y-pipe flange nuts (2 required)
2	W701706 W701706	Exhaust manifold nut (8 required)
3	9430 9430	Exhaust manifold
4	9Y431 9Y431	Exhaust manifold gasket (2 required)
5	W707747 W707747	Exhaust manifold stud (8 required)


Removal

All vehicles

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Remove the intake manifold. For additional information, refer to Intake Manifold in this section.
3. Remove the RH inner fenderwell. For additional information, refer to Section 501-02.
4. Install the Engine Support Bar and the Engine Support Bracket.

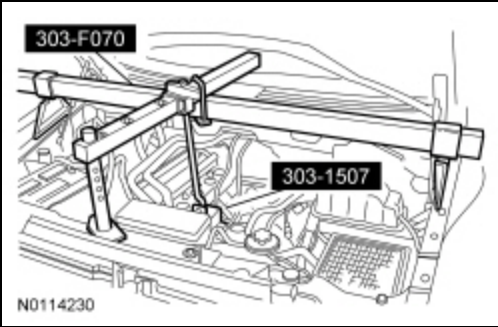


5. Remove the starter. For additional information, refer to Section 303-06.
6. Remove the 4 exhaust manifold-to-catalytic converter nuts (2 LH and 2 RH).

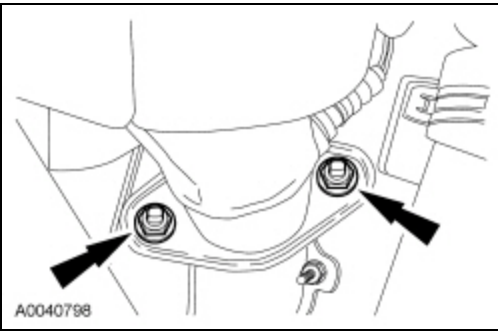

7. **NOTICE:** Only use hand tools when removing the transmission mount-to-crossmember nuts or damage to the transmission mount can occur.


Loosen the 2 transmission mount-to-crossmember nuts.

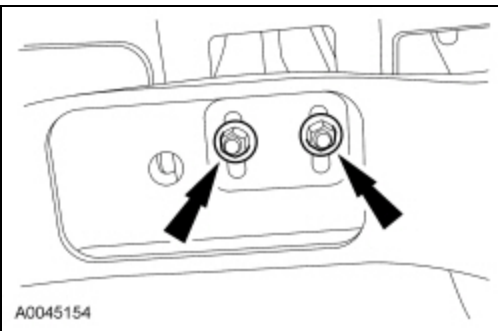

8. **NOTICE:** Only use hand tools when removing the engine support insulator nuts or the engine support insulator may be damaged.

NOTE: If during nut removal the stud bolt is extracted from the engine support insulator, separate the nut from the stud bolt prior to stud bolt installation.

Remove the 2 RH engine support insulator nuts.

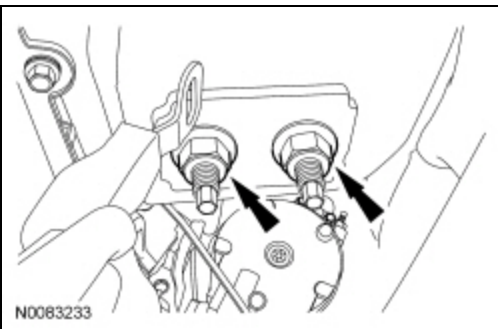


Four-Wheel Drive (4WD) vehicles

9. Remove the front drive shaft. For additional information, refer to Section 205-01.


All vehicles

10. NOTICE: Only use hand tools when removing the engine support insulator through bolt or the engine support insulator may be damaged.


Remove the LH engine support insulator bolt.

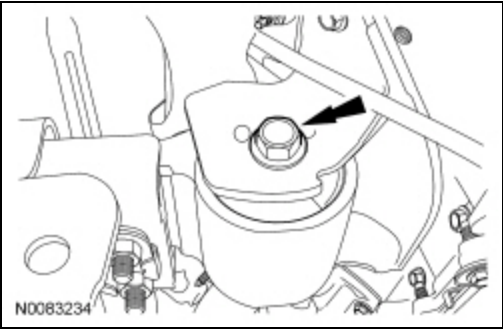


11. Disconnect the A/C compressor electrical connector and the wiring harness retainer.

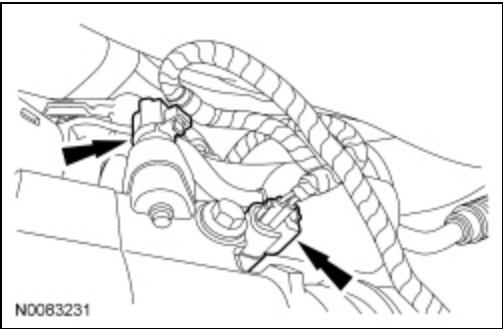


12. Remove the 3 bolts and position the A/C compressor aside.

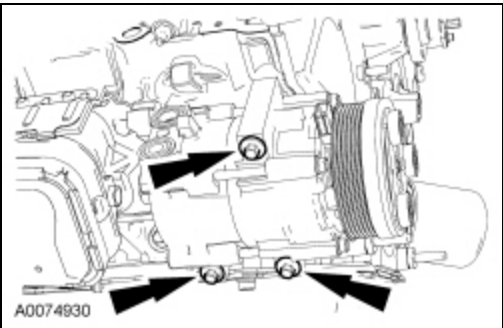

13. Using the Engine Support Bar and Engine Support Bracket, raise the engine.

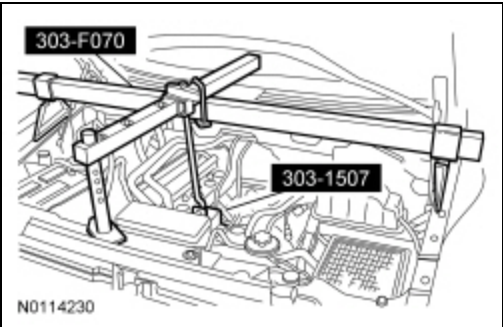

14. Remove the 2 bolts and the exhaust shield.

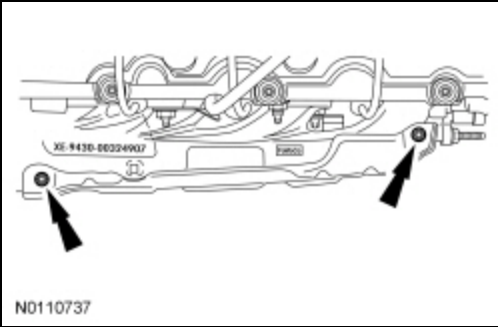

15. Remove the 8 exhaust manifold nuts, the 8 studs, the exhaust manifold and the 2 exhaust manifold gaskets.
 - Discard the exhaust manifold nuts, studs and gaskets.

16. **NOTICE: Do not use metal scrapers, wire brushes, power abrasive discs or other abrasive means to clean the sealing surfaces. These may cause scratches and gouges resulting in leak paths. Use a plastic scraper to clean the sealing surfaces.**

NOTE: Clean the sealing surfaces with metal surface prep. Follow the directions on the packaging.


Remove and discard the 2 exhaust manifold gaskets. Clean the sealing surfaces with metal surface prep.

17. Inspect the exhaust manifold. For additional information, refer to Section 303-00.


Installation

All vehicles


1. Using 2 new exhaust manifold gaskets and 8 new studs, position the 2 gaskets and exhaust manifold and install the 8 studs.
 - Tighten to 25 Nm (18 lb-ft).
2. Using new exhaust manifold nuts, install the 8 nuts in 2 stages in the sequence shown.
 - Stage 1: Tighten to 25 Nm (18 lb-ft).
 - Stage 2: Tighten to 32 Nm (24 lb-ft).

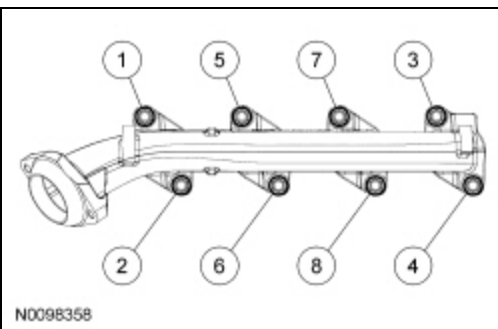

3. Position the exhaust manifold heat shield and install the 2 bolts.
 - Tighten to 12 Nm (106 lb-in).

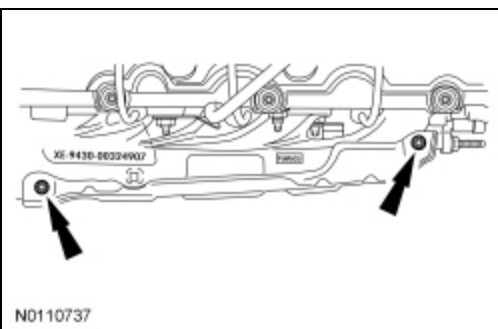


4. Using the Engine Support Bar and Engine Support Bracket, lower the engine.

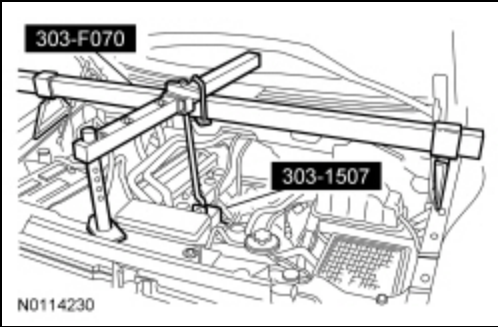

5. **NOTICE: Only use hand tools when tightening the engine support insulator through bolt or the engine support insulator may be damaged.**

Apply threadlock to the bolt threads and install the LH engine support insulator bolt.

- Tighten to 350 Nm (258 lb-ft).

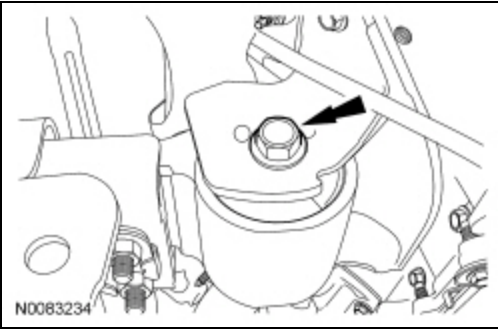

Four-Wheel Drive (4WD) vehicles

6. Install the front drive shaft. For additional information, refer to Section 205-01.


All vehicles

7. **NOTICE: Only use hand tools when tightening the engine support insulator nuts or the engine support insulator may be damaged.**

NOTE: Make sure the RH engine support insulator mating surfaces and the washer mating surface are free of foreign material and corrosion before installation. Install a new washer.


Apply threadlock to the stud threads and install the RH engine support insulator washer and nuts.

- Tighten to 175 Nm (129 lb-ft).

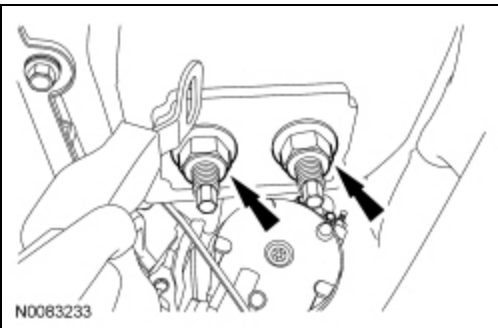


8. Tighten the 2 transmission mount nuts.

- Tighten to 103 Nm (76 lb-ft).

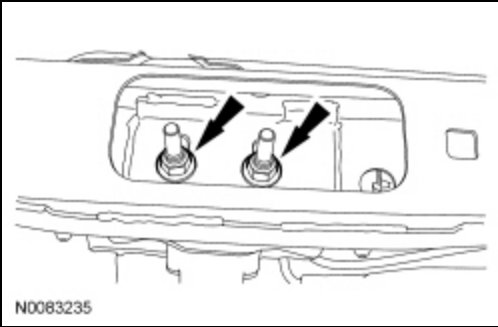


9. Install the 4 exhaust Y-pipe flange nuts (2 RH and 2 LH).

- Tighten to 40 Nm (30 lb-ft).

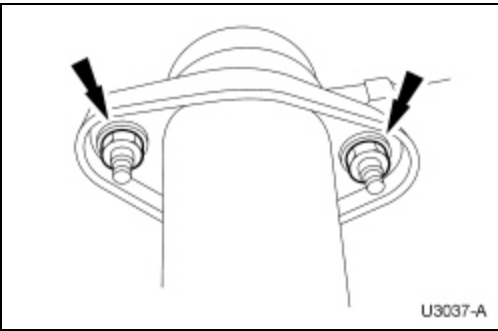


10. Position the A/C compressor and install the 3 bolts.

- Tighten to 25 Nm (18 lb-ft).

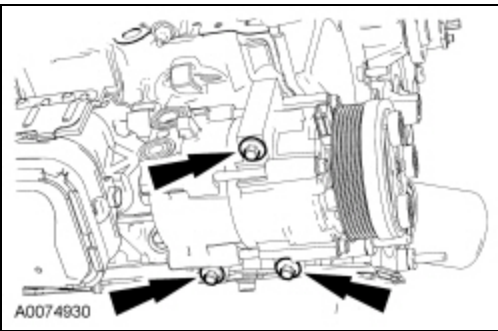


11. Connect the A/C compressor electrical connector and the wiring harness retainer.

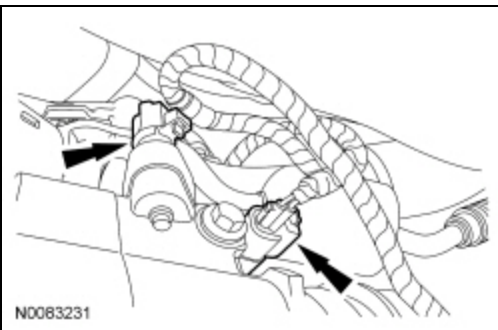

12. Install the starter. For additional information, refer to Section 303-06.

13. Install the RH inner fenderwell. For additional information, refer to Section 501-02.

14. Remove the Engine Support Bar and Engine Support Bracket.

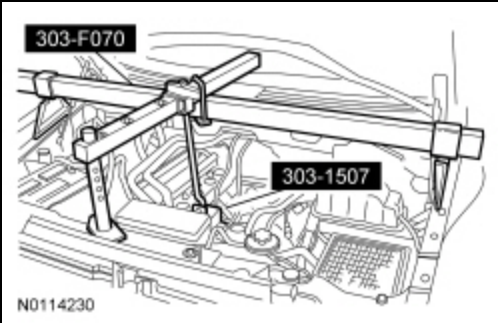

15. Install the intake manifold. For additional information, refer to Intake Manifold in this section.