


Flexplate



Removal and Installation


1. Remove the transmission. For additional information, refer to Section 307-01.
2. Rotate the engine clockwise until the 2 slotted holes on the flexplate are at the 6 o'clock position as shown.

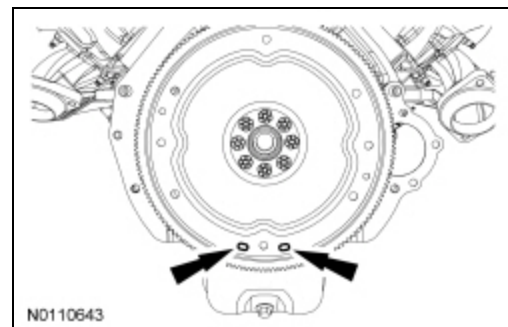


3. Remove the 8 bolts and the flexplate.
 - Discard the 8 flexplate bolts.

Installation


1. With the offset hole on the crankshaft ignition pulse ring aligned with the offset hole on the flexplate, position the flexplate and install 8 new bolts finger-tight.

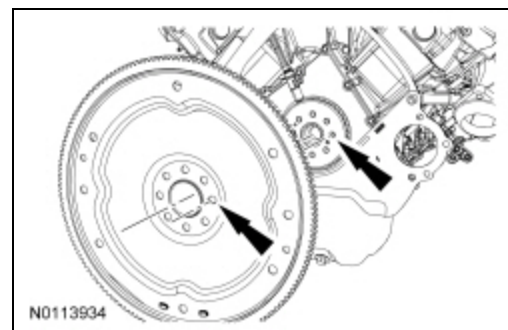

2. Tighten the 8 new bolts in 6 stages.
 - Stage 1: Tighten fasteners 1 through 4 in sequence to 20 Nm (177 lb-in).
 - Stage 2: Tighten fasteners 1 through 4 in sequence to 35 Nm (26 lb-ft).
 - Stage 3: Tighten fasteners 1 through 4 in sequence an additional 60 degrees.
 - Stage 4: Tighten fasteners 5 through 8 in sequence to 20 Nm (177 lb-in).
 - Stage 5: Tighten fasteners 5 through 8 in sequence to 35 Nm (26 lb-ft).
 - Stage 6: Tighten fasteners 5 through 8 in sequence an additional 60 degrees.

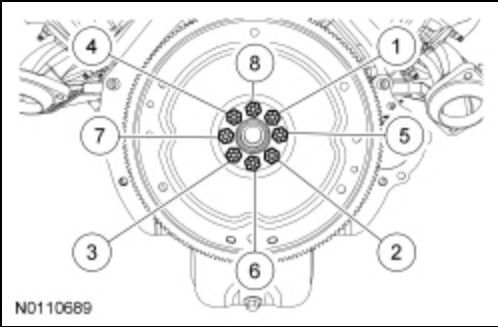

3. Verify that the 2 flexplate slotted holes are at the 6 o'clock position as shown prior to transmission installation.

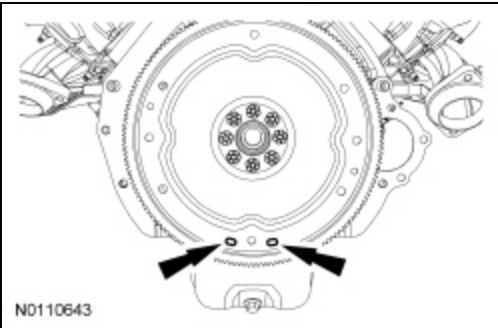

4. Install the transmission. For additional information, refer to Section 307-01.