


Oil Cooler

 [Ford Ecat Electronic Parts Catalog](#)

Material

Item	Specification
Motorcraft® SAE 5W-20 Synthetic Blend Motor Oil (US); Motorcraft® SAE 5W-20 Super Premium Motor Oil (Canada) XO-5W20-QSP (US); CXO-5W20-LSP12 (Canada)	WSS-M2C945-A

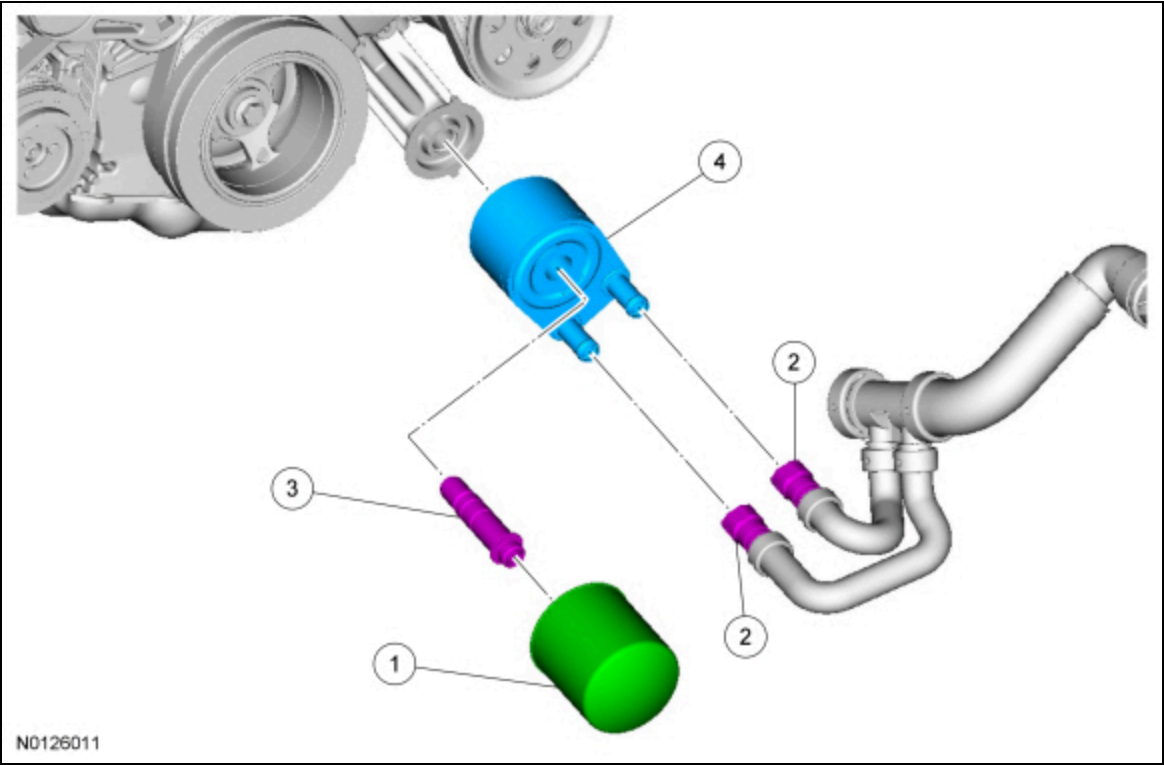

Item	Part Number	Description
1	6714 6714	Oil filter
2	—	Oil cooler coolant hose quick connect couplings (part of 8B273)
3	6L626 6L626	Oil cooler threaded shaft
4	6A642 6A642	Oil cooler

Removal and Installation

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Drain the engine cooling system. For additional information, refer to Section 303-03.
3. Remove and discard the oil filter.

4. Disconnect the oil cooler coolant hose quick connect couplings and position aside. For additional information, refer to Section 310-00.

5. NOTICE: If metal foreign material is present in the oil cooler, mechanical concerns exist. To diagnose mechanical concerns, refer to Section 303-00.

Remove the threaded shaft and the oil cooler. Inspect the engine oil cooler.

Installation

1. Position the oil cooler and install the threaded shaft.

- Tighten to 58 Nm (43 lb-ft).

2. Connect the oil cooler coolant hose quick connect couplings. For additional information, refer to Section 310-00.

3. Install a new oil filter in 2 stages.

- Stage 1: Tighten to 5 Nm (44 lb-in).
- Stage 2: Tighten an additional 180 degrees.

4. Fill and bleed the engine cooling system. For additional information, refer to Section 303-03.