


Oil Filter Adapter

 [Ford Ecat Electronic Parts Catalog](#)

Material

Item	Specification
Motorcraft® Metal Surface Prep Wipes ZC-31-B	—
Motorcraft® SAE 5W-20 Synthetic Blend Motor Oil (US); Motorcraft® SAE 5W-20 Super Premium Motor Oil (Canada) XO-5W20-QSP (US); CXO-5W20-LSP12 (Canada)	WSS- M2C945-A
Motorcraft® Silicone Gasket Remover ZC-30-A	—

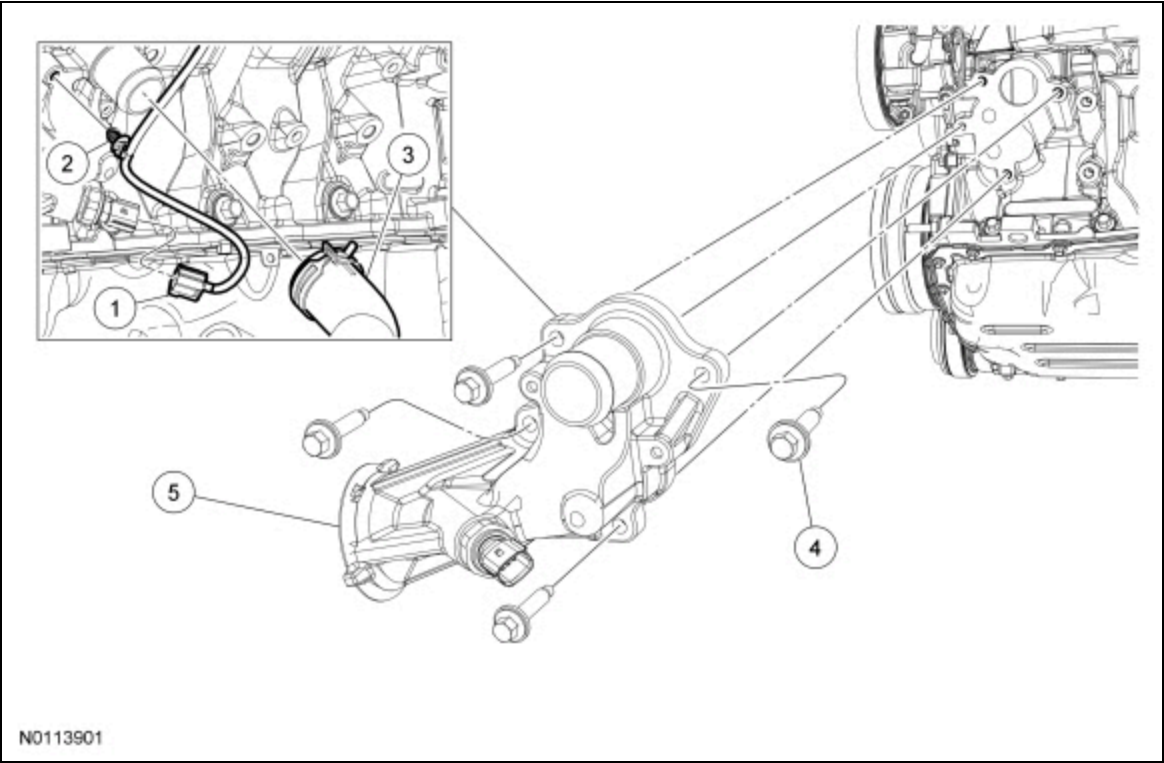

Item	Part Number	Description
1	—	Engine Oil Pressure (EOP) switch electrical connector (part of 12B637)
2	—	EOP switch wiring harness retainer (part of 12B637)
3	8B2738B273	Lower radiator hose
4	W705128W705128	Oil filter adapter bolt (4 required)
5	68816881	Oil filter adapter

Removal

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Remove the engine oil cooler. For additional information, refer to Oil Cooler in this section.
3. Drain the engine oil.
 - Install the drain plug and tighten to 23 Nm (17 lb-ft).
4. Disconnect the Engine Oil Pressure (EOP) switch wiring harness retainer and the electrical connector.
5. Disconnect the lower radiator hose and position it aside.
6. Remove the 4 bolts and the oil filter adapter.
7. **NOTICE: Do not use metal scrapers, wire brushes, power abrasive discs or other abrasive means to clean the sealing surfaces. These may cause scratches and gouges resulting in leak paths. Use a plastic scraper to clean the sealing surfaces.**

Inspect the 3 gaskets for damage and install new gaskets if necessary.

- Clean and inspect the cylinder block sealing surfaces with silicone gasket remover and metal surface prep. Follow the directions on the packaging.

Installation

1. Position the oil filter adapter and install the 4 bolts in 2 stages.
 - Stage 1: Tighten to 20 Nm (15 lb-ft).
 - Stage 1: Tighten an additional 60 degrees.
2. Connect the EOP switch electrical connector and attach the wiring harness retainer.
3. Connect the lower radiator hose.
4. Install the engine oil cooler. For additional information, refer to Oil Cooler in this section.