


Oil Level Indicator and Tube

 [Ford Ecat Electronic Parts Catalog](#)

Material	
Item	Specification
Motorcraft® SAE 5W-20 Synthetic Blend Motor Oil (US); Motorcraft® SAE 5W-20 Super Premium Motor Oil (Canada) XO-5W20-QSP (US); CXO-5W20-LSP12 (Canada)	WSS-M2C945-A

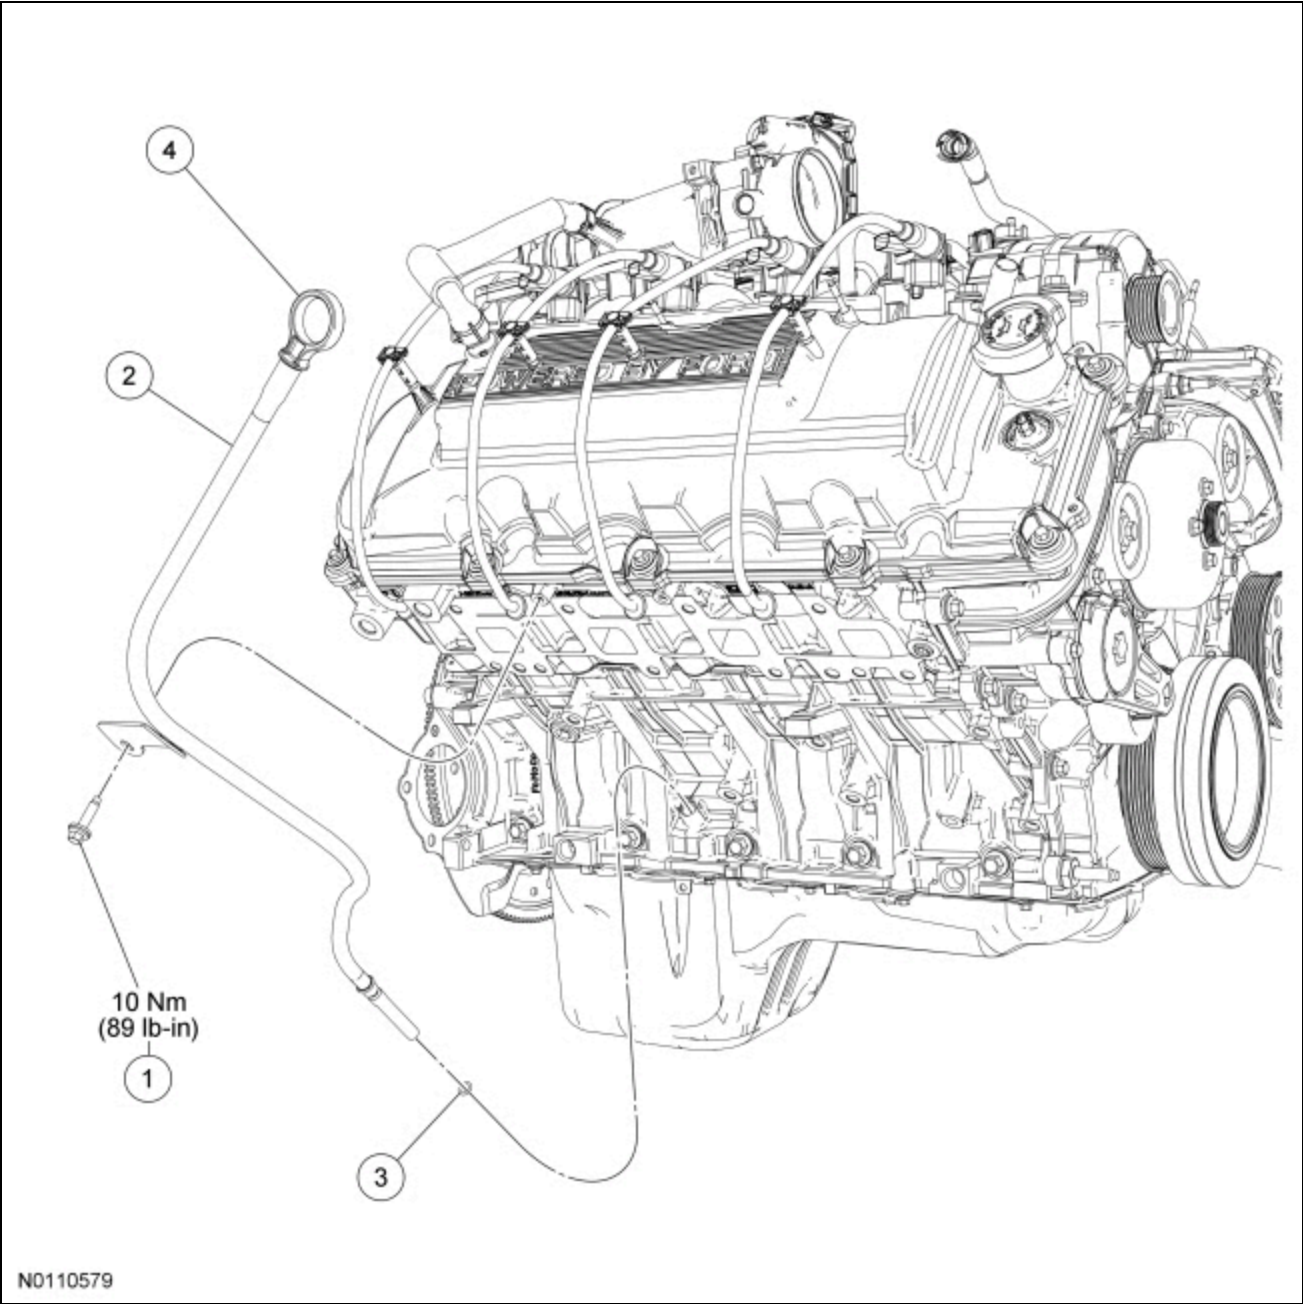

Item	Part Number	Description
------	-------------	-------------

1	W503276 W503276	Oil level indicator and tube bolt
2	6B667 6B667	Oil level indicator tube
3	—	Oil level indicator tube O-ring seal (part of 6B667)
4	—	Oil level indicator

Removal and Installation

1. Remove the RH exhaust manifold. For additional information, refer to Exhaust Manifold — RH in this section.
 2. Remove the oil level indicator from the oil level indicator tube.
 3. Remove the oil level indicator and tube bolt.
 - To install, tighten to 10 Nm (89 lb-in).
 4. Remove the oil level indicator tube from the cylinder block.
 - Discard the O-ring seal.
 5. **NOTE:** *Lubricate the new oil level indicator tube O-ring seal with clean engine oil prior to installation.*
- To install, reverse the removal procedure.
- Install a new O-ring seal.