


Valve Cover — LH


 [Ford Ecat Electronic Parts Catalog](#)

Material	
Item	Specification
Motorcraft® Metal Surface Prep Wipes ZC-31-B	—
Motorcraft® Silicone Gasket and Sealant TA-30	WSE-M4G323- A4
Motorcraft® Silicone Gasket Remover ZC-30-A	—

PCV Tube and LH Ignition Wires

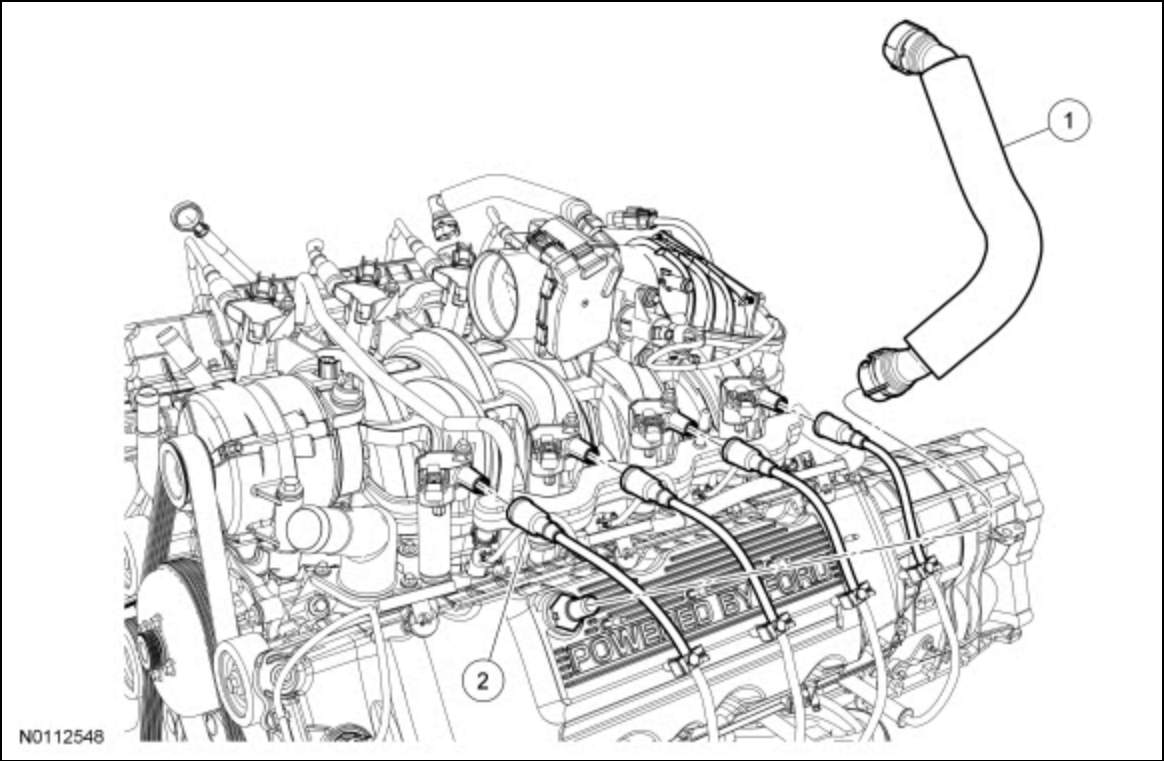


Item	Part Number	Description
1	6K817 6K817	Crankcase ventilation tube
2	12286 12286	Ignition wire (4 required)

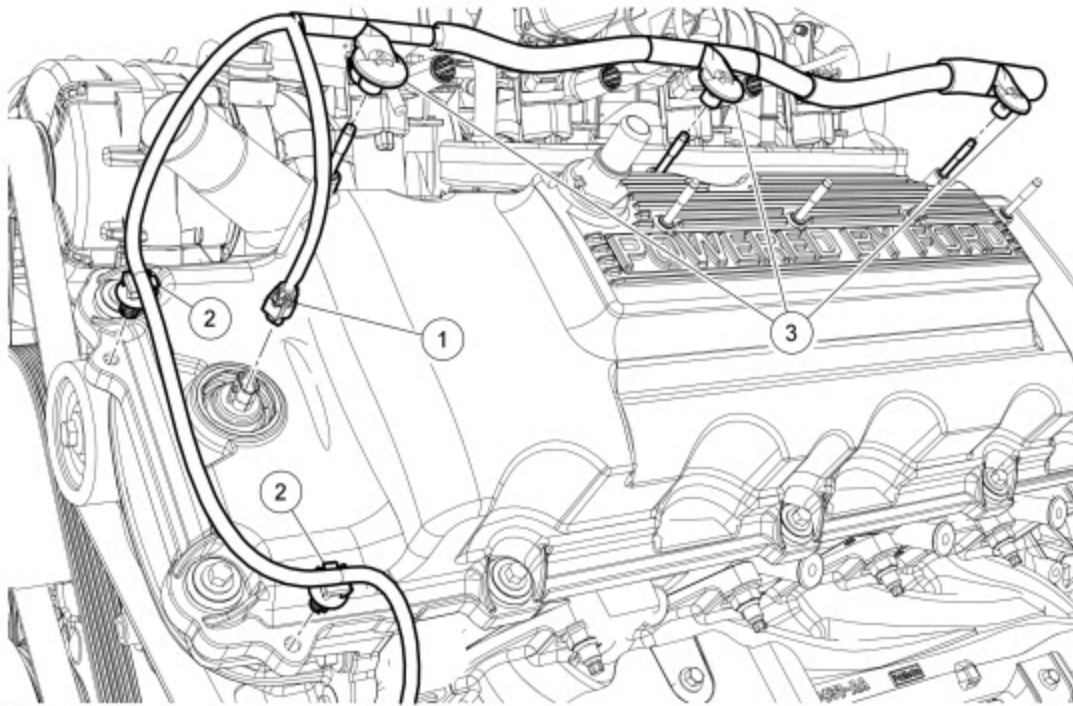

N0116933

Item	Part Number	Description
1	—	LH Variable Camshaft Timing (VCT) solenoid electrical connector (part of 12C508)
2	—	Engine wiring harness-to-LH valve cover retainers (part of 12C508) (2 required)
3	—	Engine wiring harness-to-LH valve cover retainers (part of 12C508) (3 required)

LH Valve Cover and Gasket

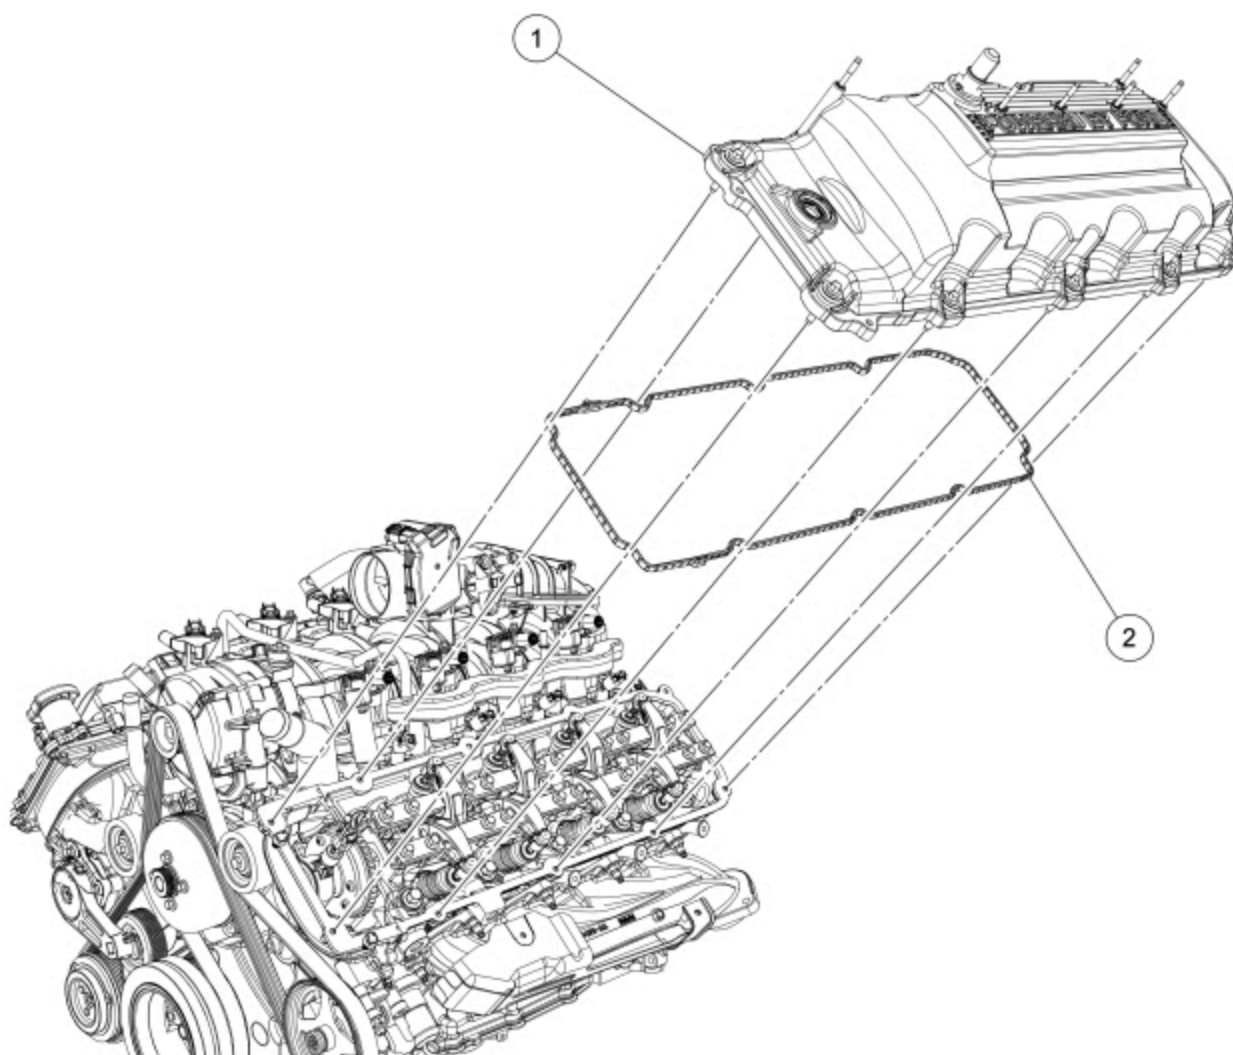

N0110664

Item	Part Number	Description
1	6762 6762	LH valve cover
2	6584 6584	LH valve cover gasket

Removal

1. Remove the Air Cleaner (ACL) outlet pipe. For additional information, refer to Section 303-12.
2. Disconnect the quick connect couplings and remove the crankcase ventilation tube. For additional information, refer to Section 310-00.
3. Disconnect the 4 LH ignition wires from the 4 LH ignition coils.
4. Disconnect the 4 LH ignition wire retainers from the valve cover.
5. Disconnect the LH Variable Camshaft Timing (VCT) variable force solenoid electrical connector.
6. Disconnect the 2 wiring harness retainers from the front and the 3 wiring harness retainers from the top of the LH valve cover.

7. **NOTICE:** Do not use metal scrapers, wire brushes, power abrasive discs or other abrasive means to clean the sealing surfaces. These tools cause scratches and gouges which make leak paths. Use a plastic scraping tool to remove all traces of old sealant.

NOTICE: When removing the valve cover, make sure to avoid damaging the Variable Camshaft Timing (VCT) variable force solenoid.

NOTE: The fasteners are part of the valve cover and should not be removed.


Loosen the 10 fasteners and remove the LH valve cover and gasket.

- Clean the valve cover mating surface of the cylinder head with silicone gasket remover and metal surface prep. Follow the directions on the packaging.
- Discard the valve cover gasket. Clean the valve cover gasket groove with soap and water or a suitable solvent.

Installation

1. **NOTE:** If the valve cover is not secured within 5 minutes, the sealant must be removed and the sealing area cleaned with silicone gasket remover and metal surface prep. Follow the directions on the packaging. Allow to dry until there is no sign of wetness, or 5 minutes, whichever is longer. Failure to follow this procedure can cause future oil leakage.


Apply a bead of silicone gasket and sealant in 2 places where the engine front cover meets the cylinder head.

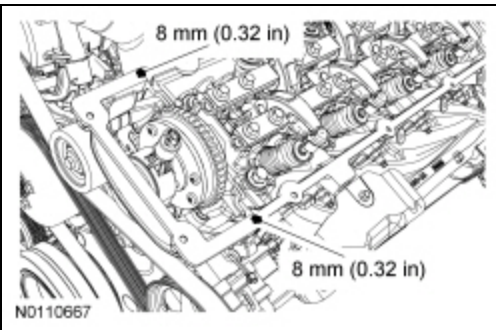

2. **NOTICE:** When installing the valve cover, make sure to avoid damaging the Variable Camshaft Timing (VCT) variable force solenoid.

Position the LH valve cover and new gasket on the cylinder head and tighten the 10 fasteners in the sequence shown.

- Tighten to 10 Nm (89 lb-in).

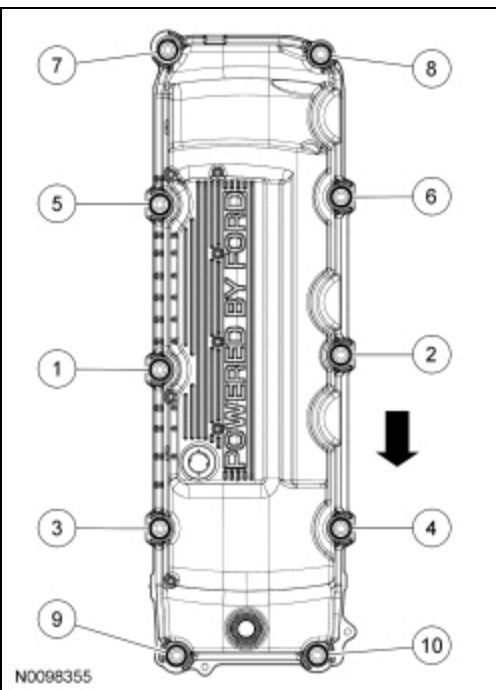

3. Connect the 3 wiring harness retainers to the top and the 2 wiring harness retainers to the front of the LH valve cover.

4. Connect the LH ~~VCT~~ solenoid electrical connector.
5. Connect the 4 LH ignition wire retainers to the valve cover.
6. Connect the 4 LH ignition wires to the 4 LH ignition coils.
7. Position the crankcase ventilation tube and connect the quick connect couplings. For additional information, refer to Section 310-00.
8. Install the ~~ACL~~ outlet pipe. For additional information, refer to Section 303-12.