


Valve Cover — RH

 [Ford Ecat Electronic Parts Catalog](#)


Material	
Item	Specification
Motorcraft® Metal Surface Prep Wipes ZC-31-B	—
Motorcraft® Silicone Gasket and Sealant TA-30	WSE-M4G323- A4
Motorcraft® Silicone Gasket Remover ZC-30-A	—

RH Ignition Wires, RH Fuel Injector Electrical Connectors and PCV Tube

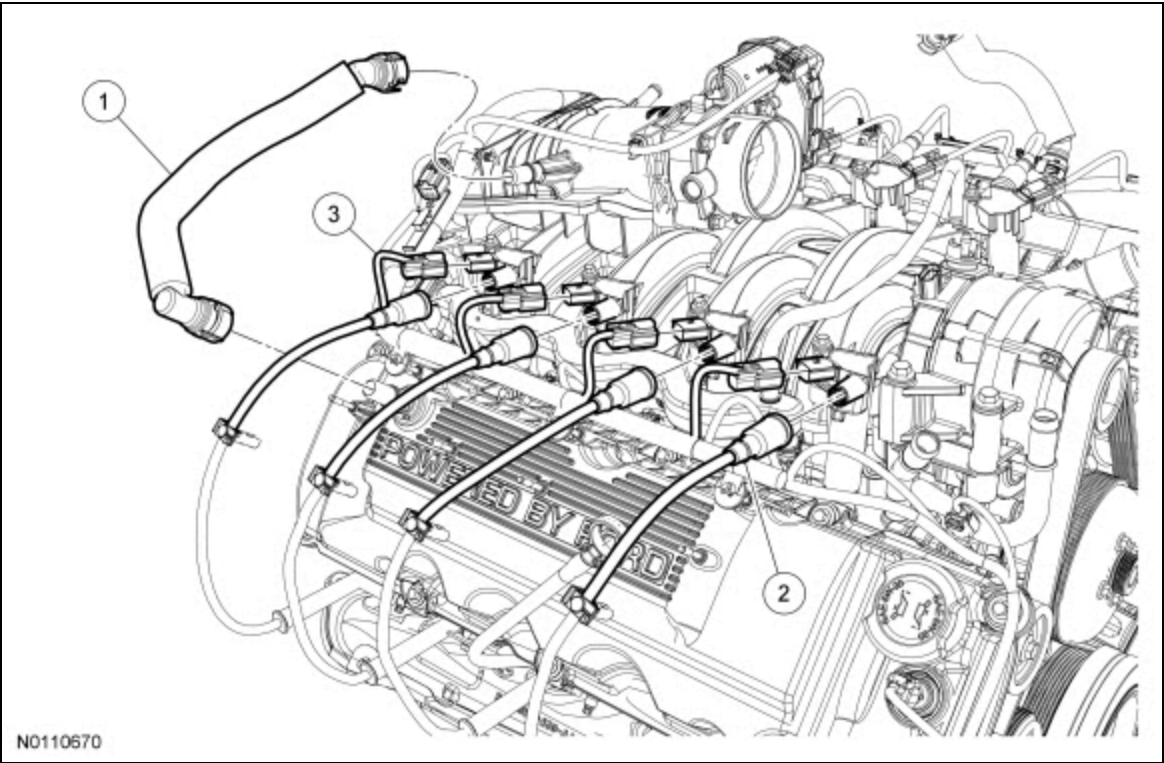


Item	Part Number	Description
1	6K8176K817	Crankcase ventilation tube
2	1228612286	Ignition wire (4 required)
3	—	RH ignition coil electrical connectors (part of 12C508) (4 required)

RH Variable Camshaft Timing (VCT) Electrical Connector, Engine Wiring Harness Retainers and Engine Oil Level Indicator Tube Bolt

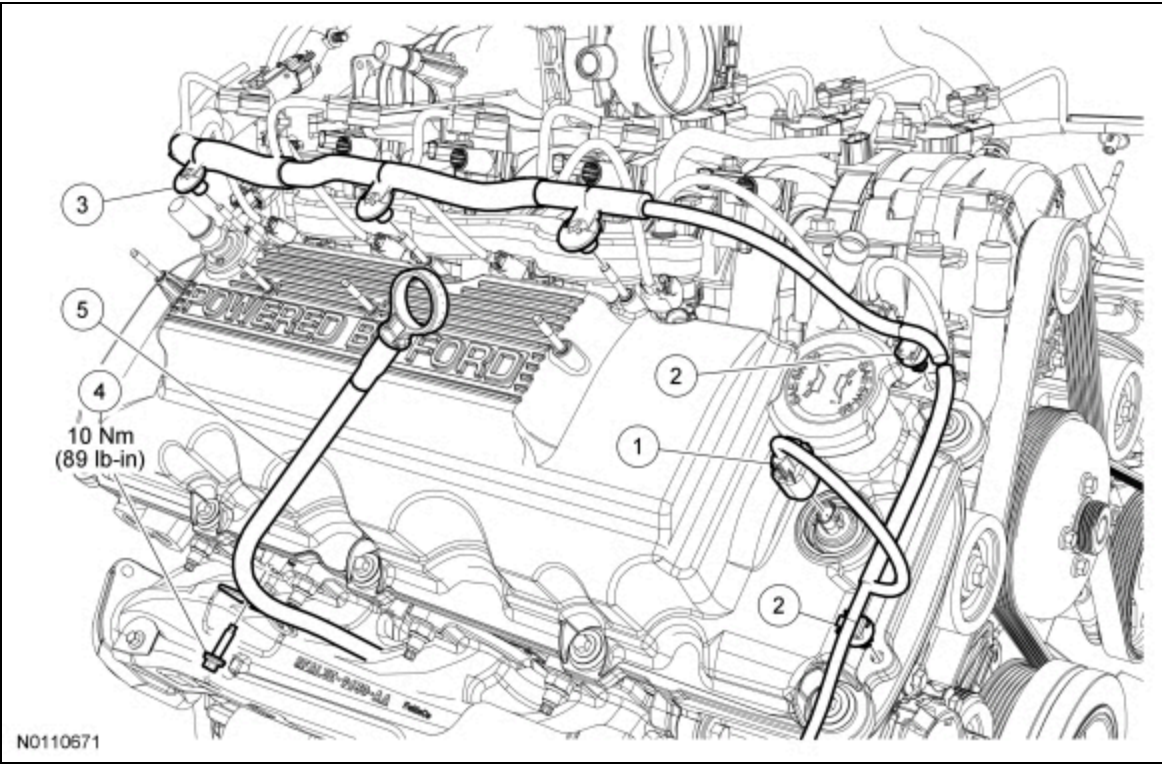

Item	Part Number	Description
1	—	RH Variable Camshaft Timing (VCT) solenoid electrical connector (part of 12C508)
2	—	Engine wiring harness-to-RH valve cover retainers (part of 12C508) (2 required)
3	—	Engine wiring harness-to-RH valve cover retainers (part of 12C508) (3 required)
4	W503276 W503276	Engine oil level indicator tube bolt
5	6B6676 6B667	Engine oil level indicator tube

RH Valve Cover and Gasket

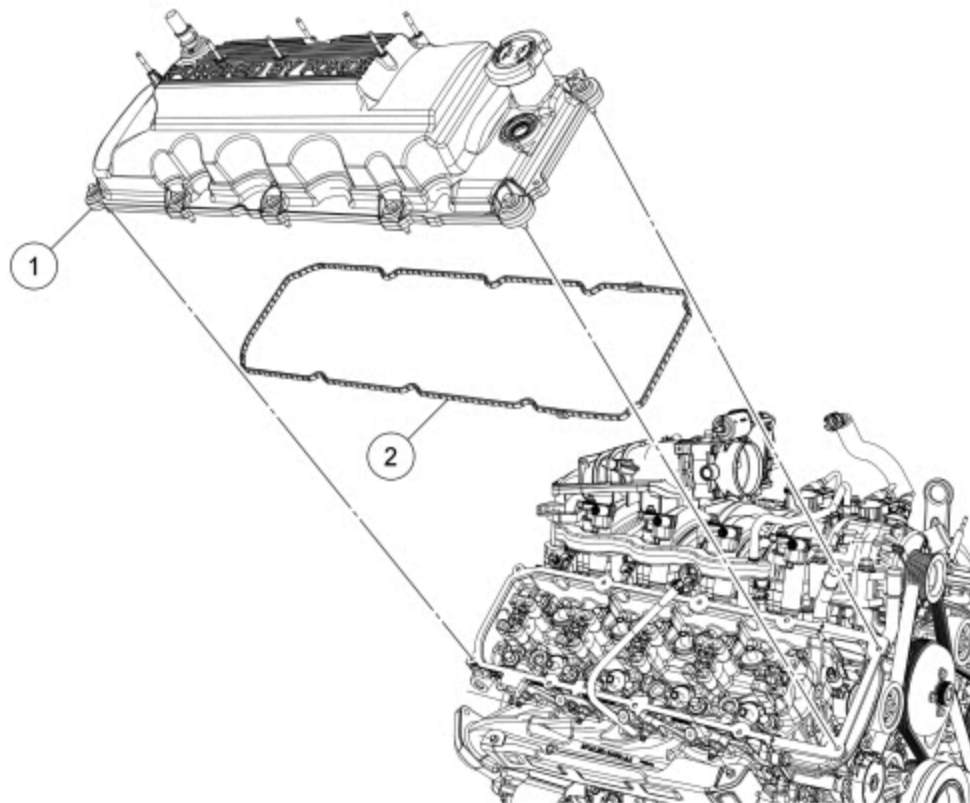

N0113318

Item	Part Number	Description
1	6582 6582	RH valve cover
2	6584 6584	RH valve cover gasket

Removal

1. Disconnect the battery ground cable. For additional information, refer to Section 414-01.
2. Disconnect the quick connect couplings and remove the PCV tube. For additional information, refer to Section 310-00.
3. Disconnect the 4 RH ignition wires from the 4 RH ignition coils.
4. Disconnect the 4 RH ignition wire retainers from the valve cover.
5. Disconnect the RH Variable Camshaft Timing (VCT) solenoid electrical connector.
6. Disconnect the 6 wiring harness retainers from the RH valve cover.
7. **NOTICE: Do not use metal scrapers, wire brushes, power abrasive discs or other abrasive means to clean the sealing surfaces. These tools cause scratches and gouges which make leak paths. Use a plastic scraping tool to remove all traces of old sealant.**

NOTICE: When removing the valve cover, make sure to avoid damaging the Variable Camshaft Timing (VCT) solenoid.

NOTE: The fasteners are part of the valve cover and should not be removed.


Loosen the 10 fasteners and remove the RH valve cover and gasket.

- Clean the valve cover mating surface of the cylinder head with silicone gasket remover and metal surface prep. Follow the directions on the packaging.
- Discard the valve cover gasket. Clean the valve cover gasket groove with soap and water or a suitable solvent.

Installation

1. **NOTE:** *If the valve cover is not secured within 5 minutes, the sealant must be removed and the sealing area cleaned with silicone gasket remover and metal surface prep. Follow the directions on the packaging. Allow to dry until there is no sign of wetness, or 5 minutes, whichever is longer. Failure to follow this procedure can cause future oil leakage.*


Apply a bead of silicone gasket and sealant in 2 places where the engine front cover meets the cylinder head.

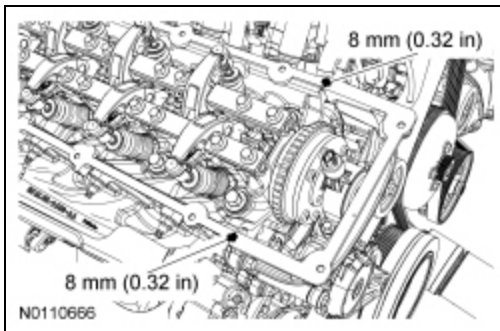

2. **NOTICE:** When installing the valve cover, make sure to avoid damaging the Variable Camshaft Timing (VCT) solenoid.

Position the RH valve cover and new gasket on the cylinder head and tighten the 10 fasteners in the sequence shown.

- Tighten to 10 Nm (89 lb-in).

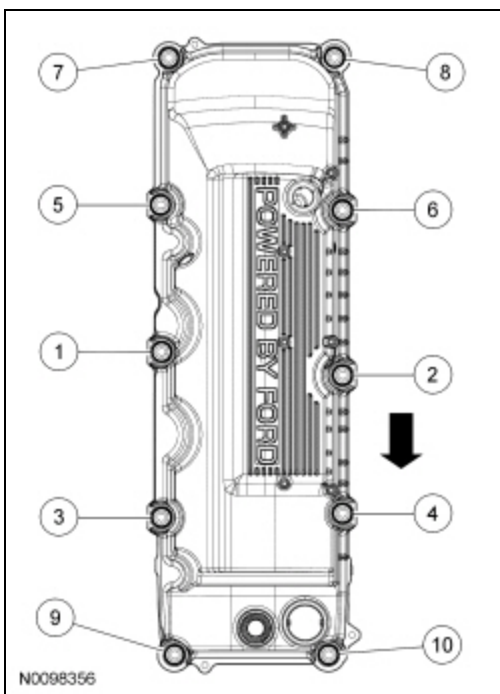

3. Connect the 6 wiring harness retainers to the RH valve cover.
4. Connect the RH VCT solenoid electrical connector.
5. Connect the 4 RH ignition wire retainers to the valve cover.
6. Connect the 4 RH ignition wires to the 4 RH ignition coils.
7. Position the PCV tube and connect the quick connect couplings. For additional information, refer to Section 310-00.