


Coolant Pump – 6.2L

 [Ford Ecat Electronic Parts Catalog](#)

Material

Item	Specification
Motorcraft® Metal Surface Prep ZC-31-B	—
Motorcraft® Orange Antifreeze/Coolant Concentrated VC-3-B (US); CVC-3-B2 (Canada)	WSS-M97B44-D

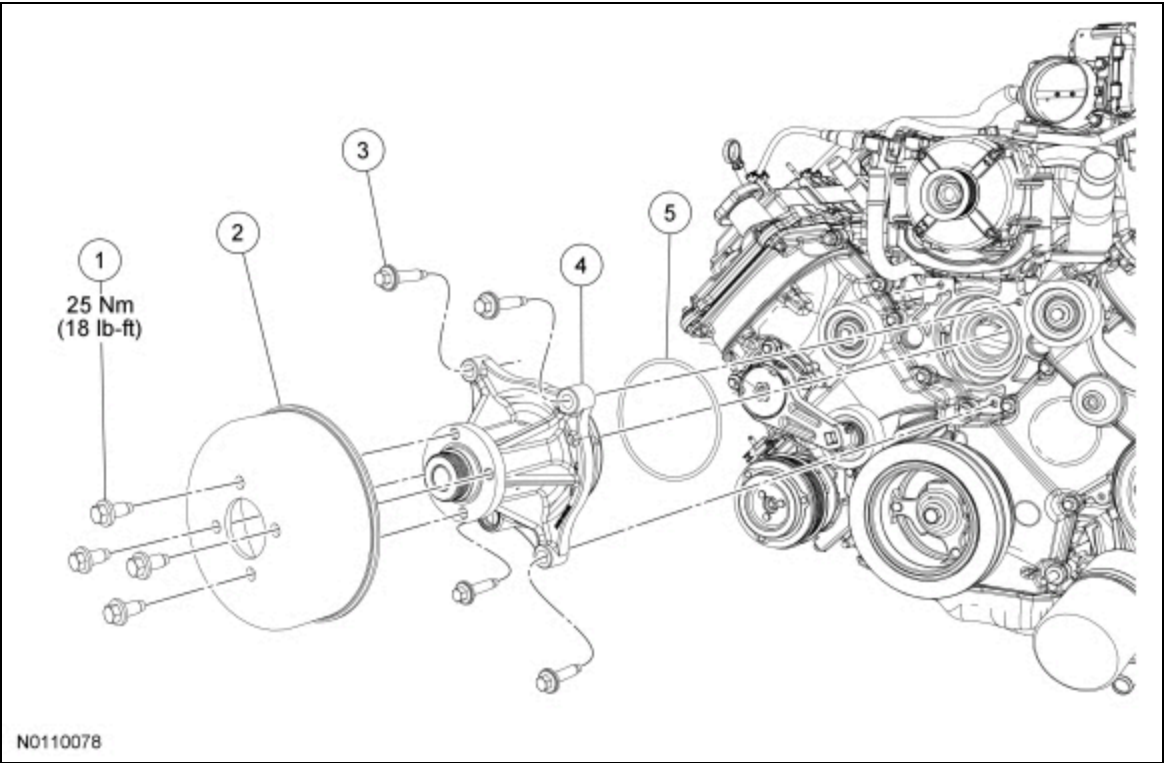

Item	Part Number	Description
1	N806282 N806282	Coolant pump pulley bolt (4 required)
2	8A5288 8A528	Coolant pump pulley
3	W503297 W503297	Coolant pump bolt (4 required)
4	8501 8501	Coolant pump
5	391108 391108	Coolant pump O-ring seal

Removal

1. Drain the cooling system. For additional information, refer to Cooling System Draining, Filling and Bleeding in this section.
2. Remove the Air Cleaner (ACL) outlet tube. For additional information, refer to Section 303-12.

3. Loosen the 4 coolant pump pulley bolts.
4. Remove the accessory drive belt. For additional information, refer to Section 303-05.
5. Remove the 4 bolts and the coolant pump pulley.
6. Remove the 4 bolts and the coolant pump. Discard the O-ring seal.
7. Inspect the sealing surfaces and clean with metal surface prep. Follow the directions on the packaging.

Installation

1. **NOTICE: Align the bolt holes with the bosses prior to insertion of the coolant pump and insert the pump straight into the coolant pump cavity. Do not rotate the coolant pump once installed in the coolant pump cavity or the O-ring seal can be damaged, causing the coolant pump to leak.**

NOTE: *Install a new O-ring seal and lubricate with clean engine coolant.*

Install the coolant pump and the 4 bolts. Tighten the 4 bolts in a criss-cross pattern in 3 stages.

- Stage 1: Finger-tighten the bolts.
- Stage 2: Tighten the bolts to 20 Nm (177 lb-in).
- Stage 3: Tighten the bolts an additional 45 degrees.

2. Install the coolant pump pulley and loosely install the 4 bolts.
3. Install the accessory drive belt. For additional information, refer to Section 303-05.
4. Tighten the 4 coolant pump pulley bolts.
 - Tighten to 25 Nm (18 lb-ft).
5. Install the ~~ACL~~ outlet pipe. For additional information, refer to Section 303-12.
6. Fill the engine cooling system. For addition information, refer to Cooling System Draining, Filling and Bleeding in this section.