

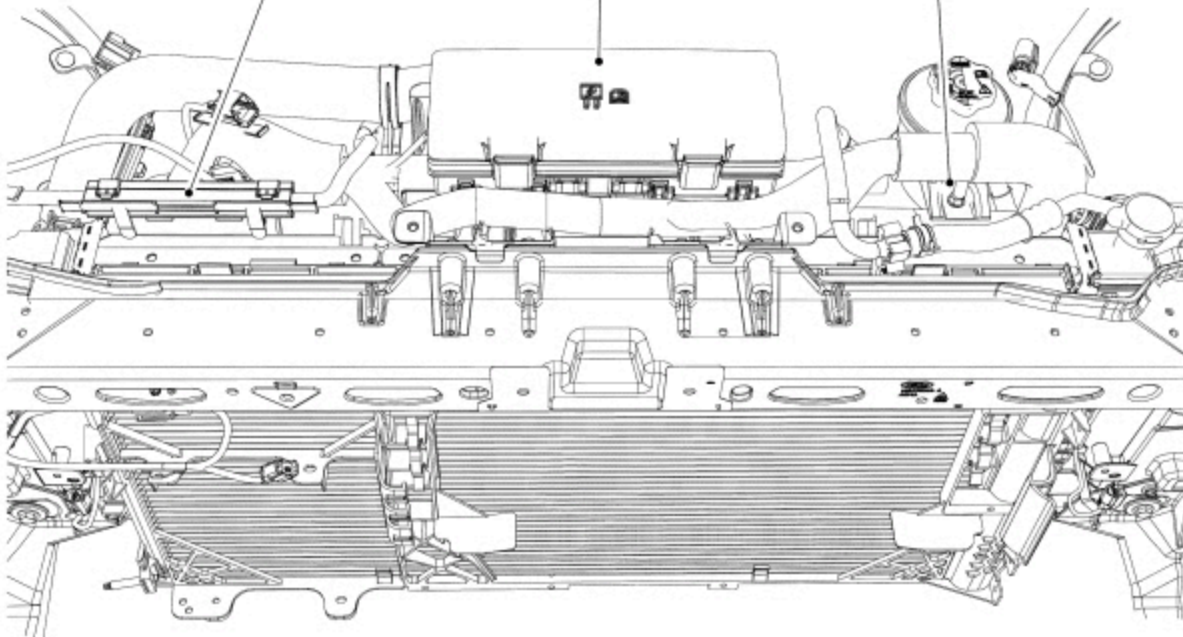
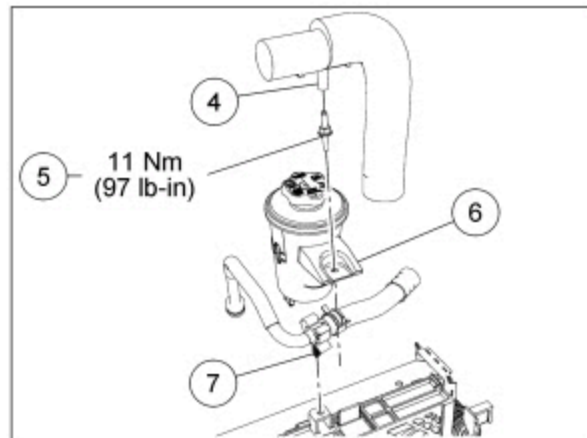
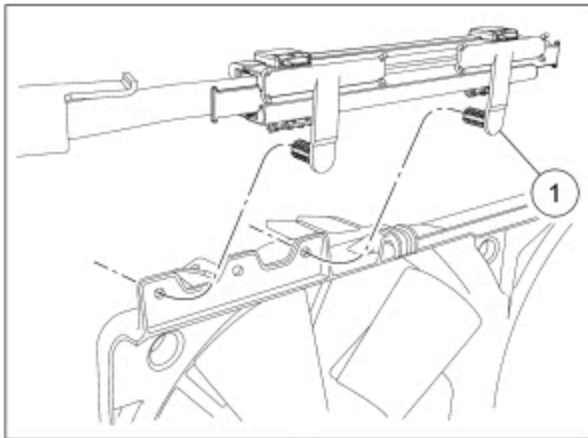
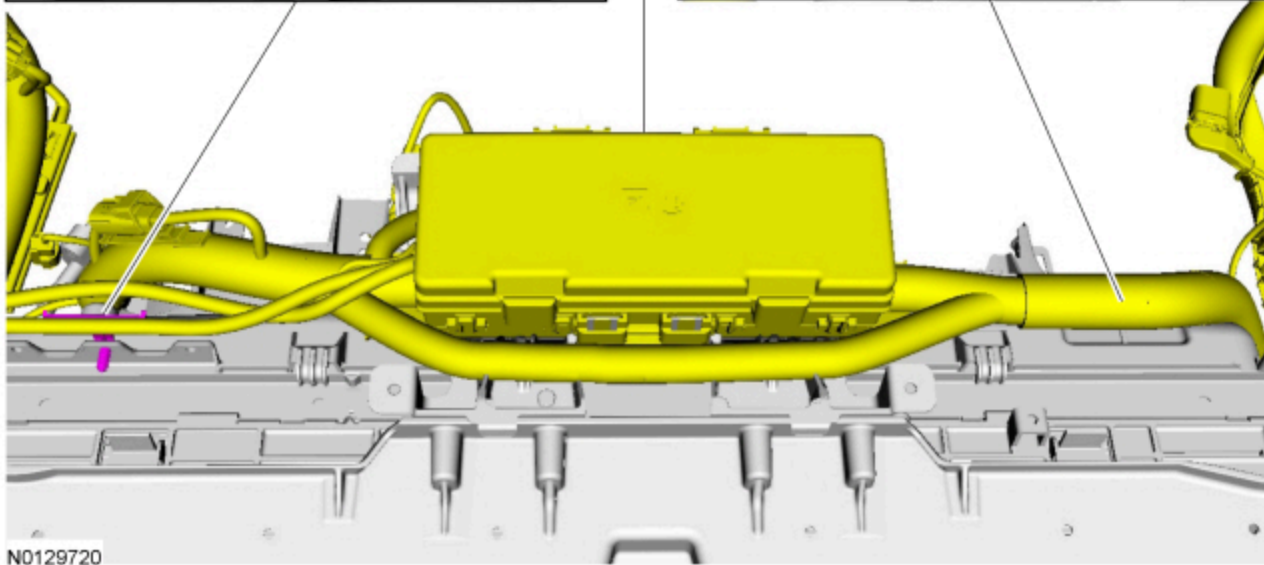
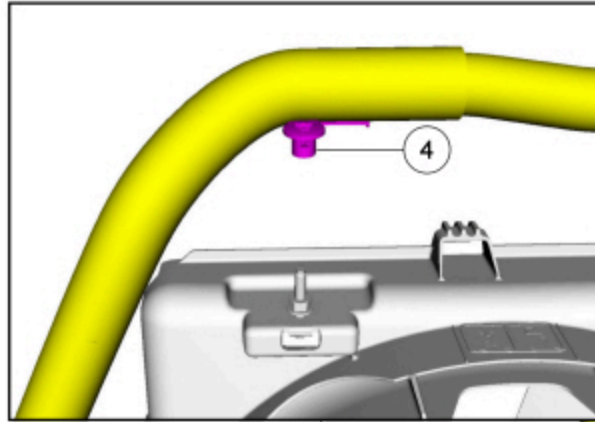


 [Ford Ecat Electronic Parts Catalog](#)

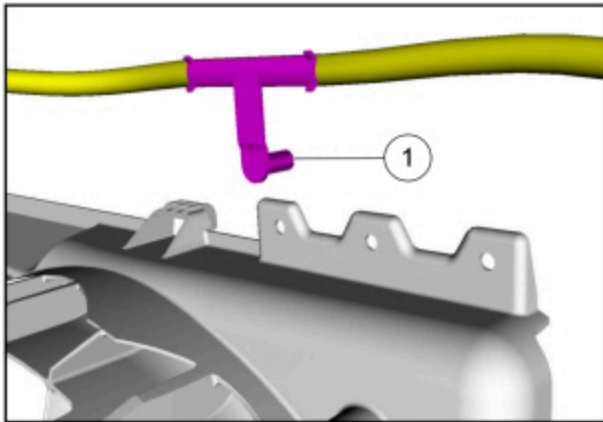


Item	Part Number	Description
1	—	Generator battery positive cable retainer (part of 14305)
2	W711851 W711851	Battery Junction Box (BJB) bracket bolt (4 required)
3	14A65 14A65	BJB bracket
4	—	Wiring harness retainer (part of 12A581)
5	W710897 W710897	Power steering fluid reservoir stud bolt (6.2L engine only)
6	3E764 3E764	Power steering fluid reservoir (6.2L engine only)
7	—	Power steering fluid cooler hose retainer (part of 3A713) (6.2L engine only)


3.5L Gasoline Turbocharged Direct Injection (GTDI) , 3.7L and 5.0L Engines

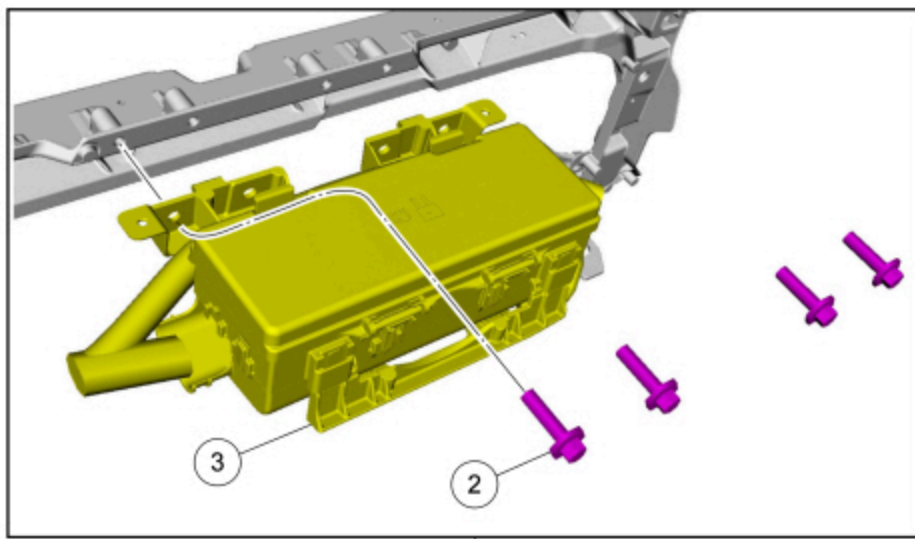

Item	Part Number	Description
1	—	Battery positive cable retainer (part of 14305)
2	W711851 W711851	Battery Junction Box (BJB) bracket bolt (4 required)
3	14A65 14A65	BJB bracket
4	—	Wiring harness retainer (part of 12A581)

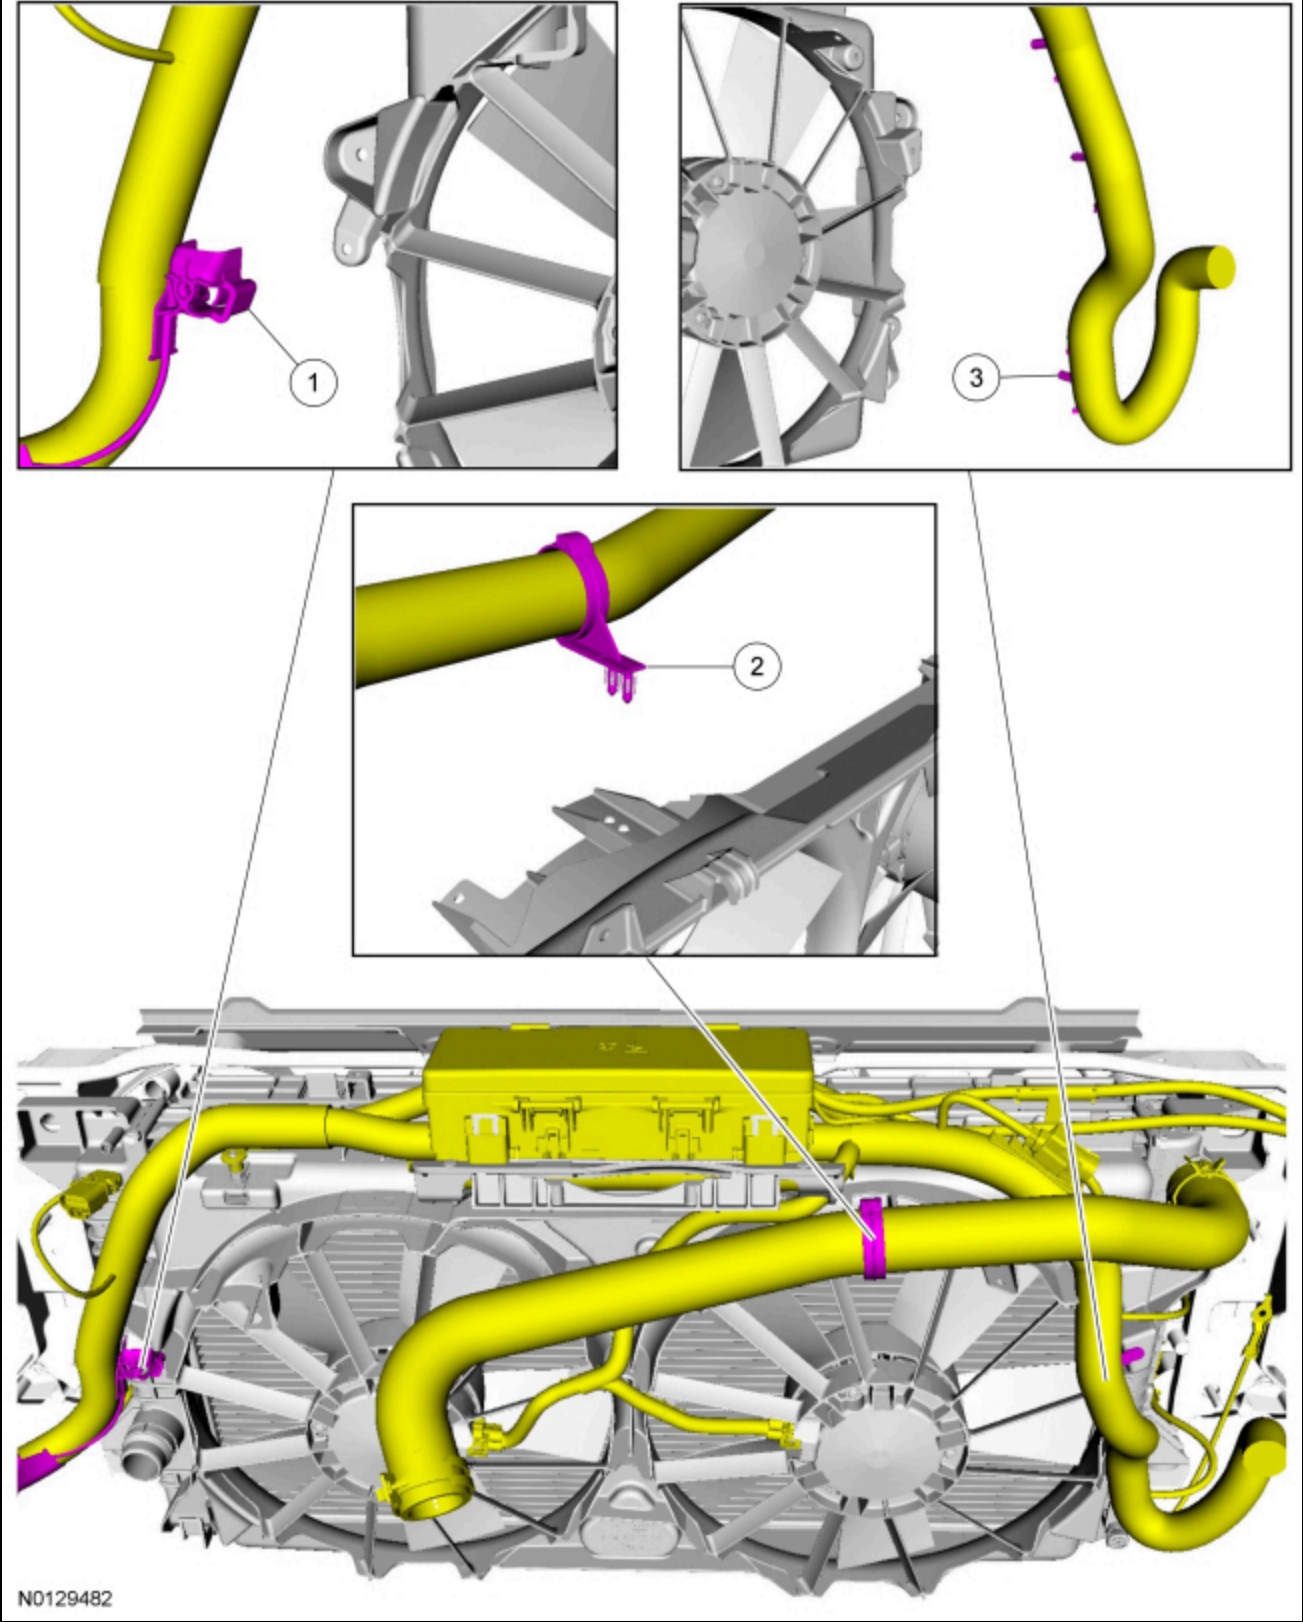

Item	Part Number	Description
1	—	Wiring harness retainer (part of 12A581)
2	8W2878W287	Upper radiator hose retainer (6.2L only)
3	—	Wiring harness retainer (part of 12A581) (3 required)

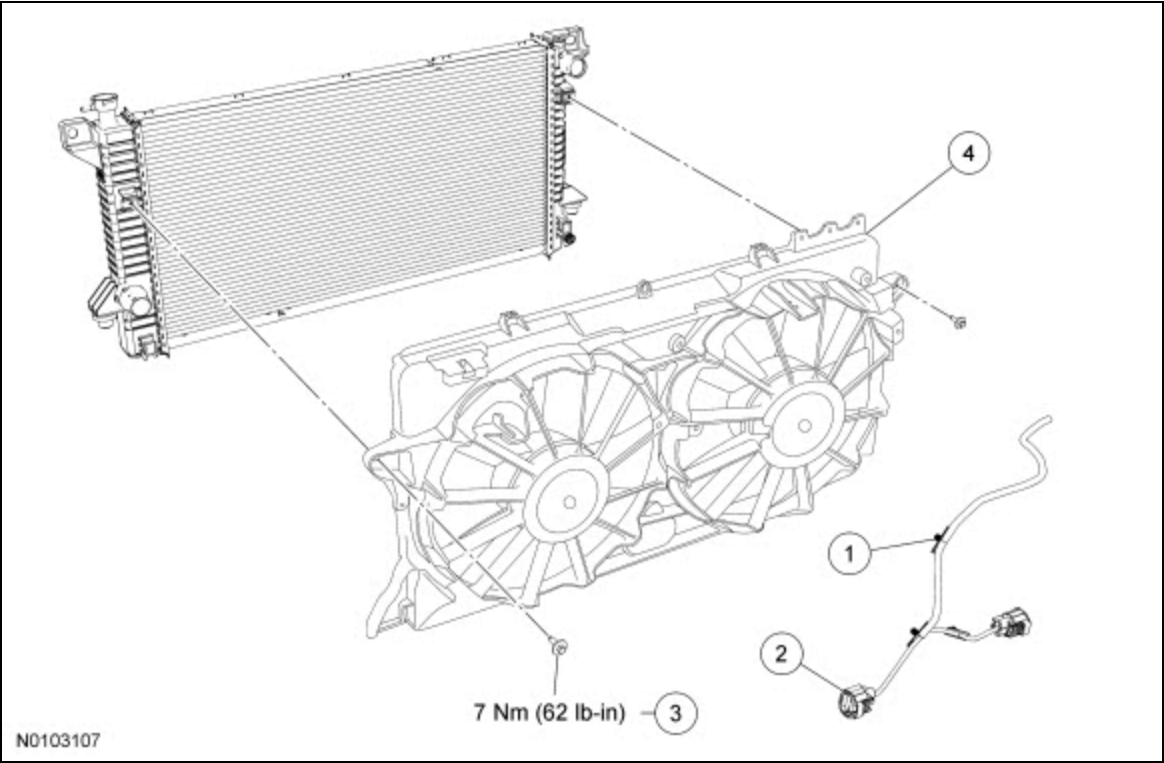


Item	Part Number	Description
1	—	Cooling fan wiring harness retainer (part of 12A581) (3 required)
2	—	Cooling fan electrical connector (part of 12A581) (2 required)
3	W503924W503924	Cooling fan motor and shroud bolt (2 required)
4	86008600	Cooling fan motor and shroud

Removal and Installation


All engines

- 1. Disconnect the battery negative cable. For additional information, refer to Section 414-01.
- 2. Remove the Air Cleaner (ACL) outlet tube. For additional information, refer to Section 303-12.
- 3. Remove the 4 pushpins and the upper radiator air deflector.

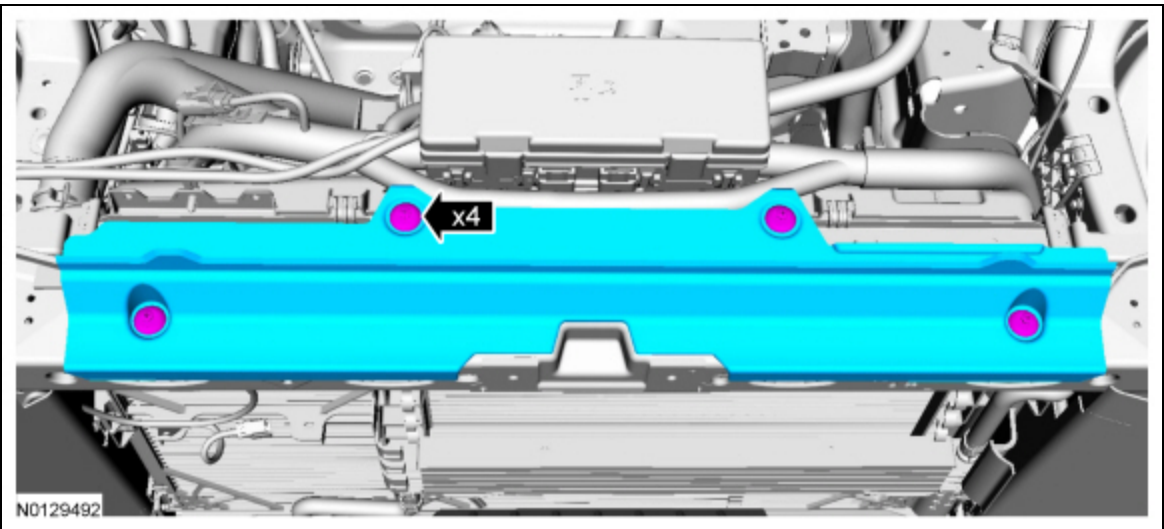


6.2L engines


4. Disconnect the Mass Air Flow (MAF) sensor electrical connector.

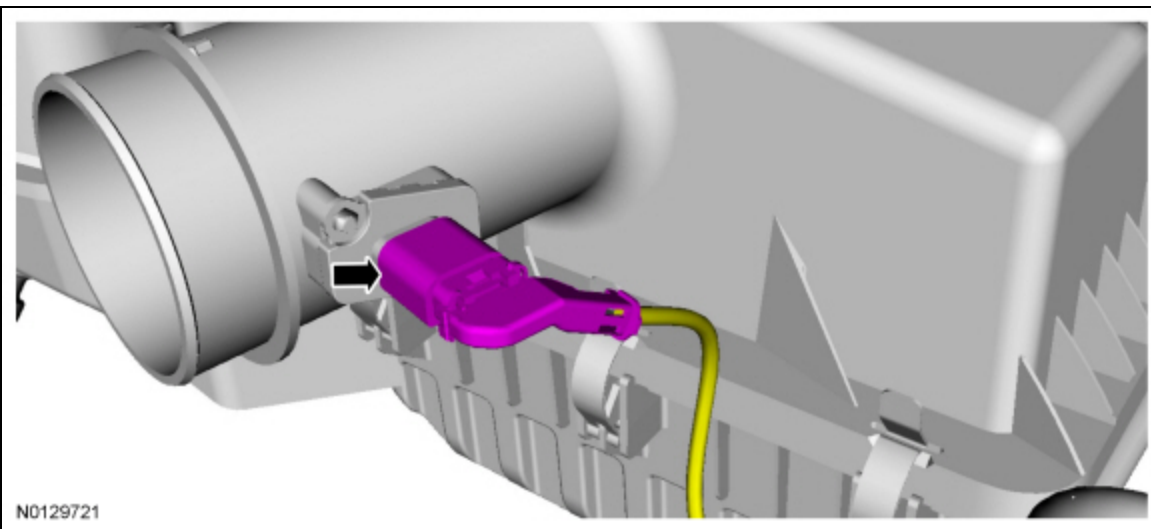

5. Remove the 2 bolts and position the coolant expansion tank aside.

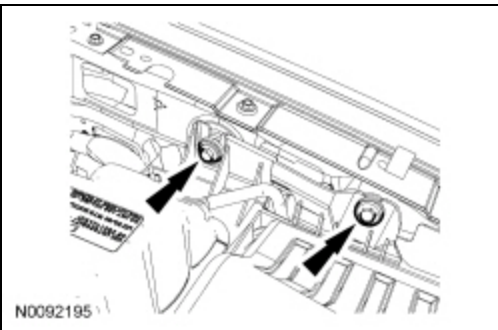

6. Detach the power steering fluid cooler hose retainer from the cooling fan motor and shroud.
7. Detach the wiring harness retainer from the power steering fluid reservoir stud bolt.
8. Remove the nut, detach the generator battery positive cable from the positive battery terminal, detach the 3 wiring harness retainers from the cooling fan shroud and position the wiring harness aside.
 - To install, tighten to 9 Nm (80 lb-in).

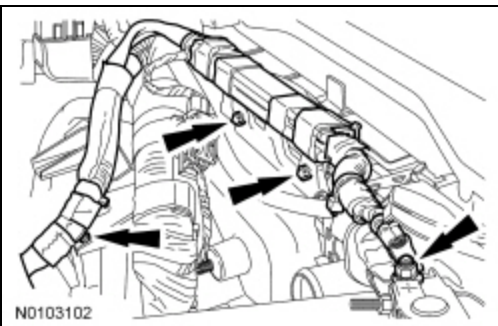

9. Detach the upper radiator hose retainer from the cooling fan motor and shroud.


3.5L Gasoline Turbocharged Direct Injection (GTDI) , 3.7L and 5.0L engines

10. Detach the wiring harness retainer from the stud bolt on the LH side of the cooling fan shroud.
11. Disconnect the positive battery cable. For additional information, refer to Section 414-01.
12. Detach the battery cable retainer from the cooling fan shroud.

All engines

13. **NOTE:** *Push the 2 LH wiring harness retainer tabs outward to release.*

Detach the LH wiring harness retainer and the 3 RH wiring harness pushpins.

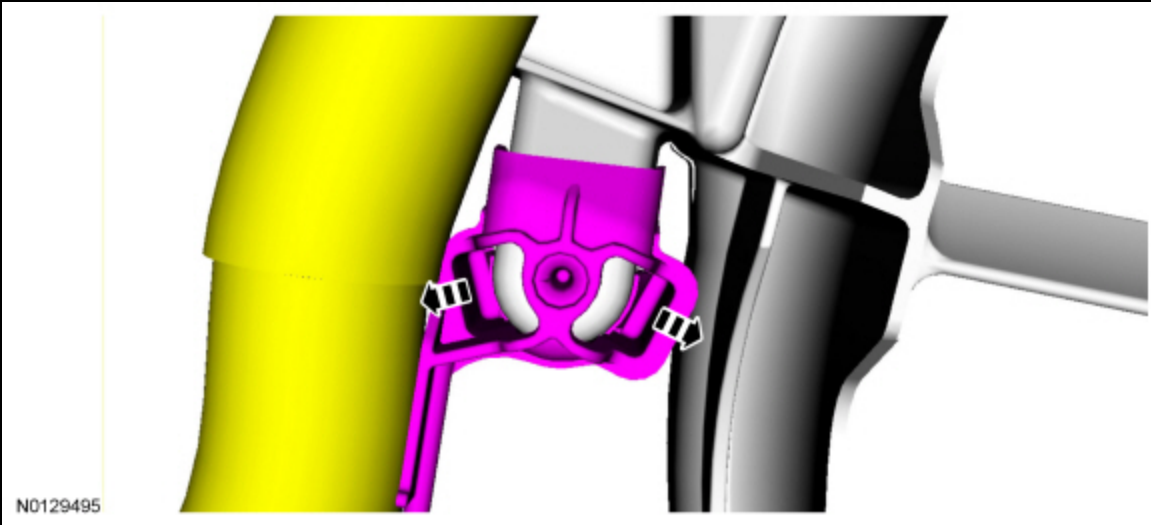

14. Disconnect the 2 cooling fan electrical connectors.

15. Detach the 3 cooling fan wiring harness retainers.

16. Remove the 4 Battery Junction Box (BJB) bracket bolts.

- To install, tighten to 10 Nm (89 lb-in).

3.5L GTDI, 3.7L and 5.0L Engines

17. Position the wiring harness aside.

6.2L engines

18. Remove the power steering fluid reservoir stud bolt and position the power steering fluid reservoir and the wiring harness aside.

- To install, tighten to 11 Nm (97 lb-in).

All engines

19. Remove the 2 bolts and the cooling fan motor and shroud.

- To install, tighten to 7 Nm (62 lb-in).

20. To install, reverse the removal procedure.