
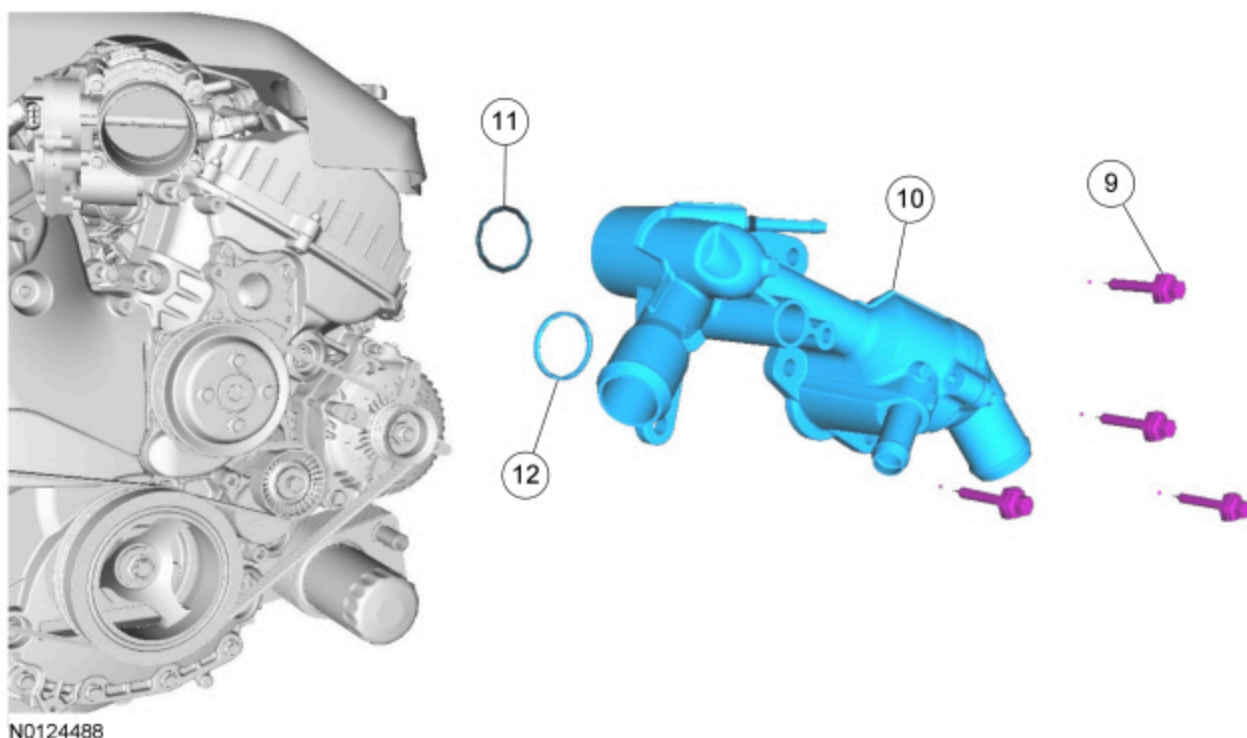


Thermostat Housing — 3.5L GTDI

 [Ford Ecat Electronic Parts Catalog](#)

Material

Item	Specification
Motorcraft® Orange Antifreeze/Coolant Concentrated VC-3-B (US); CVC-3-B2 (Canada)	WSS-M97B44-D

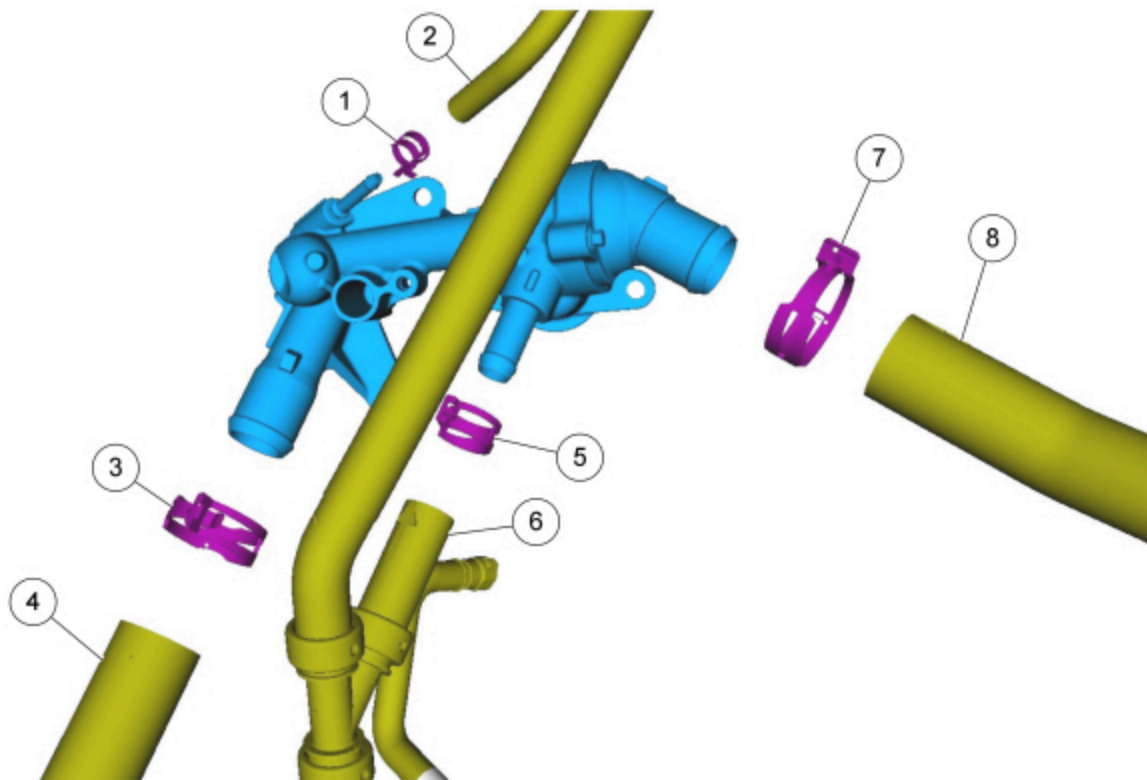

N0124488

Item	Part Number	Description
1	—	Thermostat housing-to-degas bottle hose clamp (part of 8276)
2	8276 8276	Thermostat housing-to-degas bottle hose
3	—	Upper radiator hose clamp (part of 8260)
4	8260 8260	Upper radiator hose
5	—	Heater outlet hose clamp (part of 18472)
6	18472 18472	Heater outlet hose

7	—	Lower radiator hose clamp (part of 8286)
8	8286 8286	Lower radiator hose
9	W714841 W714841	Thermostat housing bolts
10	8592 8592	Thermostat housing
11	8527 8527	Coolant inlet tube O-ring seal
12	8590 8590	Thermostat housing inlet gasket (part of 8592)

Removal

1. Drain the cooling system. For additional information, refer to Cooling System Draining, Filling and Bleeding in this section.
2. Remove the Air Cleaner (ACL) outlet pipe, the ACL outlet pipe-to-LH turbocharger pipe and the LH turbocharger-to-Charge Air Cooler (CAC) pipe. For additional information, refer to Section 303-12.


3. **NOTICE: Cover the accessory drive belts to prevent coolant contamination of the belts.**

Completely cover the accessory drive belts with waterproof plastic.


4. **NOTICE: Install the oil fill cap to prevent debris from falling into the engine.**

Remove the oil fill cap and the engine appearance cover.

- Install the oil fill cap.

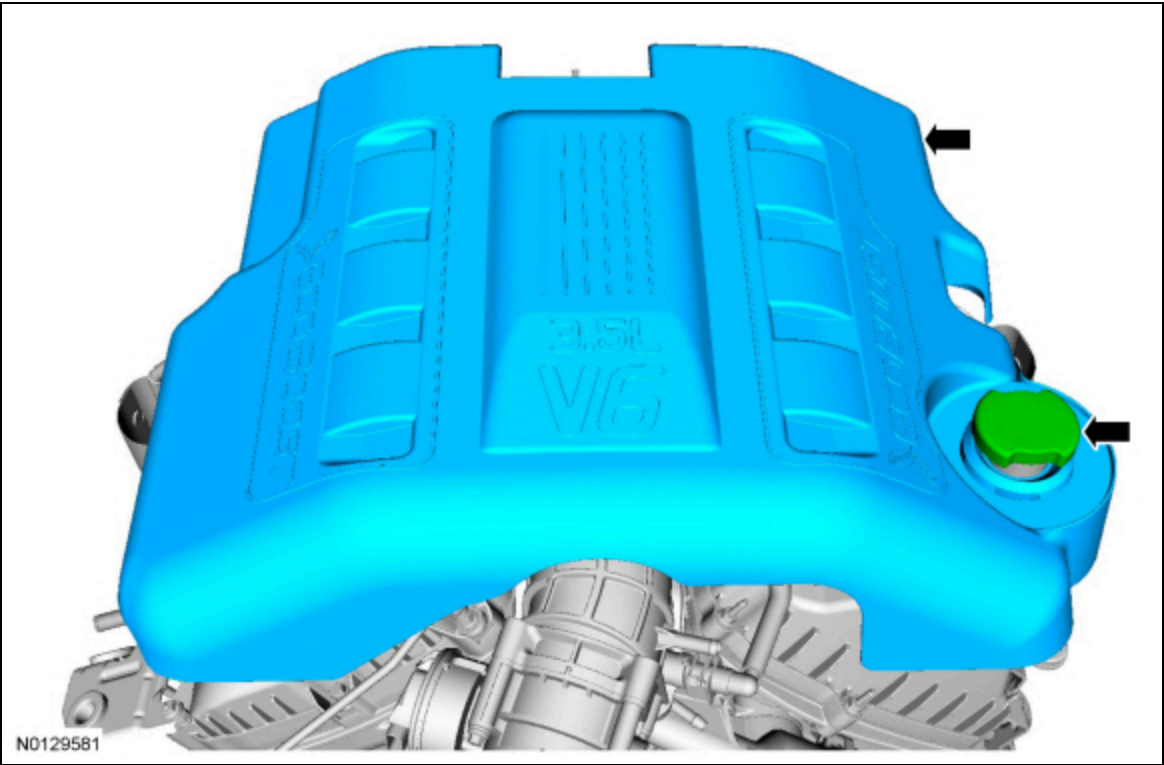

5. If equipped, disconnect the block heater electrical connector.
6. Remove the bolt and the LH turbocharger-to-CAC tube bracket.

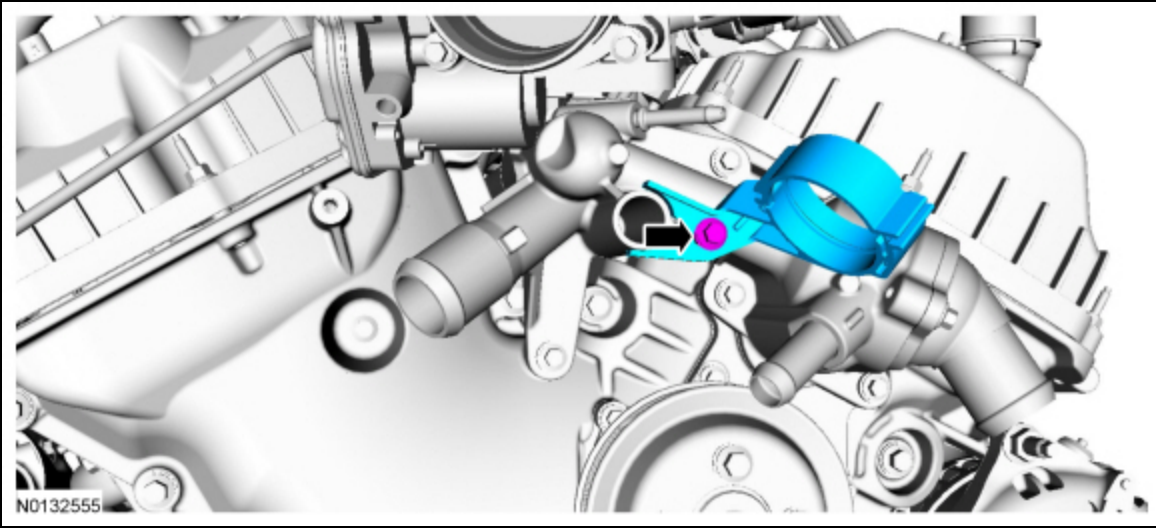

7. Release the clamp and disconnect the degas bottle-to-thermostat housing hose from the thermostat housing.
8. Release the clamp and disconnect the lower radiator hose from the thermostat housing.
9. Release the clamp and disconnect the heater outlet hose from the thermostat housing.
10. Release the clamp and disconnect the upper radiator hose from the thermostat housing.
11. Remove the 4 thermostat housing bolts.
12. **NOTICE: Do not allow the coolant inlet pipe to come out of the coolant crossover manifold assembly or the coolant inlet pipe O-ring seal may be damaged.**


NOTE: Use the ear on the top of the coolant inlet pipe to prevent the coolant pipe from coming out of the coolant crossover manifold assembly.

Remove the thermostat housing.

13. Remove and discard the gasket and the O-ring seal.

Installation

1. Install a new gasket and a new O-ring seal.
 - Lubricate the O-ring seal with clean engine coolant.
2. Position the thermostat housing, install the 4 bolts and tighten the 4 bolts in the sequence shown in 2 stages.
 - Stage 1: Tighten to 8 Nm (71 lb-in)
 - Stage 2: Tighten an additional 45 degrees.

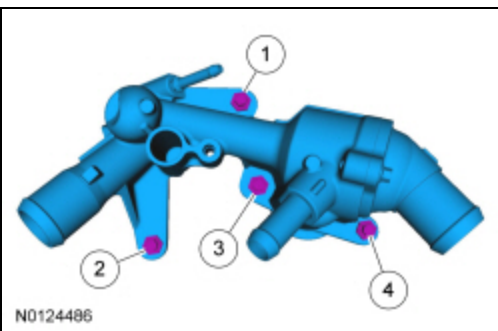


3. Connect the upper radiator hose to the thermostat housing and position the clamp.
4. Connect the heater outlet hose to the thermostat housing and position the clamp.
5. Connect the lower radiator hose to the thermostat housing and position the clamp.

6. Connect the degas bottle-to-thermostat housing hose to the thermostat housing and position the clamp.

7. Install the LH turbocharger-to-CAC tube bracket and the bolt.


- Tighten to 6 Nm (53 lb-in).

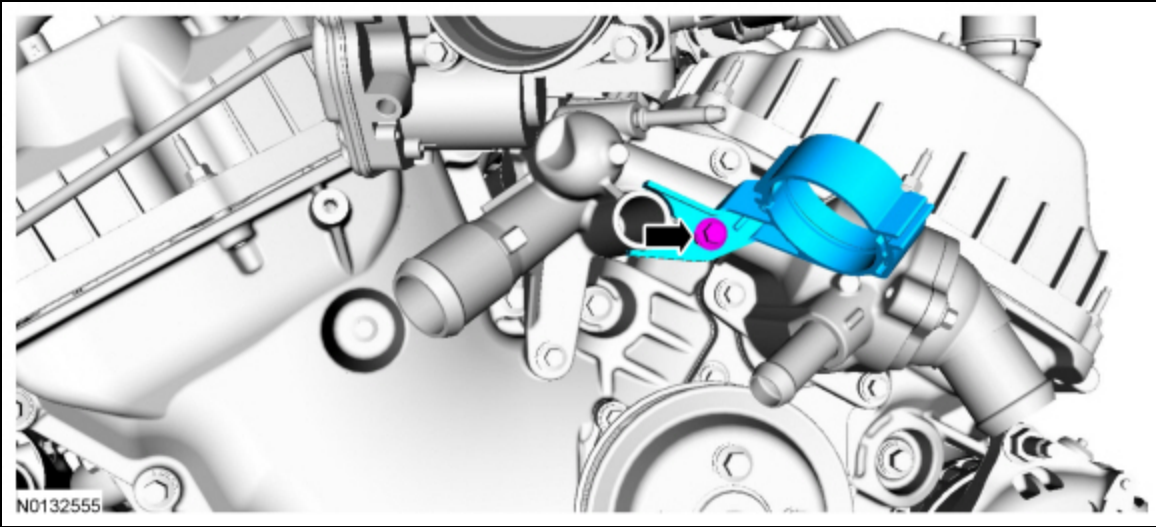

8. If equipped, connect the block heater electrical connection.

9. Remove the oil fill cap and install the engine appearance cover.

- Install the oil fill cap.

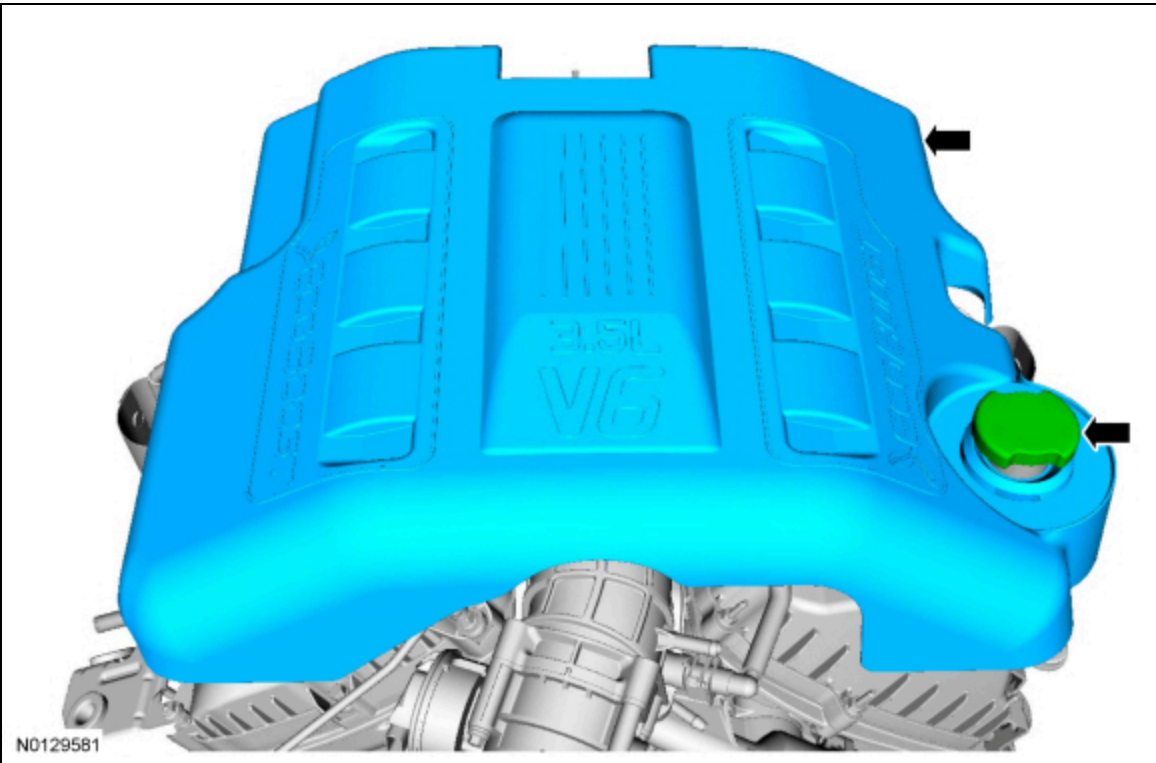

10. Remove the waterproof plastic from the accessory drive belts.

11. Install the LH turbocharger-to-Charge Air Cooler (CAC) pipe, the ACL outlet pipe-to-LH turbocharger pipe and the Air Cleaner (ACL) outlet pipe. For additional information, refer to Section 303-12.

12. Fill and bleed the engine cooling system. For additional information, refer to Cooling System Draining, Filling and Bleeding in this section.