


Thermostat Housing – 3.7L

 [Ford Ecat Electronic Parts Catalog](#)

Material

Item	Specification
Motorcraft® Orange Antifreeze/Coolant Concentrated VC-3-B (US); CVC-3-B2 (Canada)	WSS-M97B44-D

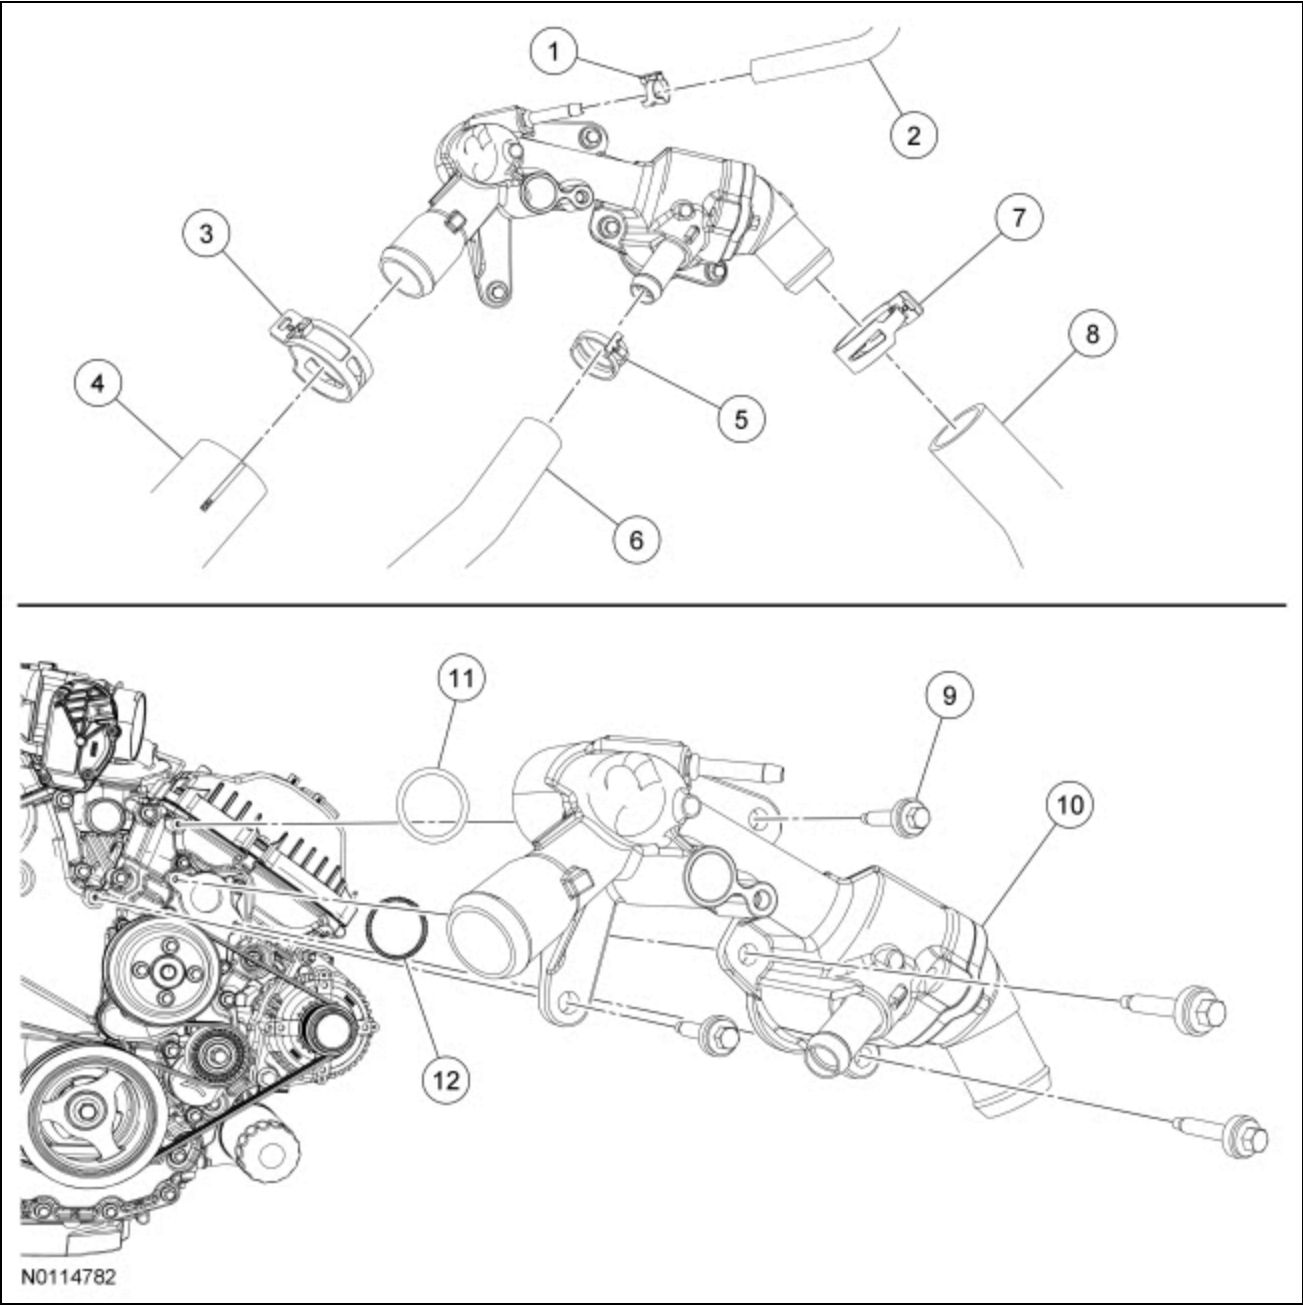

Item	Part Number	Description
1	15161 15161	Thermostat housing-to-degas bottle hose clamp
2	8276 8276	Thermostat housing-to-degas bottle hose

3	15161 15161	Upper radiator hose clamp
4	8260 8260	Upper radiator hose
5	15161 15161	Coolant return hose clamp
6	8K289 8K289	Coolant return hose
7	15161 15161	Lower radiator hose clamp
8	8286 8286	Lower radiator hose
9	W714841 W714841	Thermostat housing bolts
10	8A586 8A586	Thermostat housing
11	8565 8565	Coolant inlet tube O-ring seal
12	8A571 8A571	Thermostat housing inlet O-ring seal (part of 8A586)

Removal


1. Drain the cooling system For additional information, refer to Cooling System Draining, Filling and Bleeding in this section.
2. Remove the air cleaner outlet pipe. For additional information, refer to Section 303-12.
3. **NOTICE: Cover the accessory drive belts to prevent coolant contamination of the belts.**

Completely cover the accessory drive belts with waterproof plastic.

4. Release the clamp and disconnect the thermostat housing-to-degas bottle from the thermostat housing.
5. Release the clamp and disconnect the lower radiator hose from the thermostat housing.
6. Release the clamp and disconnect the coolant return hose from the thermostat housing.
7. Release the clamp and disconnect the upper radiator hose from the thermostat housing.
8. Remove the 4 bolts and the thermostat housing.
 - Remove and discard the 2 O-ring seals.

Installation

1. Install 2 new O-ring seals and lubricate them with clean engine coolant.
2. Position the thermostat housing and install the bolts finger tight.
3. Tighten the 4 thermostat housing bolts in the sequence shown in 2 stages.
 - Stage 1: Tighten to 8 Nm (71 lb-in)
 - Stage 2: Tighten an additional 45 degrees.

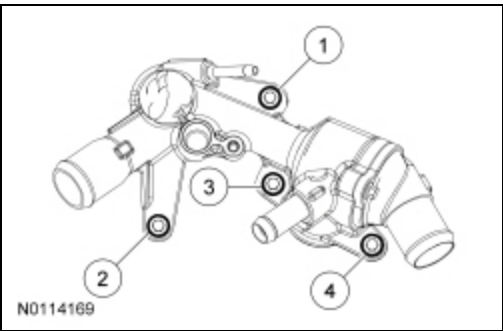

4. Connect the upper radiator hose to the thermostat housing and position the clamp.

5. Connect the coolant return hose to the thermostat housing and position the clamp.
6. Connect the lower radiator hose to the thermostat housing and position the clamp.
7. Connect the thermostat housing-to-degas bottle to the thermostat housing and position the clamp.
8. Install the air cleaner outlet pipe. For additional information, refer to Section 303-12.
9. Fill and bleed the cooling system. For additional information, refer to Cooling System Draining, Filling and Bleeding in this section.