


Thermostat Housing — 5.0L

 [Ford Ecat Electronic Parts Catalog](#)

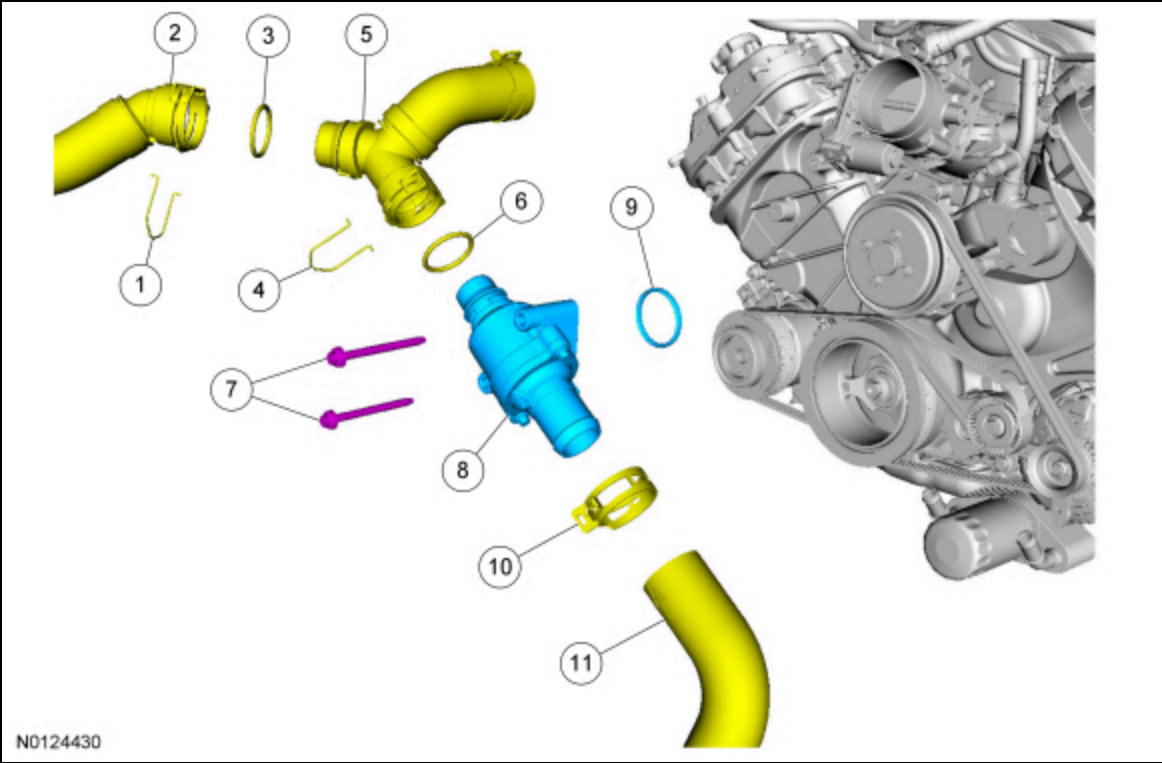

Item	Part Number	Description
1	8B3658B365	Upper radiator hose spring clip (part of 8260)
2	82608260	Upper radiator hose
3	85908590	Upper radiator hose O-ring seal (part of 8260)
4	8B3658B365	Upper radiator hose T-connector spring clip (part of 8566)
5	85668566	Upper radiator hose T-connector
6	85908590	Upper radiator hose T-connector O-ring seal (part of 8566)
7	W713197W713197	Thermostat housing bolts - 10 Nm (89 lb-in) (2 required)
8	8A5868A586	Thermostat housing
9	85908590	Thermostat housing gasket (part of 8592)
10	—	Lower radiator hose clamp (part of 8286)
11	82868286	Lower radiator hose

Removal and Installation

1. Drain the cooling system. For additional information, refer to Cooling System Draining, Filling and Bleeding in this section.
2. **NOTICE:** Remove the accessory drive belt to prevent coolant contamination of the belt.

Remove the accessory drive belt. For additional information, refer to Section 303-05.

- To install, rinse off any coolant from the accessory drive pulleys using clear water.

3. NOTICE: Cover the A/C compressor drive belt to prevent coolant contamination of the belt.


Completely cover the A/C compressor belt with waterproof plastic.

4. Release the clamp and disconnect the lower radiator hose from the coolant inlet connection.

5. NOTE: *The quick connect coupling illustrated is to show the spring clip release location only. The quick connect coupling on the hose may differ.*

Pull the upper radiator hose spring clip up until the end of the clip is in the detent on the quick connect coupling and disconnect the upper radiator hose from the upper radiator hose T-connector.

- To install, push the spring clip in place and connect the upper radiator hose quick connect coupling, making sure the coupling is secure.

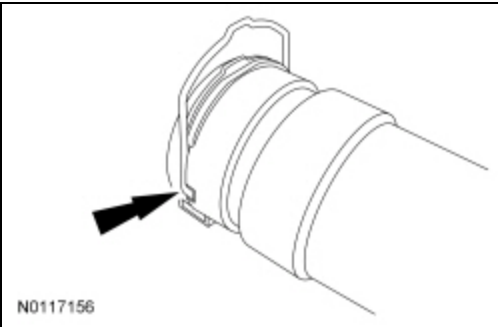


6. Remove the thermostat housing bolts.

- To install, tighten to 10 Nm (89 lb-in).

7. NOTE: *The quick connect coupling illustrated is to show the spring clip release location only. The quick connect coupling on the hose may differ.*

Pull the upper radiator hose T-connector spring clip up until the end of the clip is in the detent on the quick connect coupling and remove the thermostat housing from the upper radiator hose T-connector.

- Remove and discard the thermostat housing gasket.
- To install, align the tab on the thermostat housing with the slot in the upper radiator hose T-connector.
- To install, push the spring clip in place and connect the thermostat housing to the upper radiator hose T-connector quick connect coupling, making sure the coupling is secure.

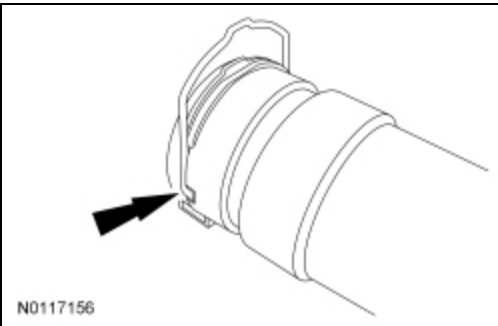

8. To install, reverse the removal procedure.

- Use a new thermostat housing gasket.

9. Fill and bleed the cooling system. For additional information, refer to Cooling System Draining, Filling and Bleeding in this section.