


Thermostat — 6.2L

 [Ford Ecat Electronic Parts Catalog](#)

Material


Item	Specification
Motorcraft® Metal Surface Prep ZC-31-B	—
Motorcraft® Silicone Gasket Remover ZC-30-A	—

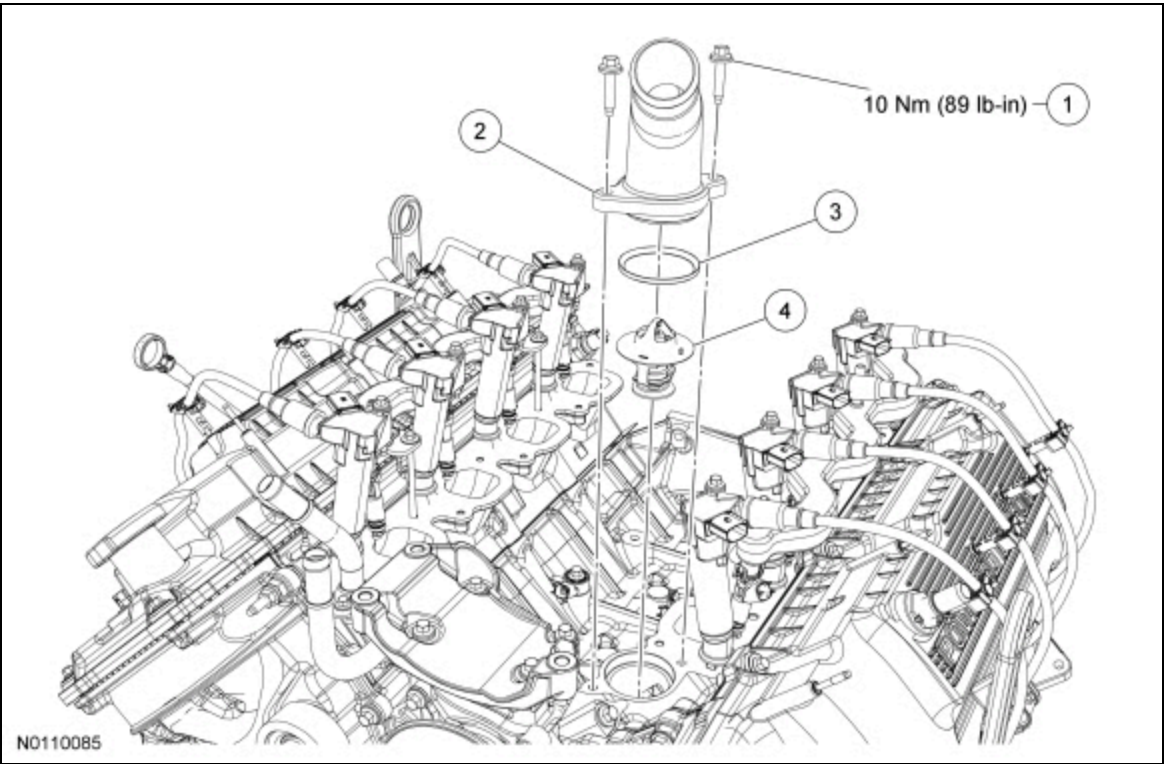

Item	Part Number	Description
1	W503278 W503278	Coolant outlet connection bolt (2 required)
2	8594 8594	Coolant outlet connection
3	N806807 N806807	O-ring seal
4	8575 8575	Thermostat

Removal and Installation

1. Drain the cooling system. For additional information, refer to Cooling System Draining, Filling and Bleeding in this section.
2. Remove the air cleaner outlet tube. For additional information, refer to Section 303-12.
3. If a new coolant outlet connection is being installed, release the clamp and disconnect the upper radiator hose.

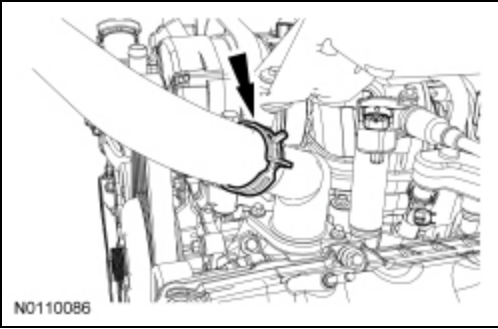

4. Remove the 2 bolts, the thermostat housing and the thermostat. Discard the O-ring seal.

- Inspect the mating surfaces. Clean the sealing surfaces with metal surface prep and silicone gasket remover. Follow the directions on the packaging.
- If necessary, install a new thermostat with the spring facing down.
- Install a new O-ring seal.

- **NOTE:** *Make sure the thermostat housing is seated evenly by hand tightening the 2 coolant outlet connection bolts prior to final tightening.*

To install, tighten to 10 Nm (89 lb-in).

5. To install, reverse the removal procedure.

6. Fill and bleed the cooling system. For additional information, refer to Cooling System Draining, Filling and Bleeding in this section.