


Fuel Rail and Fuel Injector — Exploded View


 [Ford Ecat Electronic Parts Catalog](#)

3.5L Gasoline Turbocharged Direct Injection (GTDI) Fuel Rails and High Pressure Fuel Tube

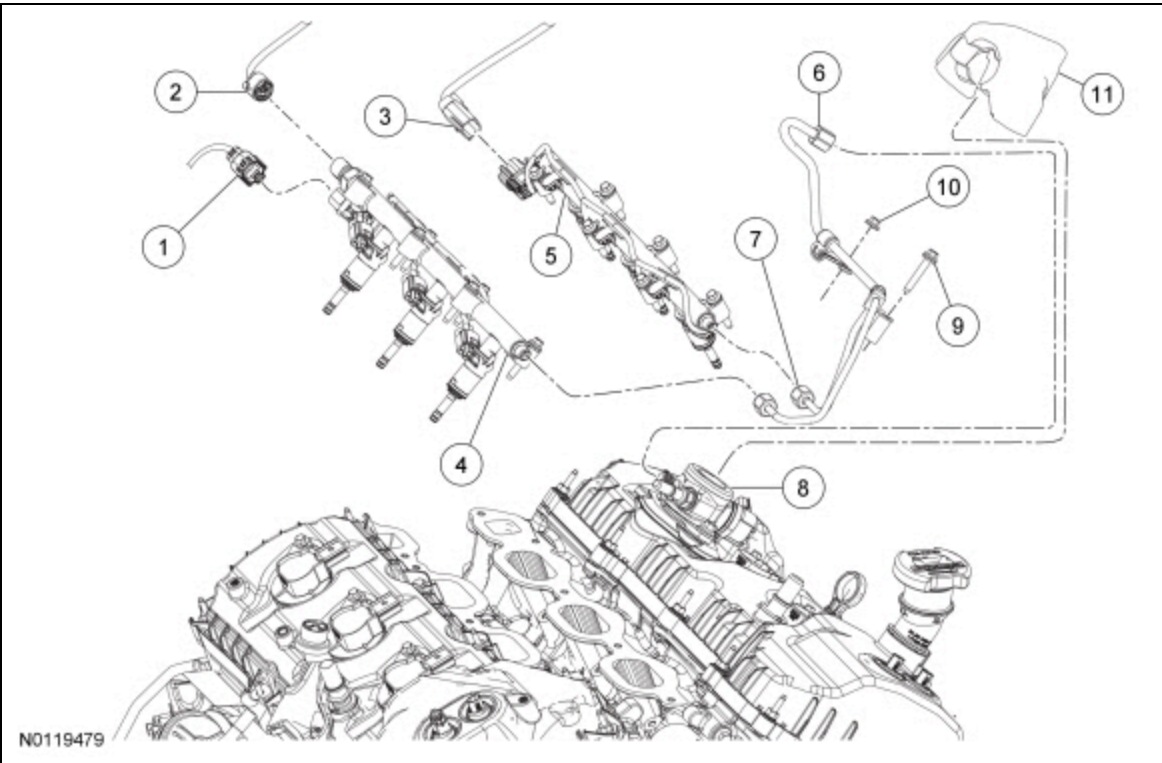


Item	Part Number	Description
1	—	RH fuel charge wire harness electrical connector (part of 12A581)
2	—	Fuel Rail Pressure (FRP) sensor electrical connector (part of 12A581)
3	—	LH fuel charge wire harness electrical connector (part of 12A581)
4	9D2809D280	RH fuel rail
5	9D2809D280	LH fuel rail
6	—	High pressure fuel tube-to-fuel injection pump flare nut (part of 9J323)
7	—	High pressure fuel tube-to-fuel rail flare nut (part of 9J323)
8	93509350	Fuel injection pump
9	W503282W503282	High pressure fuel tube bracket bolt
10	W520100W520100	High pressure fuel tube bracket nut
11	9K5409K540	Fuel injection pump noise insulator shield

3.5L GTDI LH Fuel Rail and Fuel Injectors

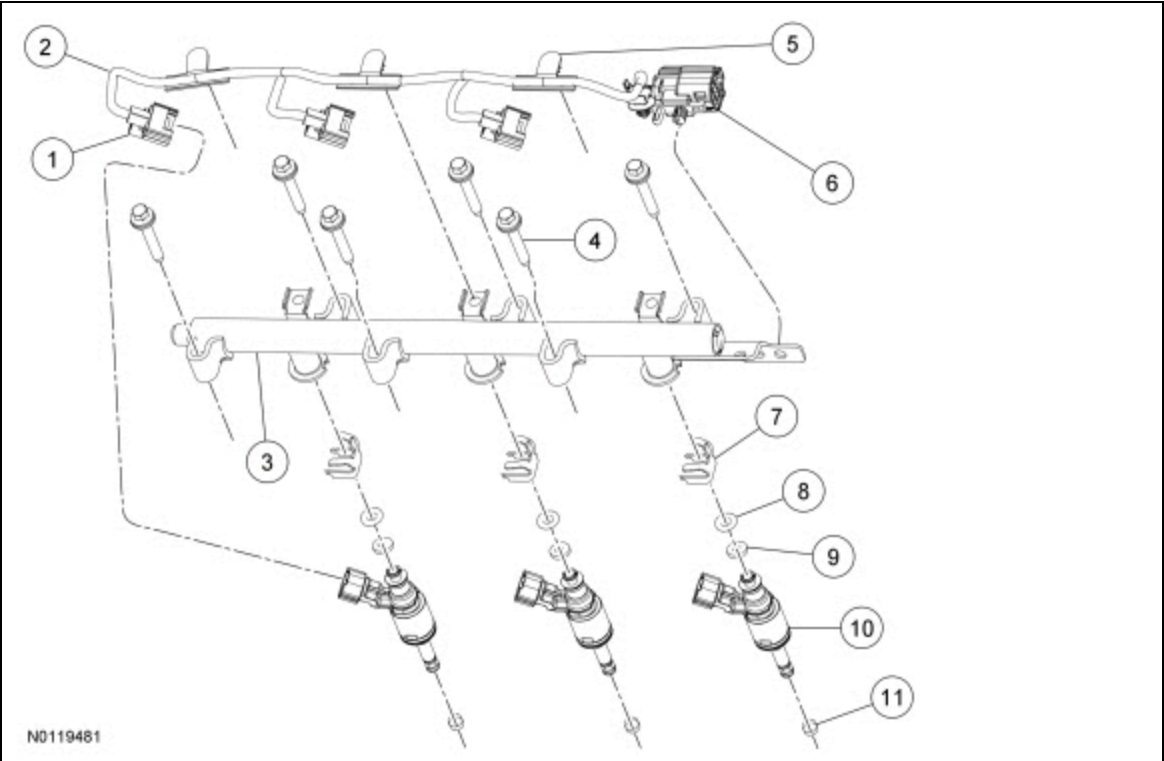

Item	Part Number	Description
1	—	Fuel injector electrical connector (part of 12B637) (3 required)
2	12B637 12B637	LH fuel charge wire harness
3	9D280 9D280	LH fuel rail
4	W503280 W503280	Fuel rail bolt (6 required)
5	13A506 13A506	LH fuel charge wire harness retainer (3 required)
6	—	LH fuel charge wire harness electrical connector (part of 12B637)
7	—	Fuel injector clip (part of 9229) (3 required)
8	—	Upper fuel injector O-ring seal (part of 9229)(3 required)
9	—	Upper fuel injector O-ring seal support ring (part of 9229) (3 required)
10	9F593 9F593	Fuel injector (3 required)
11	—	Lower fuel injector Teflon® seal (part of 9229) (3 required)

3.5L GTDI RH Fuel Rail and Fuel Injectors

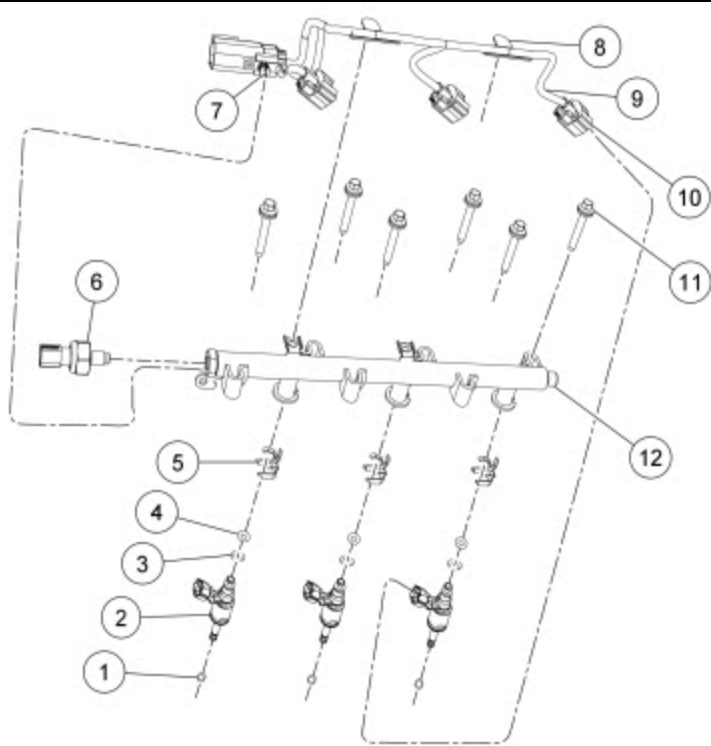

N0130113

Item	Part Number	Description
1	—	Lower fuel injector Teflon® seal (part of 9229) (3 required)
2	9F593 9F593	Fuel injector (3 required)
3	—	Upper fuel injector O-ring seal support ring (part of 9229) (3 required)
4	—	Upper fuel injector O-ring seal (part of 9229) (3 required)
5	—	Fuel injector clip (part of 9229) (3 required)
6	9F972 9F972	FRP sensor
7	—	RH fuel charge wire harness electrical connector (part of 12B637)
8	13A506 13A506	RH fuel charge wire harness retainer (2 required)
9	12B637 12B637	RH fuel charge wire harness
10	—	Fuel injector electrical connector (part of 12B637) (3 required)
11	W503280 W503280	Fuel rail bolt (6 required)
12	9D2809 9D280	RH fuel rail

NOTE: [Refer to the on-line Workshop Manual to view this illustration as an interactive exploded view, requires Adobe® Acrobat® 8.0 or higher.](#)

NOTE: [Refer to the on-line Workshop Manual to learn about using an Interactive Illustration.](#)

1. For additional information, refer to the procedures in this section.