


Fuel Rail and Fuel Injector — Exploded View

 [Ford Ecat Electronic Parts Catalog](#)

NOTE: [Refer to the on-line Workshop Manual to view this illustration as an interactive exploded view, requires Adobe® Acrobat® 8.0 or higher.](#)

NOTE: [Refer to the on-line Workshop Manual to learn about using an Interactive Illustration.](#)

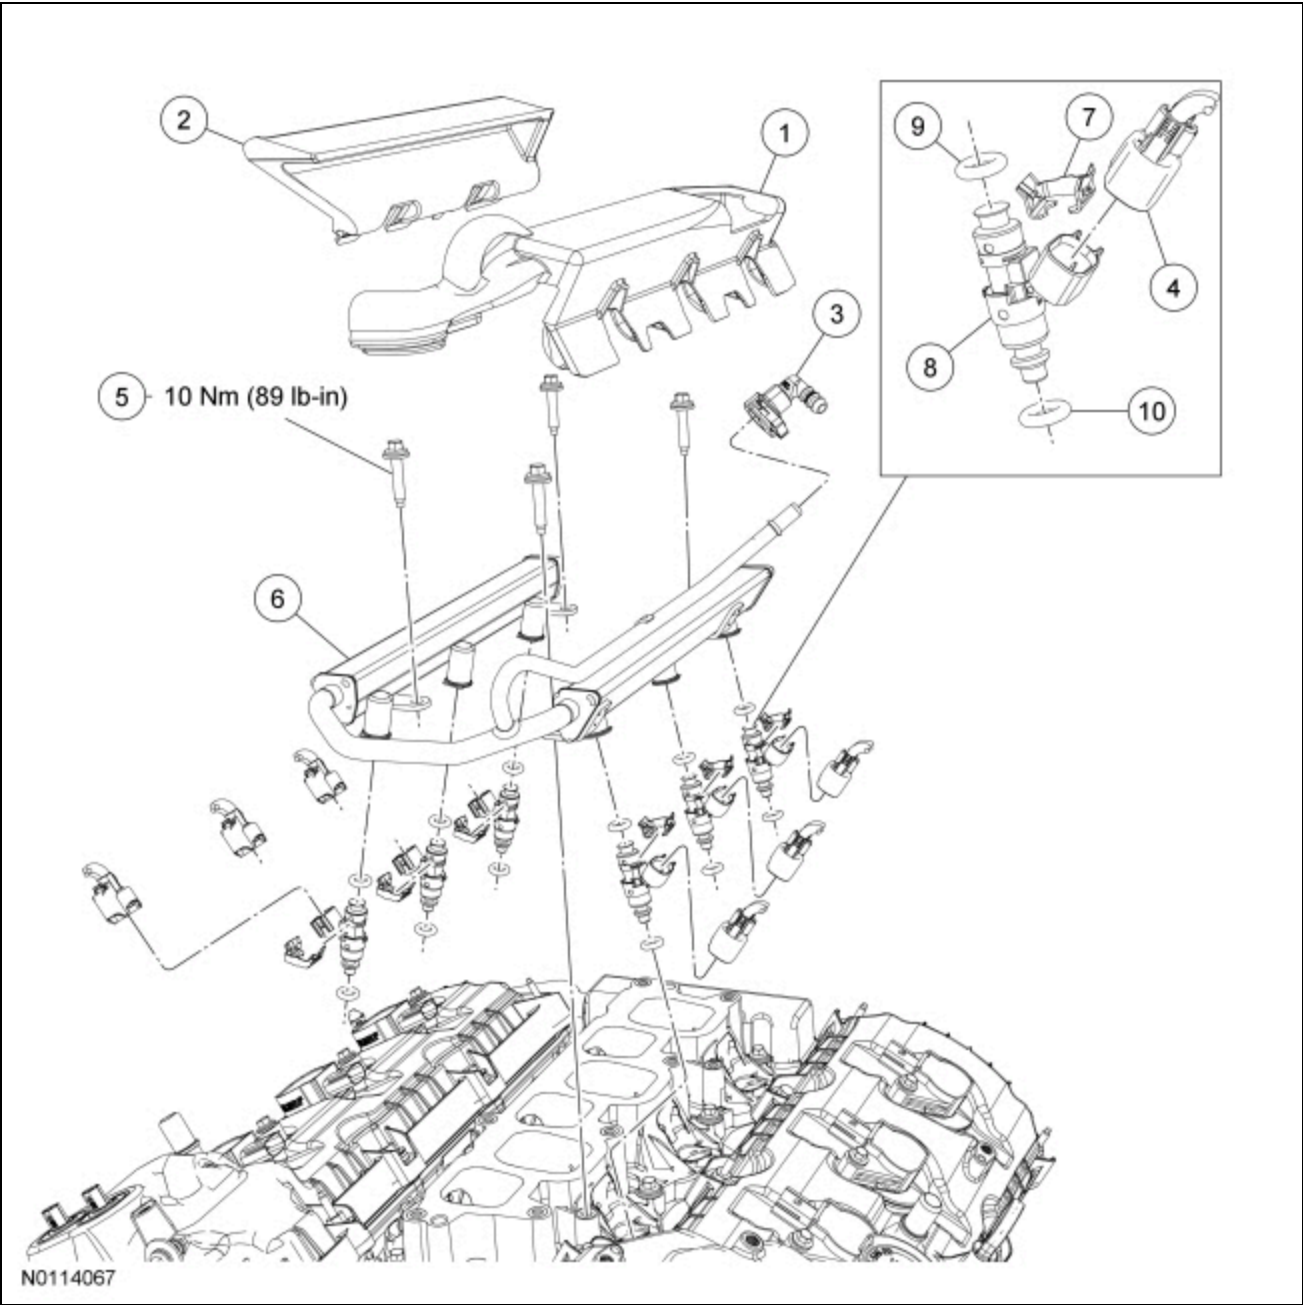

Item	Part Number	Description
1	6P0136P013	LH fuel rail noise insulator shield
2	6P0136P013	RH fuel rail noise insulator shield
3	—	Fuel tube-to-fuel rail quick connect coupling (part of 9J280)

4	—	Fuel injector electrical connector (part of 14A411) (6 required)
5	W503279 W503279	Fuel rail bolt (4 required)
6	9F792 9F792	Fuel rail
7	9C995 9C995	Fuel injector clip (6 required)
8	9F593 9F593	Fuel injector (6 required)
9	9229 9229	Upper fuel injector O-ring seal (6 required)
10	9229 9229	Lower fuel injector O-ring seal (6 required)

1. Refer to the procedures and/or exploded views in this section for any Warnings, Notices, Notes, Materials, Specifications, and Special Tools. Items in the exploded views may not be listed in order of removal.