


Throttle Body

 [Ford Ecat Electronic Parts Catalog](#)

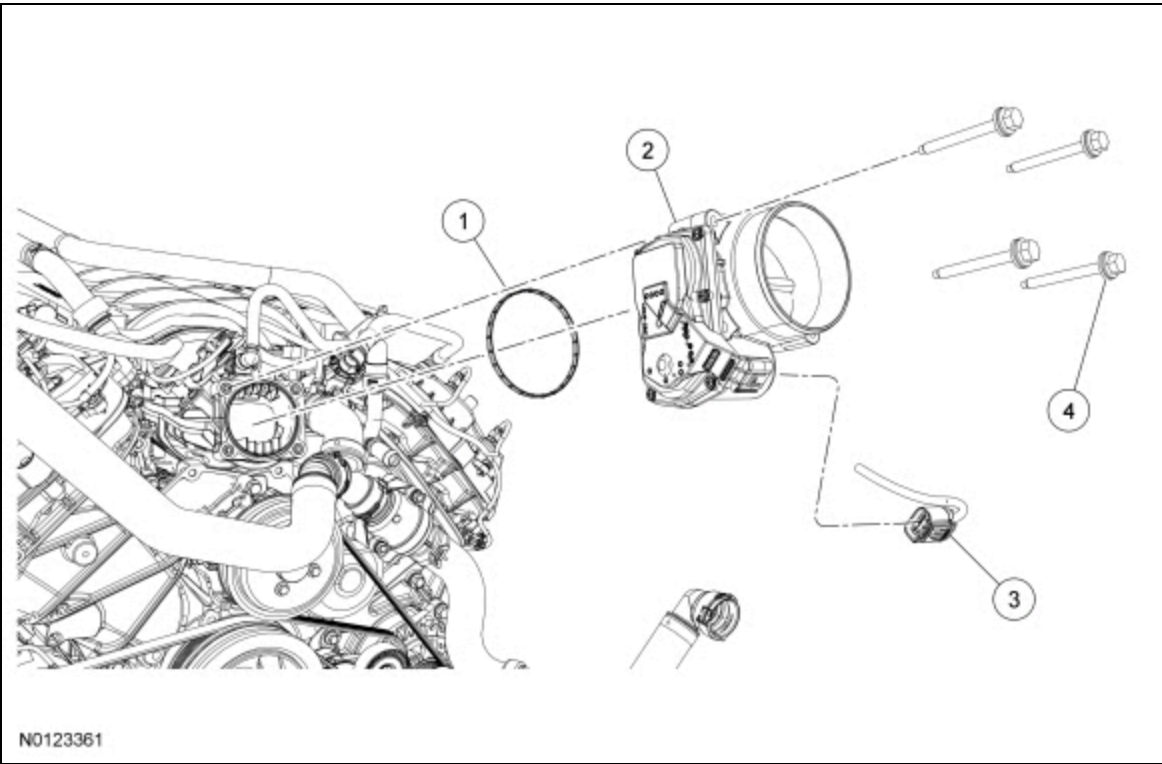

Item	Part Number	Description
1	9E936 9E936	Throttle Body (TB) gasket
2	9E926 9E926	TB
3	—	Electronic throttle control electrical connector (part of 12A581)
4	W714866 W714866	TB bolt (4 required)

Removal

1. Remove the Air Cleaner (ACL) outlet pipe. For additional information, refer to Section 303-12.
2. Disconnect the Electronic Throttle Control (ETC) electrical connector.
3. Remove the 4 bolts and the Throttle Body (TB)
 - Discard the gasket.

Installation

1. Using a new gasket, position the TB and install the 4 bolts loosely.
2. While holding the TB in the most upward position tighten the 4 bolts in 2 stages.
 - Stage 1: Tighten to 10 Nm (89 lb-in).
 - Stage 2: Tighten an additional 45 degrees.
3. Connect the ETC electrical connector.

4. Install the ~~ACL~~ outlet pipe. For additional information, refer to Section 303-12.