


Fuel Pump Control Module

 [Ford Ecat Electronic Parts Catalog](#)

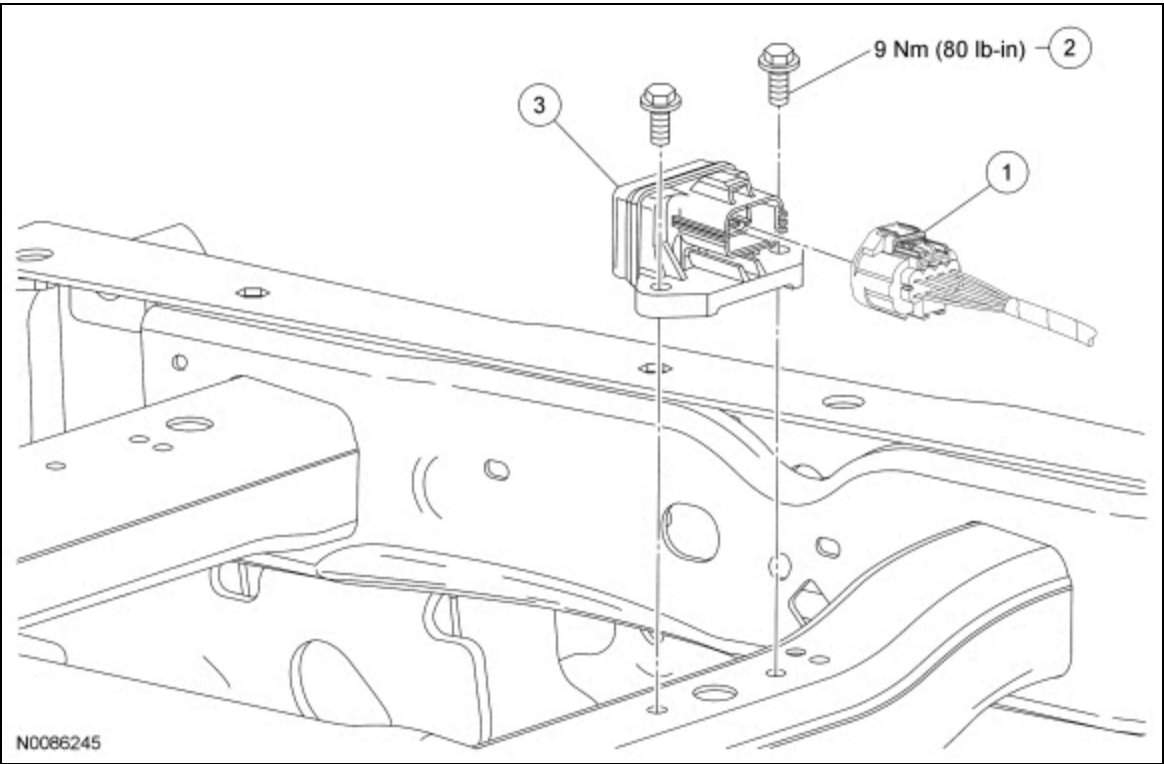

Item	Part Number	Description
1	14A464 14A464	Fuel Pump (FP) control module electrical connector (part of 14404)
2	W705549 W705549	FP control module bolt (2 required)
3	9D4129 9D412	FP control module

Removal and Installation

1. Disconnect the Fuel Pump (FP) control module electrical connector.
2. Remove the 2 bolts and the FP control module.
 - To install, tighten to 9 Nm (80 lb-in).
3. To install, reverse the removal procedure.