


Fuel Rail and Fuel Injector — Exploded View


 [Ford Ecat Electronic Parts Catalog](#)

Air Cleaner (ACL) Outlet Pipe-to-Throttle Body (TB) Adapter

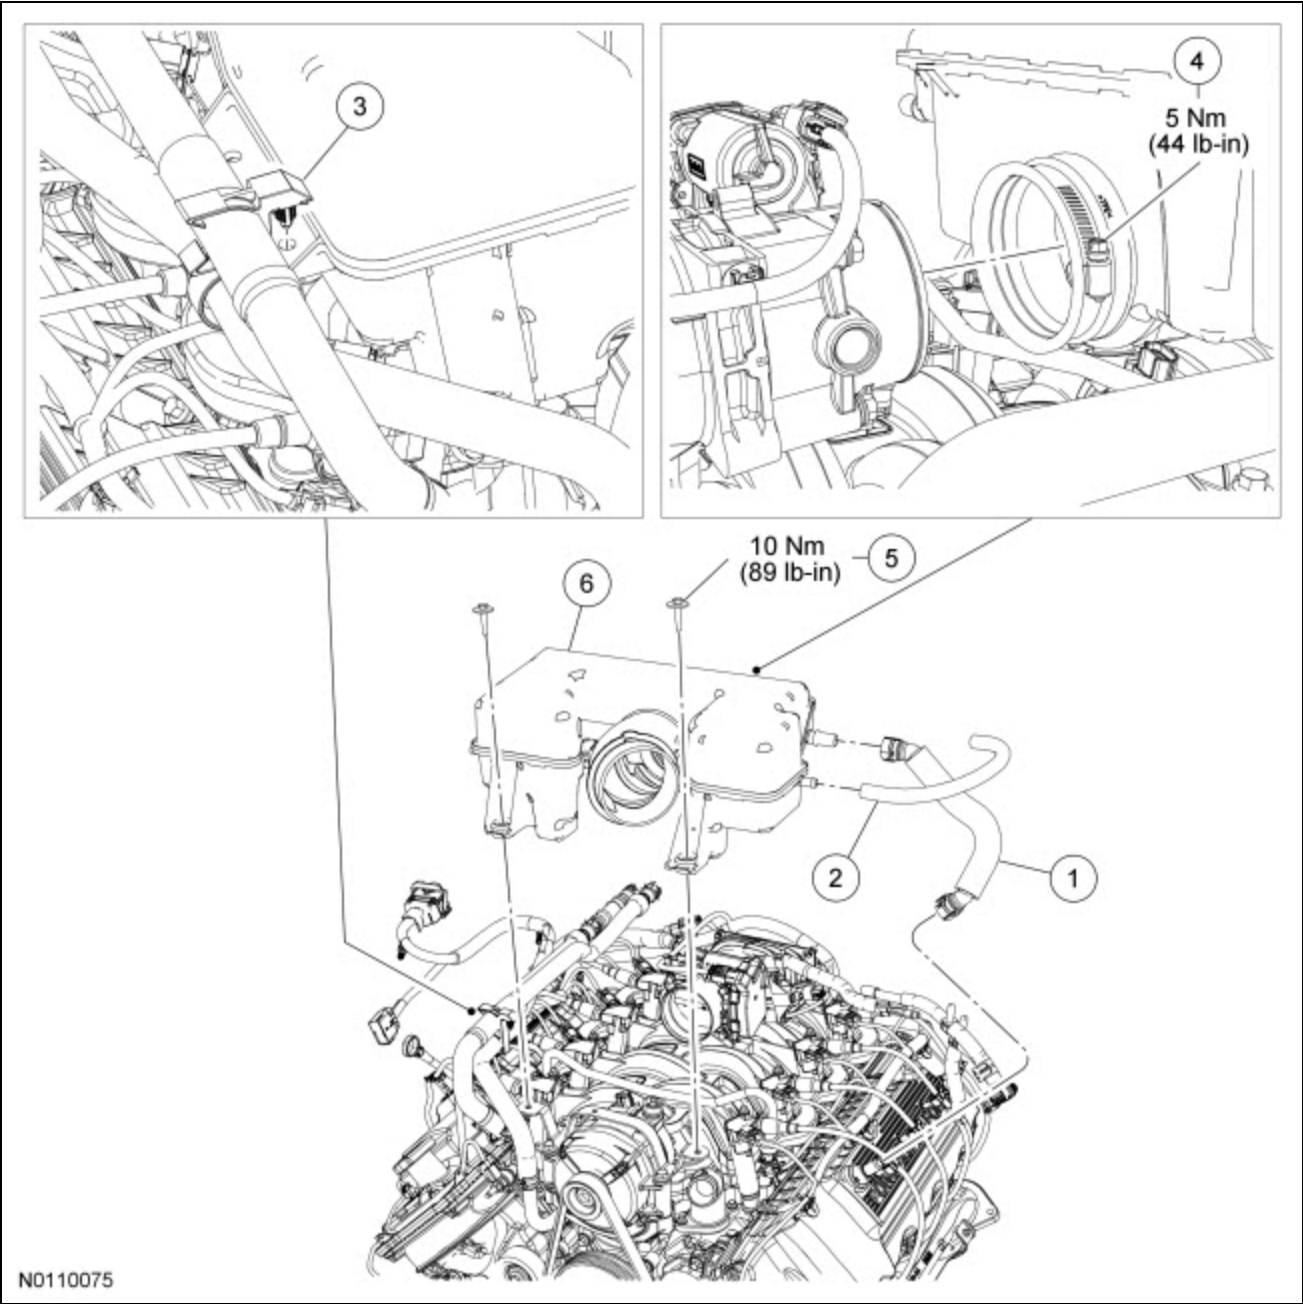

Item	Part Number	Description
1	6758 6758	Crankcase ventilation tube
2	9C490 9C490	Brake booster vacuum hose
3	—	Heater coolant hose position retainer
4	—	Throttle Body (TB) adapter-to-TB clamp (part of 9F805)
5	W505426 W505426	Air Cleaner (ACL) outlet pipe-to-TB adapter bolt (2 required)

Fuel Rail and Fuel Injectors

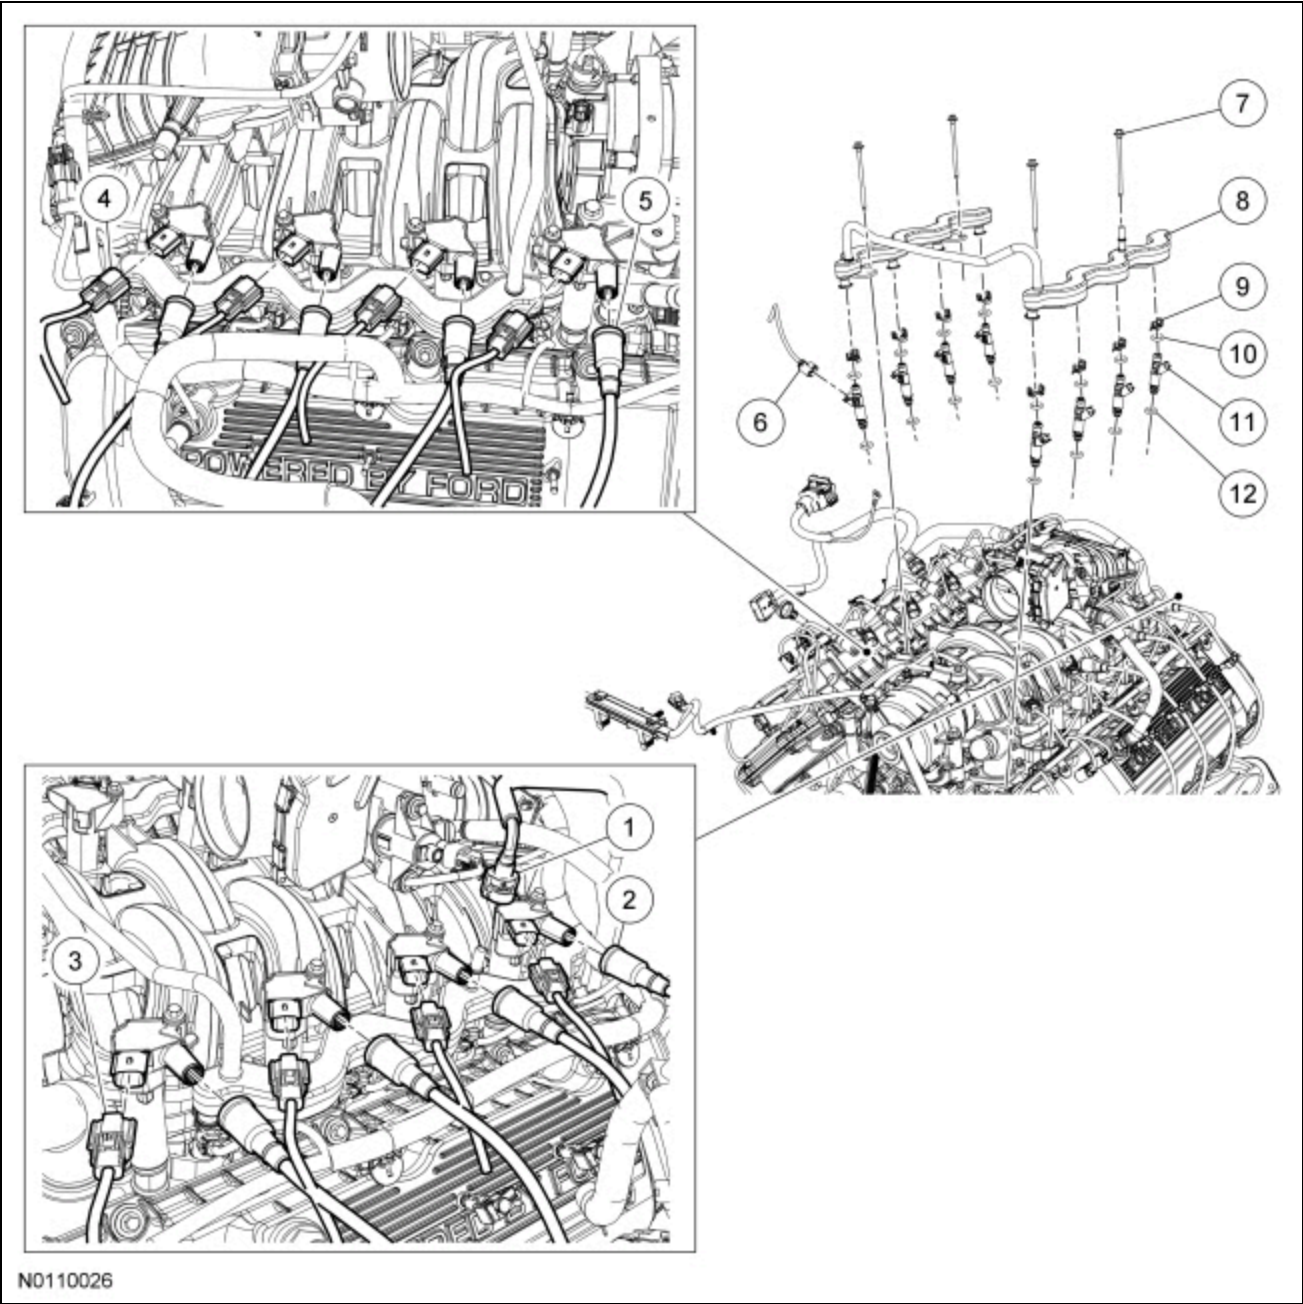

Item	Part Number	Description
1	—	Fuel supply tube quick connect coupling
2	1228612286	LH ignition wire (4 required)
3	1202912029	LH ignition coil electrical connector (part of 12B637) (4 required)
4	1202912029	RH ignition coil electrical connector (part of 12B637) (4 required)
5	1228612286	RH ignition wire (4 required)
6	14A46414A464	Fuel injector electrical connector (part of 12B637) (8 required)
7	W714633W714633	Fuel rail bolt (4 required)

8	9F792 9F792	Fuel rail
9	9C995 9C995	Fuel injector-to-fuel rail locking clip (8 required)
10	9U509 9U509	Fuel injector-to-fuel rail O-ring (8 required)
11	9F593 9F593	Fuel injector (8 required)
12	9U509 9U509	Fuel injector-to-intake manifold O-ring (8 required)

1. For additional information, refer to the procedures in this section.