


Throttle Body

 [Ford Ecat Electronic Parts Catalog](#)


Air Cleaner (ACL) Outlet Pipe-to-Throttle Body (TB) Adapter

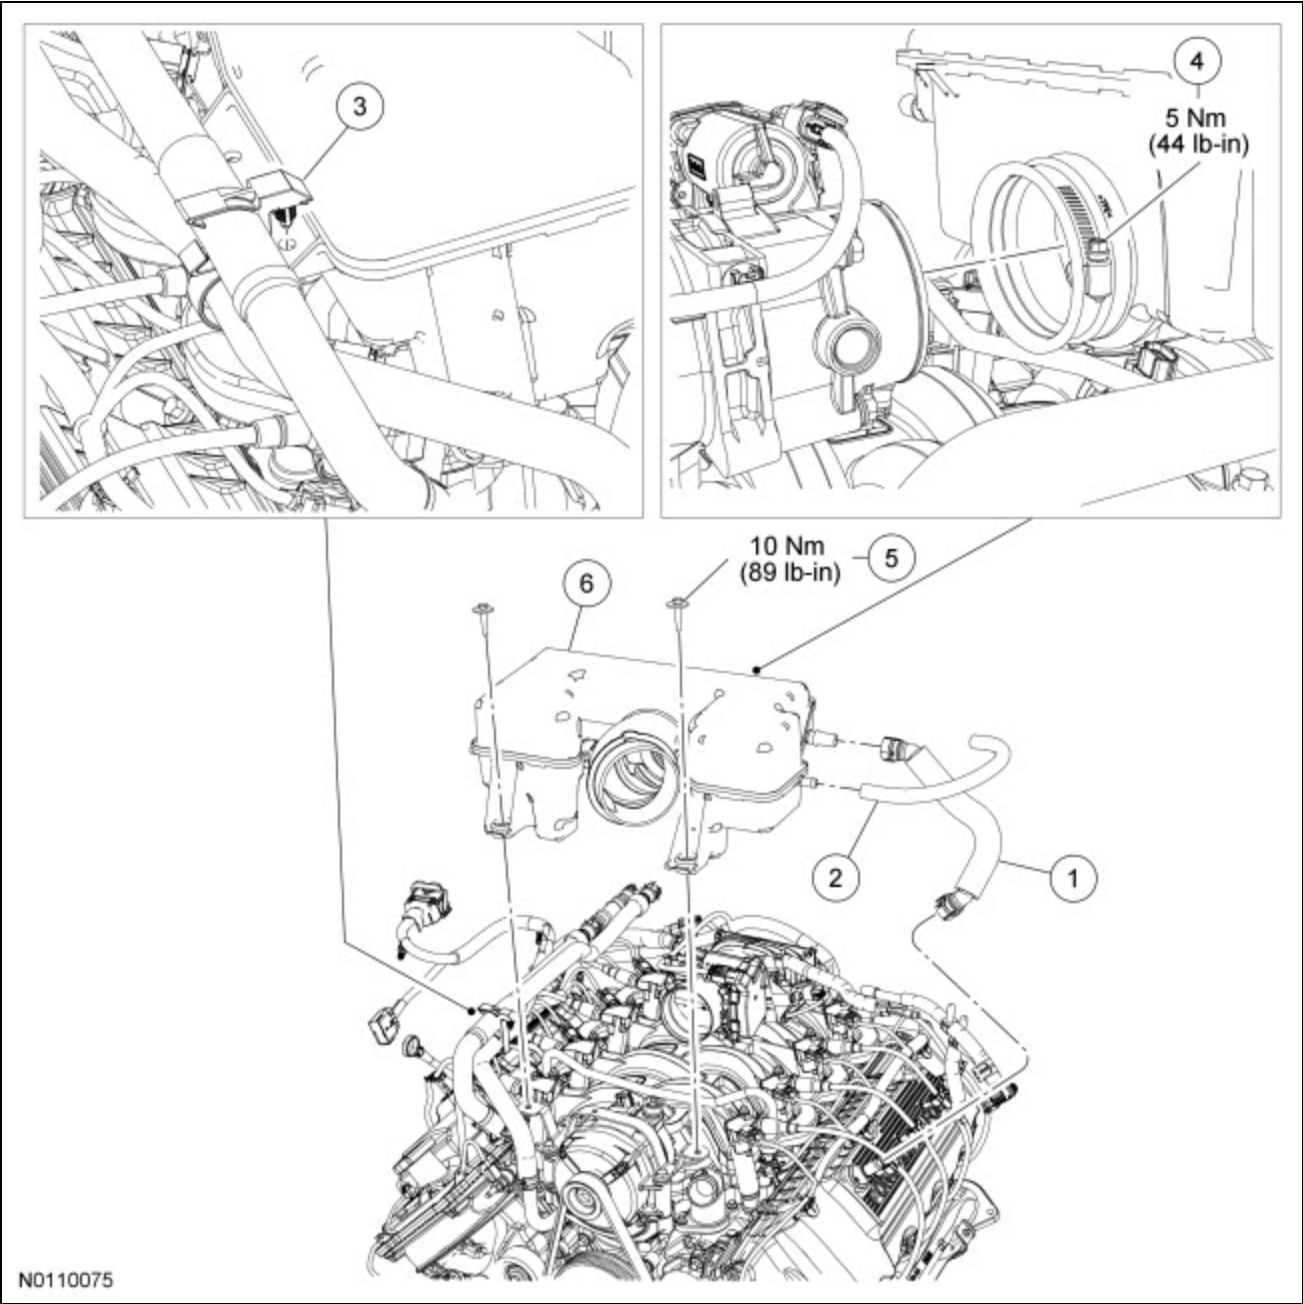

Item	Part Number	Description
1	6758 6758	Crankcase ventilation tube
2	9C490 9C490	Brake booster vacuum hose
3	—	Heater coolant hose position retainer
4	—	Throttle Body (TB) adapter-to-TB clamp (part of 9F805)
5	W505426 W505426	Air Cleaner (ACL) outlet pipe-to-TB adapter bolt (2 required)

6	9A5899A589	ACL outlet pipe-to-TB adapter
---	------------	-------------------------------

Throttle Body (TB)

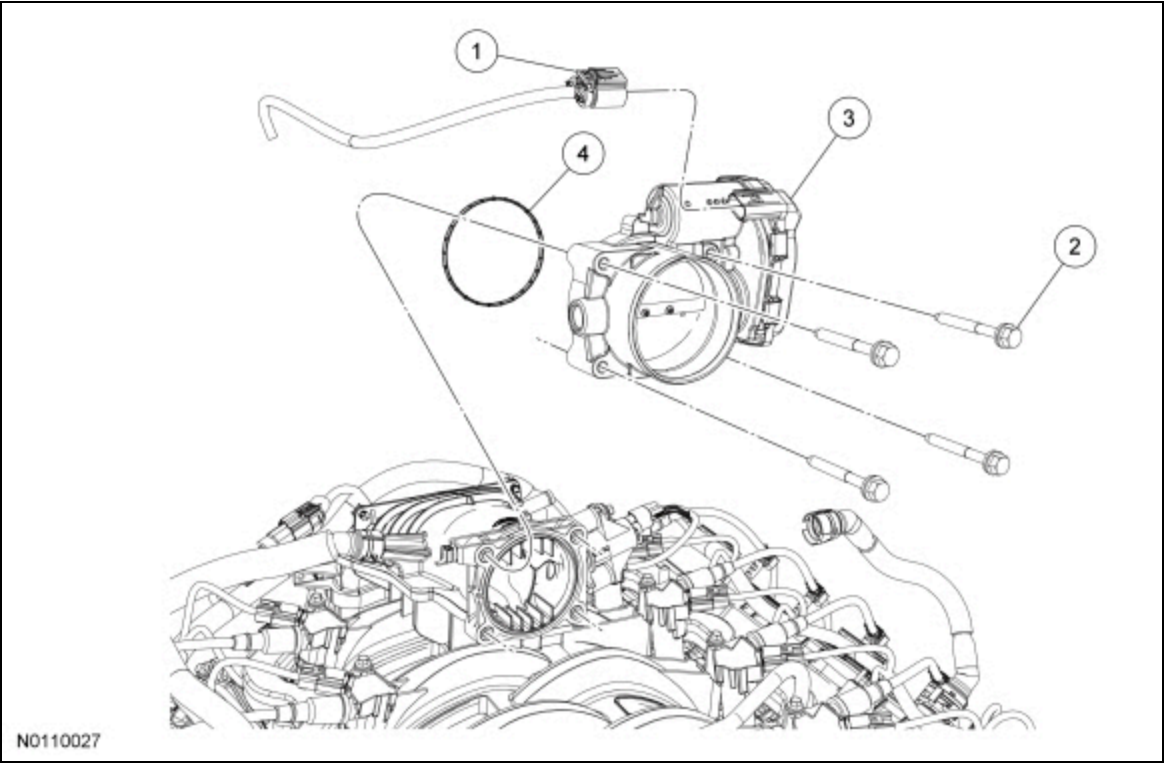

Item	Part Number	Description
1	—	Electronic Throttle Control (ETC) electrical connector (part of 12B637)
2	N709168N709168	Throttle Body (TB) bolt (4 required)
3	9F9919F991	TB
4	9E9369E936	TB O-ring seal

Removal

1. Remove the Air Cleaner (ACL) outlet tube. For additional information, refer to Section 303-12.
2. Disconnect the heater coolant hose retainer from the ACL outlet pipe-to-Throttle Body (TB) adapter.
3. Disconnect the crankcase ventilation tube quick connect fitting from ACL outlet pipe-to-TB adapter. For additional information, refer to Section 310-00.
4. Disconnect the brake booster vacuum hose from the ACL outlet pipe-to-TB adapter.
5. Remove the 2 bolts and the ACL outlet pipe-to-TB adapter.
6. Loosen the clamp and disconnect the TB adapter from the TB .
7. Disconnect the Electronic Throttle Control (ETC) electrical connector.
8. Remove the 4 bolts and the TB assembly.
 - Discard the TB O-ring seal.

Installation

1. Using a new O-ring seal, position the **T.B** and tighten the 4 bolts in 2 stages.
 - Stage 1: Tighten to 12 Nm (106 lb-in).
 - Stage 2: Tighten an additional 60 degrees.
2. Connect the **ETC** electrical connector.
3. Position the **T.B** adapter onto the **T.B** and install the 2 bolts.
 - Tighten to 10 Nm (89 lb-in).
4. Tighten the **T.B** adapter-to-**T.B** clamp.
 - Tighten to 5 Nm (44 lb-in).
5. Connect the crankcase ventilation tube quick connect coupling to the **ACL** outlet pipe-to-**T.B** adapter. For additional information, refer to Section 310-00.
6. Connect the brake booster vacuum hose to the **ACL** outlet pipe-to-**T.B** adapter.
7. Connect the crankcase ventilation tube quick connect fitting to the **ACL** outlet pipe-to-**T.B** adapter. For additional information, refer to Section 310-00.
8. Connect the heater coolant hose retainer to the **ACL** outlet pipe-to-**T.B** adapter.
9. Install the **ACL** outlet tube. For additional information, refer to Section 303-12.