


Turbocharger Oil Supply Tube — RH

 [Ford Ecat Electronic Parts Catalog](#)


Material	
Item	Specification
Motorcraft® SAE 5W-30 Synthetic Blend Motor Oil (US); Motorcraft® SAE 5W-30 Super Premium Motor Oil (Canada) XO-5W30-QSP (US); CXO-5W30-LSP12 (Canada)	WSS-M2C946-A

Removal


1. Remove the Turbocharger - RH, refer to Turbocharger — RH.
2. Remove the Starter Motor, refer to Section 303-06.
3. Remove the lower turbocharger oil tube assembly bolt and the turbocharger oil tube assembly.

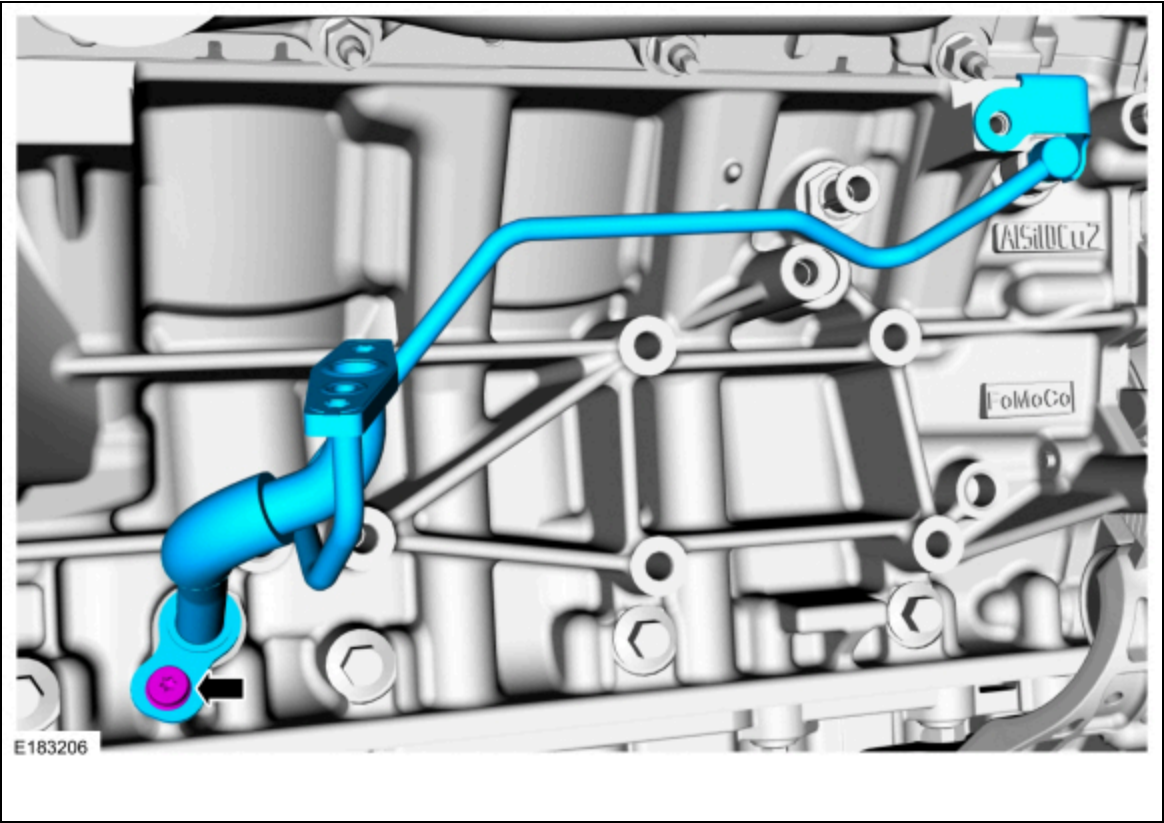

4. Remove and discard the turbocharger oil tube assembly O-ring seal.

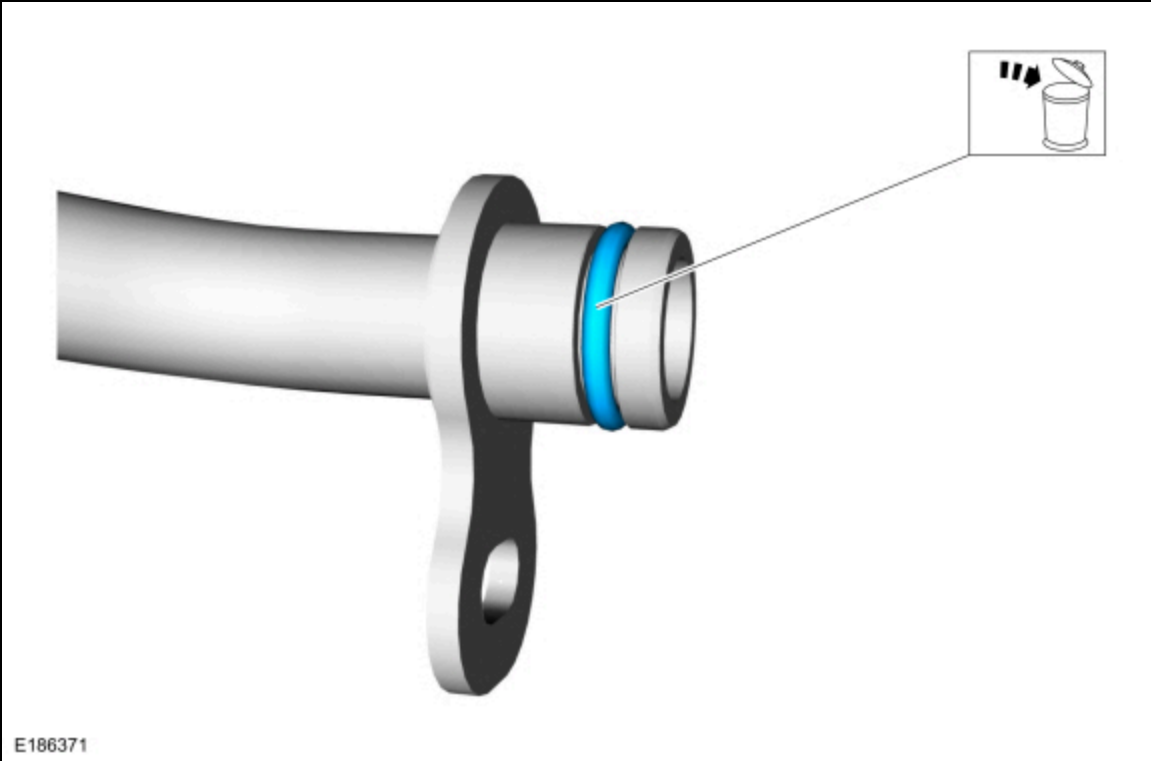


5. Remove and discard the turbocharger fitting and oil filter assembly.

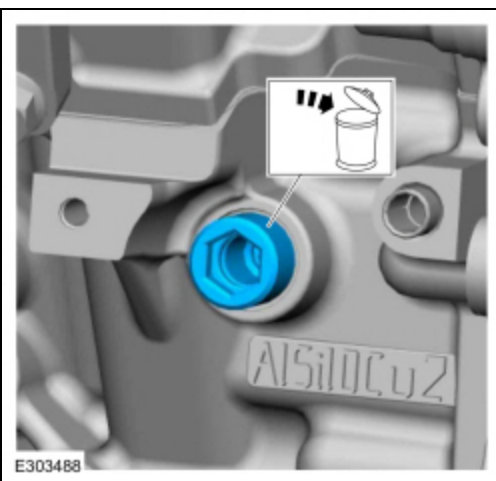

Installation

1. Lubricate the turbocharger fitting and oil filter assembly O-ring with clean engine oil.

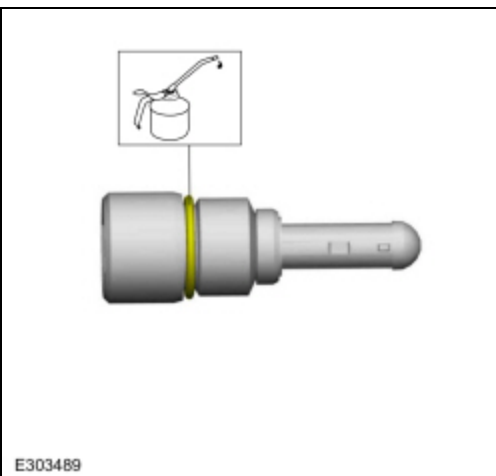


2. Install the turbocharger fitting and oil filter assembly.

- Tighten to 32 Nm (24 lb-ft).




3. Install the new turbocharger oil tube assembly O-ring seal. Lubricate the new turbocharger oil tube assembly O-ring seal with clean engine oil.

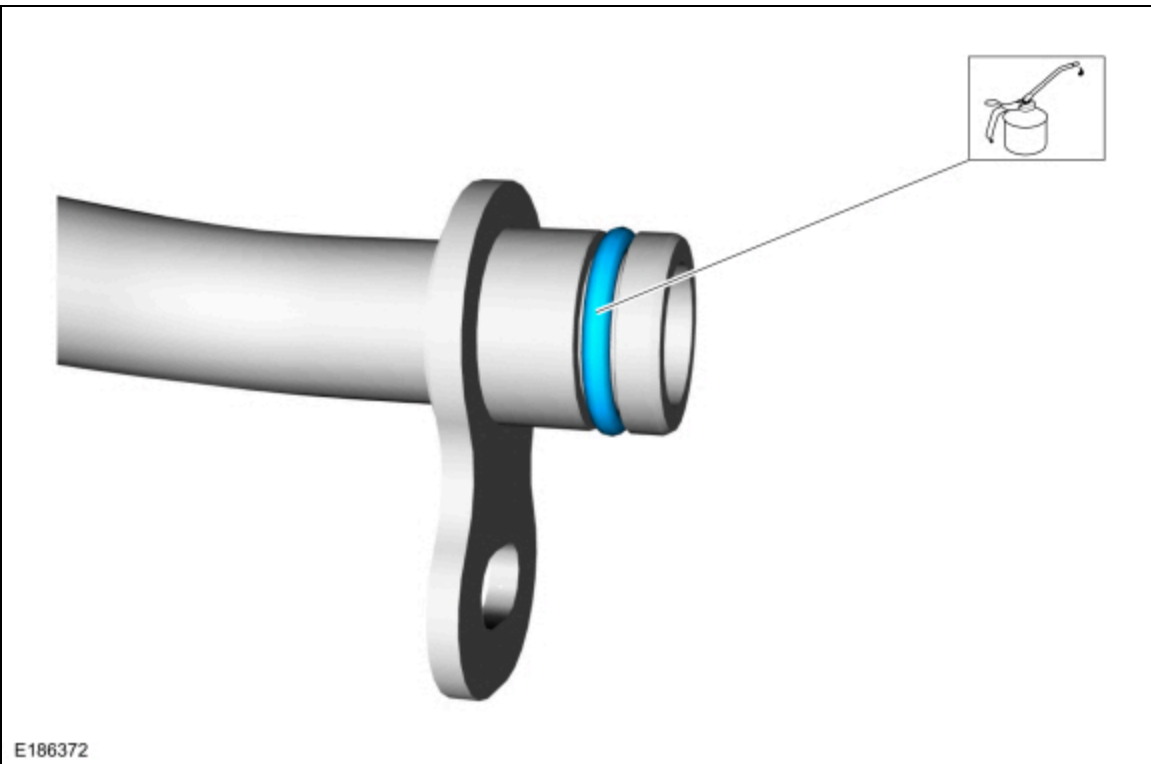

4. **NOTE:** *Lubricate the cylinder block bore with clean engine oil.*

Install the turbocharger oil tube assembly and install the turbocharger oil tube assembly lower bolt.

- Tighten the turbocharger oil tube assembly lower bolt in the following 2 stages.
 - Tighten to 8 Nm (71 lb-in).
 - Tighten an additional 30 degrees.

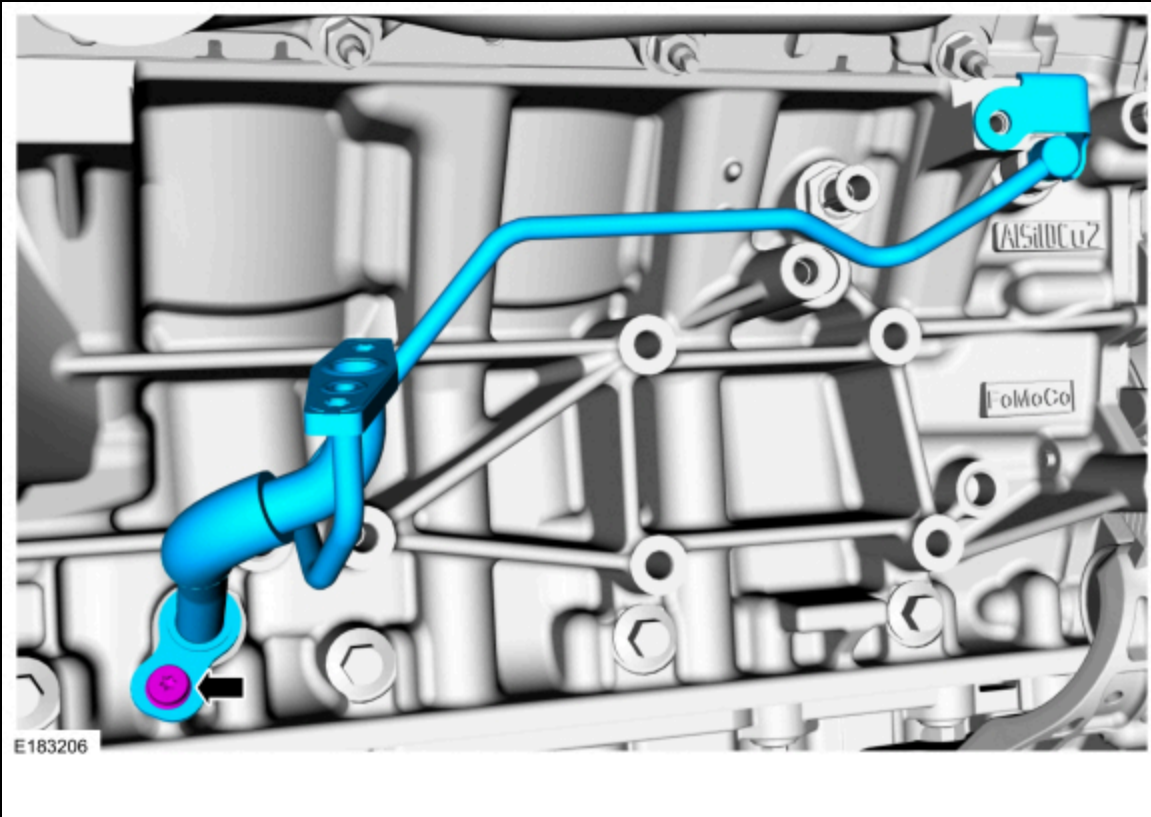

5. Install the Starter Motor, refer to Section 303-06.
6. Install the Turbocharger - RH, refer to Turbocharger — RH.