


Starter Motor Drive Gear and Flywheel Ring Gear Inspection

 [Ford Ecat Electronic Parts Catalog](#)

1. Check the wear patterns on the starter drive and the flexplate ring gear. If the wear pattern is not normal, install a new starter motor. For additional information, refer to Starter Motor — 3.5L GTDI, 3.7L or Starter Motor — 5.0L (4V), 6.2L (2V) in this section.

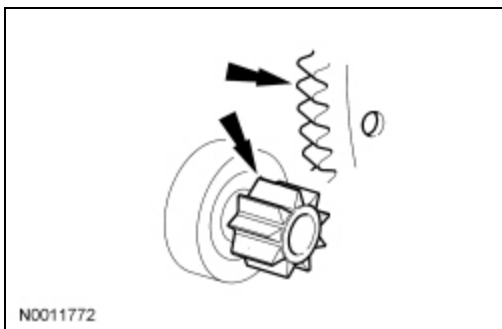

2. If the starter drive gear and the flywheel ring gear are not fully meshing or the gears are milled or damaged, install a new starter motor. For additional information, refer to Starter Motor — 3.5L GTDI, 3.7L or Starter Motor — 5.0L (4V), 6.2L (2V) in this section. Install a new flexplate. For additional information, refer to Section 303-01A, Section 303-01B, Section 303-01C or Section 303-01D.

