


Starter Motor — 3.5L GTDI, 3.7L

 [Ford Ecat Electronic Parts Catalog](#)

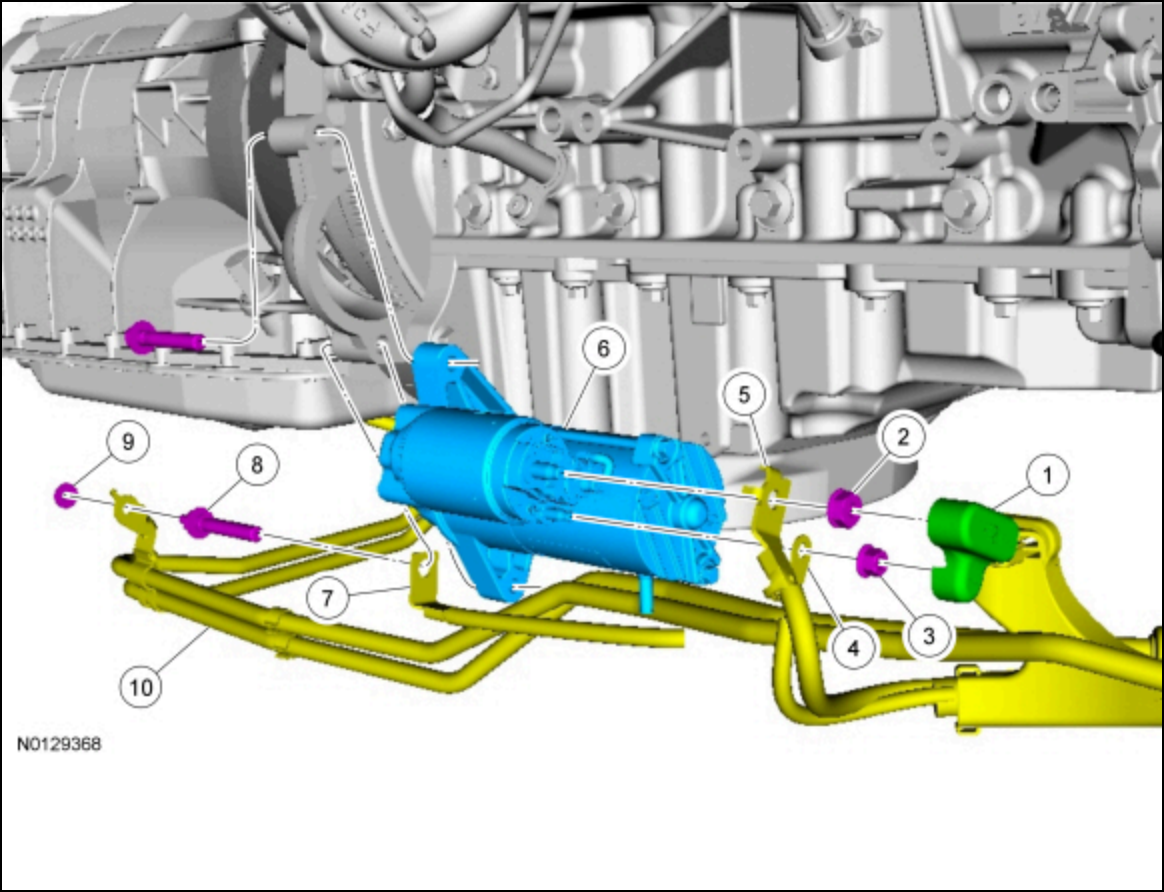

Item	Part Number	Description
1	11N087 11N087	Starter solenoid terminal cover
2	W706414 W706414	Starter solenoid B+ terminal nut - 12 Nm (106 lb-in)
3	W705790 W705790	Starter solenoid S-terminal nut - 5 Nm (44 lb-in)
4	14463 14463	Starter solenoid S-terminal eyelet
5	14463 14463	Starter solenoid B+ terminal eyelet
6	11002 11002	Starter motor
7	14463 14463	Starter motor ground cable eyelet
8	W714290 W714290	Starter motor mounting stud bolts (2 required) - 48 Nm (35 lb-ft)
9	W709450 W709450	Transmission fluid cooler tube bracket nut - 12 Nm (106 lb-in)
10	7R081 7R081	Transmission fluid cooler inlet and outlet tubes

Removal and Installation

WARNING: Always disconnect the battery ground cable at the battery before disconnecting the starter motor battery terminal lead. If a tool is shorted at the starter motor battery terminal, the tool can quickly heat enough to

cause a skin burn. Failure to follow this instruction may result in serious personal injury.

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Disconnect the battery ground cable. For additional information, refer to Section 414-01.
3. Remove the terminal cover.
4. Remove the nut and disconnect the starter solenoid B+ terminal eyelet.
 - To install, tighten to 12 Nm (106 lb-in).
5. Remove the nut and disconnect the starter solenoid S-terminal eyelet.
 - To install, tighten to 5 Nm (44 lb-in).
6. Remove the transmission fluid cooler tube bracket nut and position the transmission cooler inlet and outlet tubes aside.
 - To install, tighten to 12 Nm (106 lb-in).
7. Remove the lower stud bolt and position starter motor ground cable eyelet aside.
 - To install, tighten to 48 Nm (35 lb-ft).
8. **NOTE:** *Tighten the upper bolt before tightening the lower fasteners.*

Remove the upper stud bolt and the starter motor.

- To install, tighten to 48 Nm (35 lb-ft).
9. To install, reverse the removal procedure.