


Starter Motor — 5.0L (4V), 6.2L (2V)

 [Ford Ecat Electronic Parts Catalog](#)

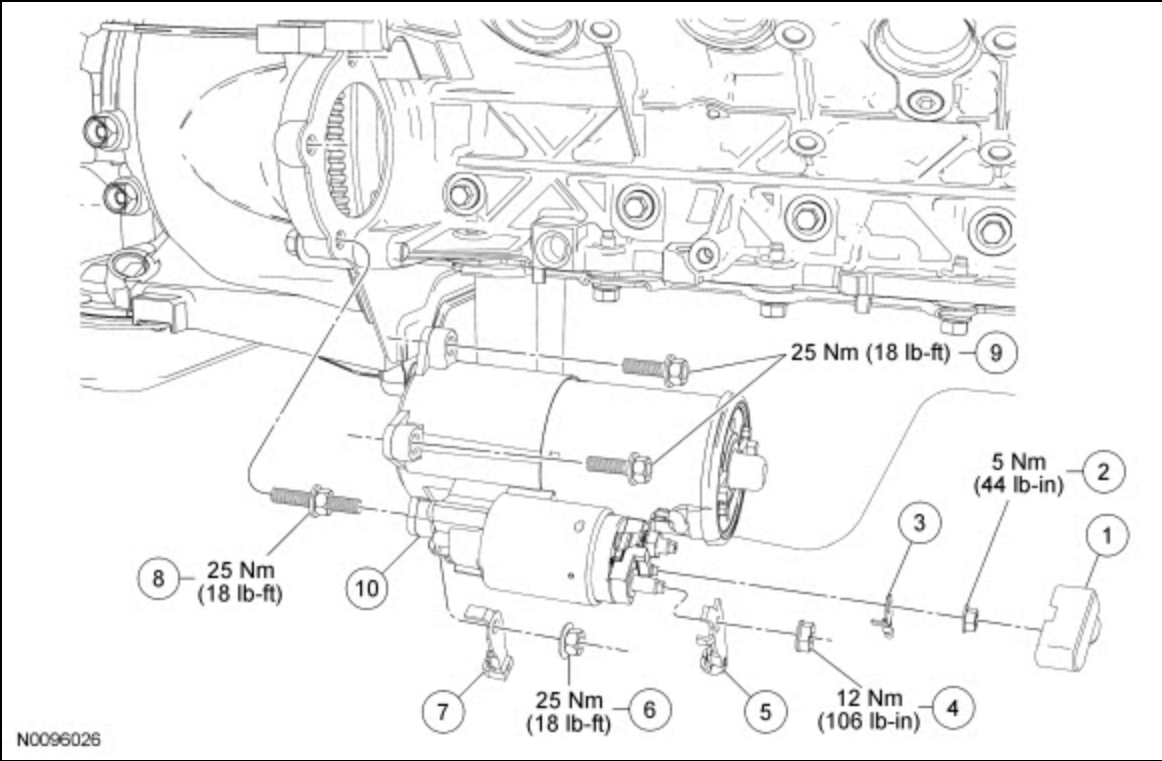

Item	Part Number	Description
1	11N087 11N087	Terminal cover
2	W705790 W705790	Starter solenoid S-terminal nut
3	14463 14463	Starter solenoid S-terminal eyelet
4	W706414 W706414	Starter solenoid B+ terminal nut
5	14463 14463	Starter solenoid B+ terminal eyelet
6	N805024 N805024	Starter motor ground cable nut
7	14463 14463	Starter motor ground cable eyelet
8	W704941 W704941	Starter motor mounting stud bolt
9	W704942 W704942	Starter motor mounting bolts (2 required)
10	11002 11002	Starter motor

Removal and Installation

WARNING: Always disconnect the battery ground cable at the battery before disconnecting the starter motor battery terminal lead. If a tool is shorted at the starter motor battery terminal, the tool can quickly heat enough to cause a skin burn. Failure to follow this instruction may result in serious personal injury.

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Disconnect the battery ground cable. For additional information, refer to Section 414-01.

3. Remove the terminal cover.
4. Remove the nut and disconnect the starter solenoid S-terminal eyelet.
 - To install, tighten to 5 Nm (44 lb-in).
5. Remove the nut and disconnect the starter solenoid B+ terminal eyelet.
 - To install, tighten to 12 Nm (106 lb-in).
6. Remove the nut and disconnect the starter motor ground cable eyelet.
 - To install, tighten to 25 Nm (18 lb-ft).
7. **NOTE:** *Tighten the upper bolt before tightening the lower fasteners.*

Remove the stud bolt, the 2 bolts and the starter motor.

- To install, tighten to 25 Nm (18 lb-ft).
8. To install, reverse the removal procedure.