

Ignition Coil-On-Plug



Material	
Item	Specification
Motorcraft® Silicone Brake Caliper Grease and Dielectric Compound XG-3-A	ESE-M1C171-A

Removal and Installation

RH side

1. **NOTE:** *The upper intake manifold must be removed to access the RH ignition coil-on-plugs.*

Remove the upper intake manifold. For additional information, refer to Section 303-01B.

Both sides

2. **NOTE:** *Use compressed air to remove any foreign material from the ignition coil-on-plugs and surrounding area before removing the ignition coil-on-plugs.*

Disconnect the 6 ignition coil-on-plug electrical connectors.


3. **NOTE:** *When removing the ignition coil-on-plugs, a slight twisting motion will break the seal and ease removal.*

Remove the 6 ignition coil-on-plug bolts and the 6 ignition coil-on-plugs.

- To install, tighten to 8 Nm (71 lb-in).

4. Inspect the ignition coil-on-plug seals for rips, nicks or tears. Remove and discard any damaged ignition coil-on-plug seals.

- To install, slide the new ignition coil-on-plug seal onto the ignition coil-on-plug until it is fully seated at the top of the ignition coil-on-plug.

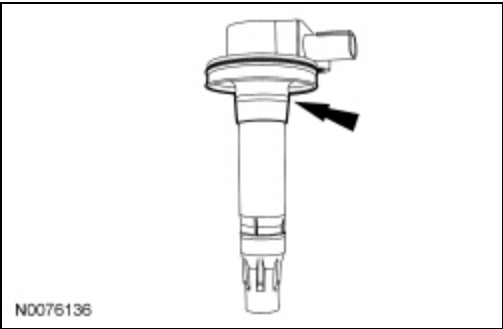

5. **NOTE:** *Verify that the ignition coil-on-plug spring is correctly located inside the ignition coil-on-plug boot and that there is no damage to the tip of the boot.*

To install, reverse the removal procedure.

- Apply a small amount of dielectric grease to the inside of the ignition coil-on-plug boots before attaching to the spark plugs.