


Ignition Coil-On-Plug



Material	
Item	Specification
Motorcraft® Silicone Brake Caliper Grease and Dielectric Compound XG-3-A	ESE-M1C171-A

Removal and Installation

1. **NOTE:** Use compressed air to remove any foreign material from the ignition coil-on-plugs and surrounding area before removing the ignition coil-on-plugs.
- Disconnect the 8 ignition coil-on-plug electrical connectors.
2. **NOTE:** When removing the ignition coil-on-plugs, a slight twisting motion will break the seal and ease removal.
- Remove the 8 bolts and the 8 ignition coil-on-plugs.
- To install, tighten to 6 Nm (53 lb-in).
3. Inspect the ignition coil-on-plug seals for rips, nicks or tears. Remove and discard any damaged ignition coil-on-plug seals.
- To install, slide the new ignition coil-on-plug seal onto the ignition coil-on-plug until it is fully seated at the top of the ignition coil-on-plug .

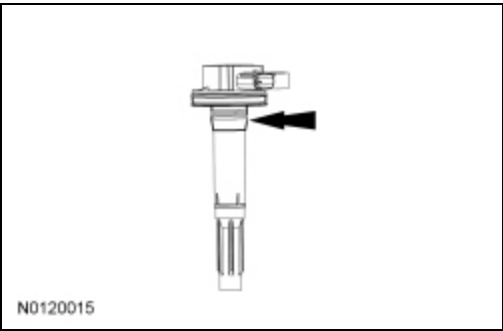

4. **NOTE:** Verify that the ignition coil-on-plug spring is correctly located inside the ignition coil-on-plug boot and that there is no damage to the tip of the boot.
- To install, reverse the removal procedure.
- Apply a small amount of dielectric grease to the inside of the ignition coil-on-plug boots before attaching to the spark plugs.