


Positive Crankcase Ventilation (PCV) Valve


 [Ford Ecat Electronic Parts Catalog](#)

3.5L GTDI

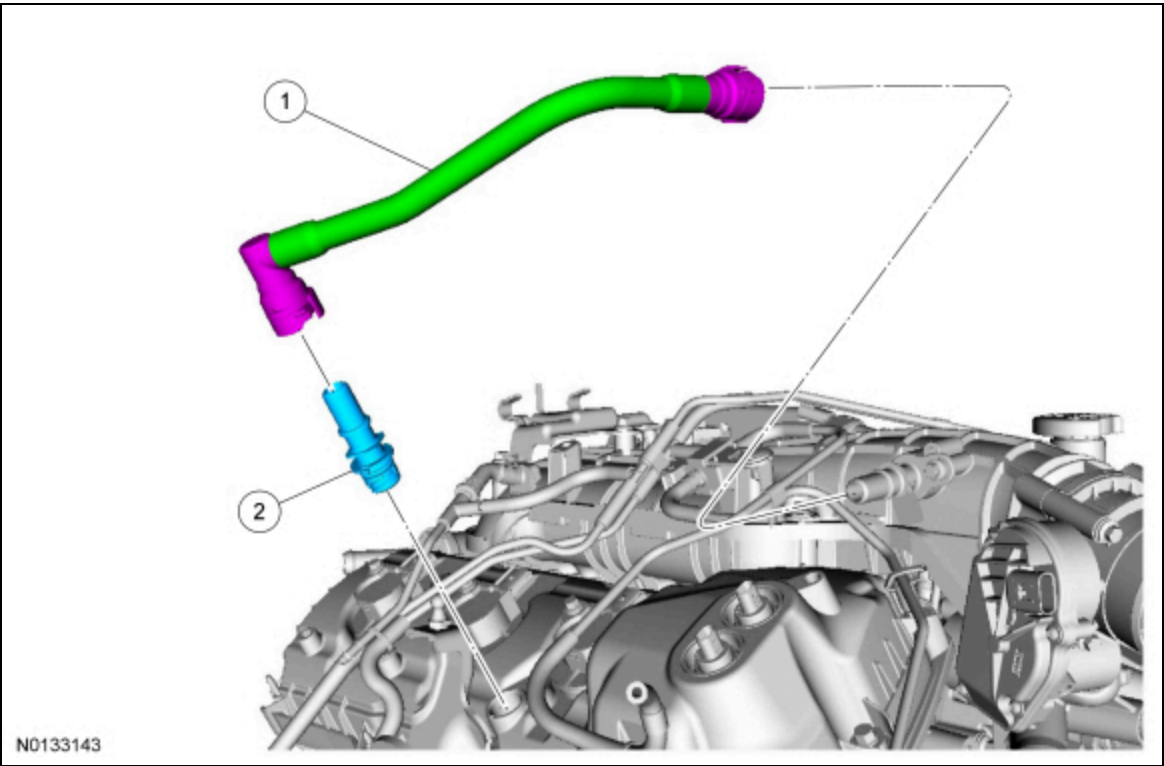


Item	Part Number	Description
1	6A664 6A664	PCV tube
2	6A666 6A666	PCV valve

3.7L

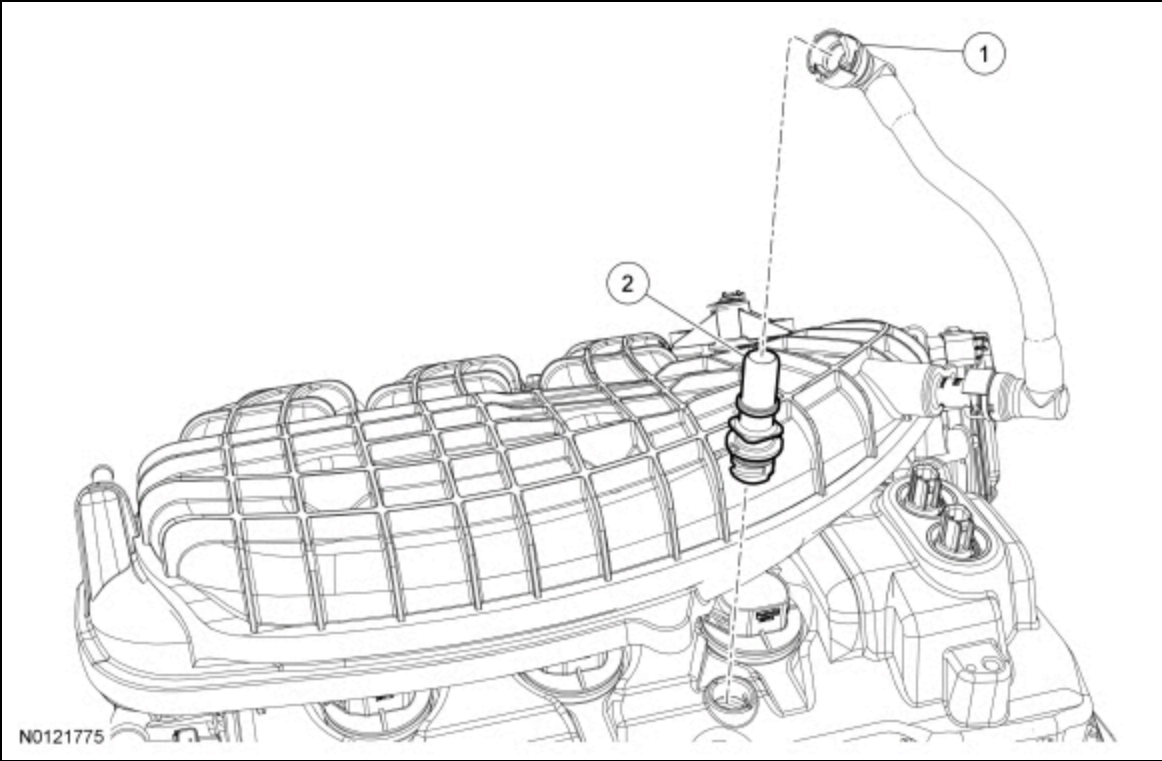


Item	Part Number	Description
1	6A664 6A664	PCV tube
2	6A666 6A666	PCV valve

5.0L

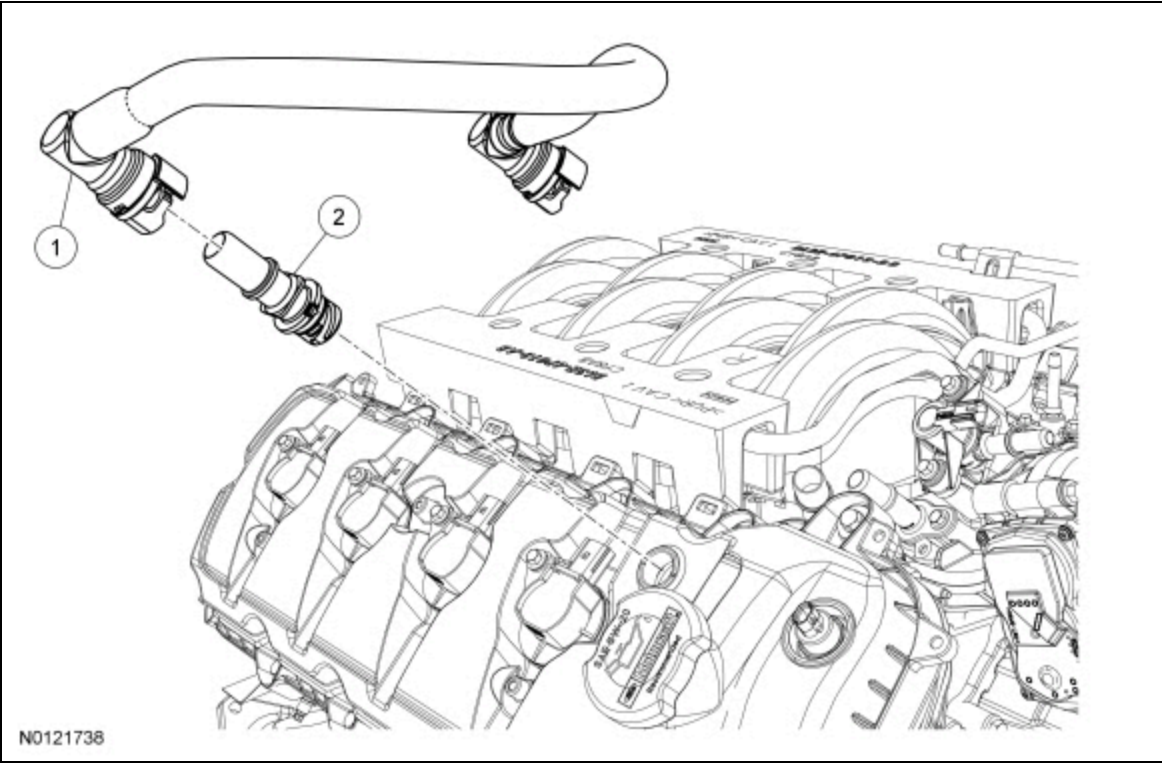

Item	Part Number	Description
1	6A664 6A664	PCV tube
2	6A666 6A666	PCV valve

6.2L

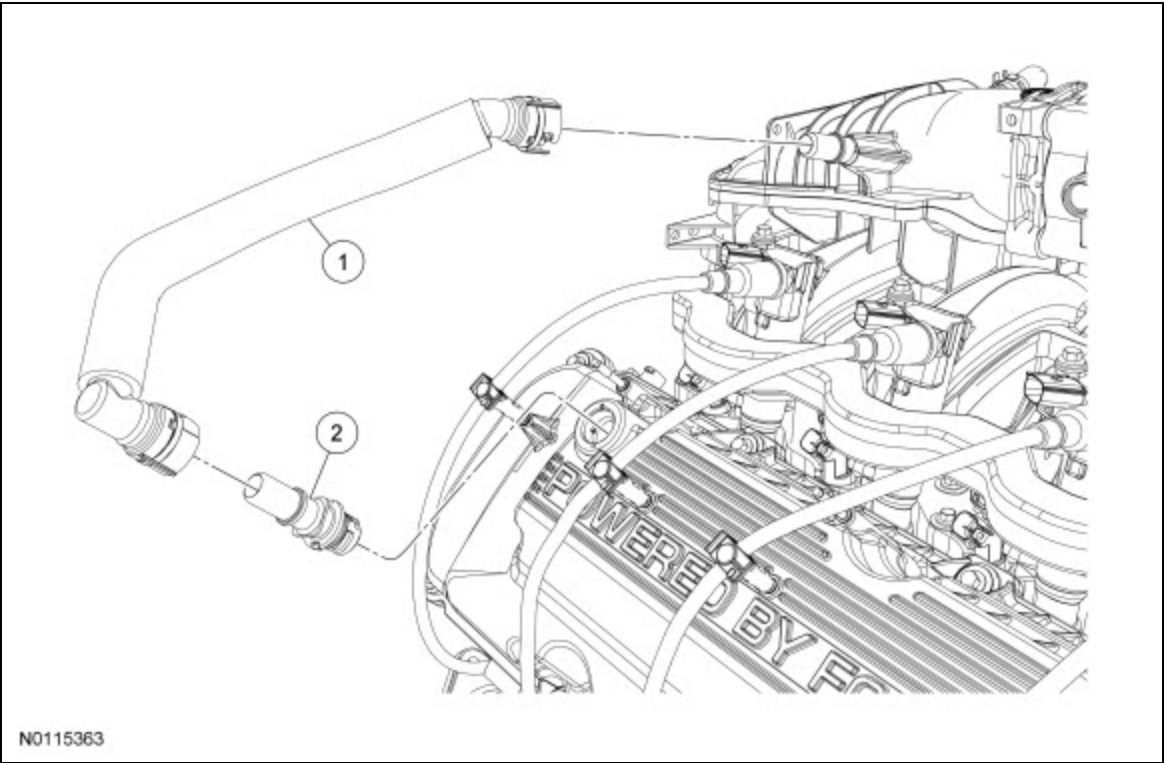

Item	Part Number	Description
1	6A664 6A664	PCV tube
2	6A666 6A666	PCV valve

Removal and Installation

1. Disconnect the PCV tube quick connect coupling from the PCV. For additional information, refer to Section 310-00.
2. **NOTICE: A new PCV valve must be installed if removed. During removal, the plastic retaining ears of the PCV valve are sheared.**

Rotate the PCV valve counterclockwise and remove the PCV valve.
 - Discard the PCV valve.
3. To install, reverse the removal procedure.
 - Install a new PCV valve.