


Charge Air Cooler

 [Ford Ecat Electronic Parts Catalog](#)


Removal and Installation

NOTICE: Whenever turbocharger air intake system components are removed, always cover open ports to protect from debris. It is important that no foreign material enter the system. The turbocharger compressor vanes are susceptible to damage from even small particles. All components should be inspected and cleaned, if necessary, prior to installation or reassembly.


1. With the vehicle in NEUTRAL, position it on a hoist. Refer to Section 100-02.
- 2.

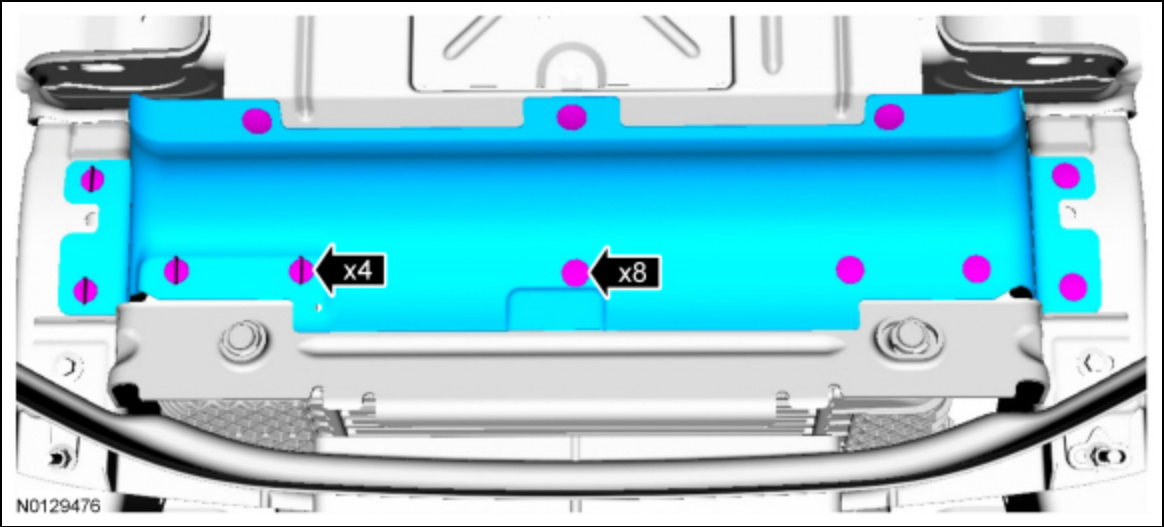

3.
 - Tighten to 20 Nm (15 lb-ft).

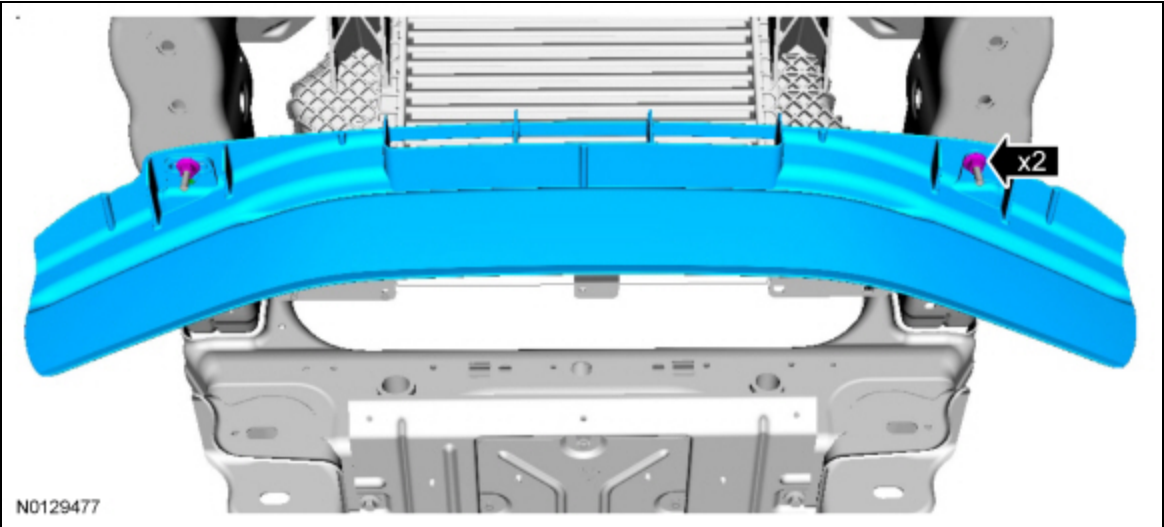


- 4.

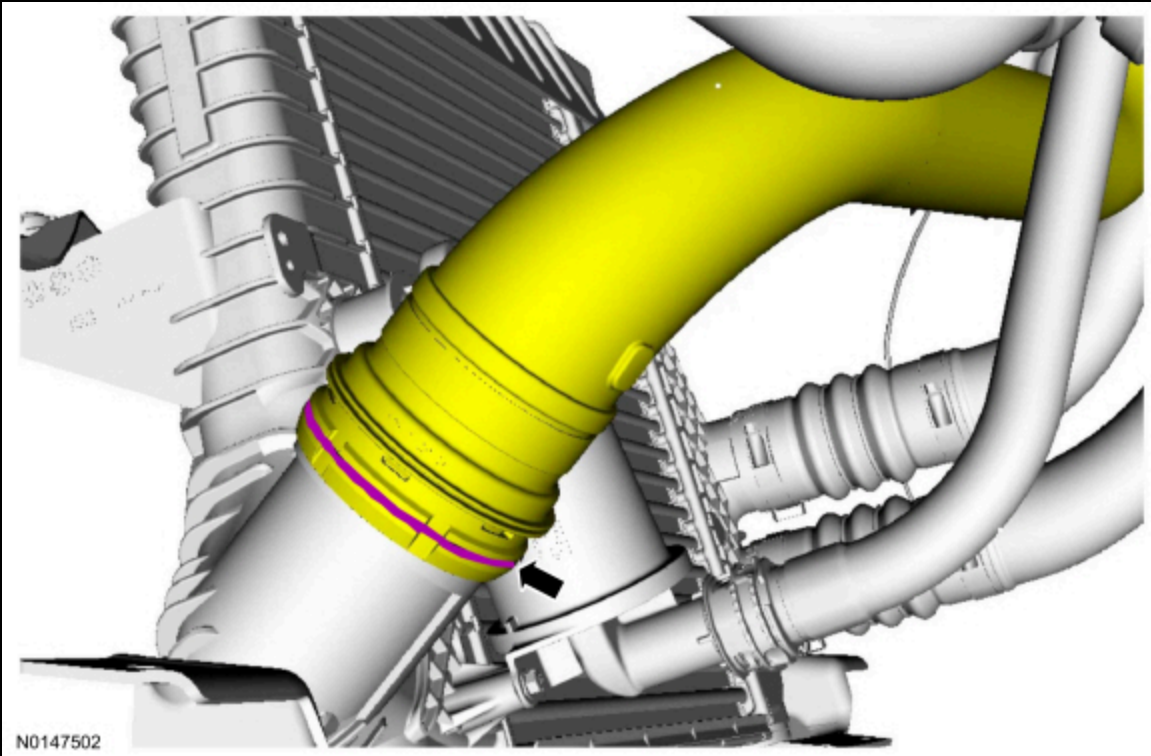


5.


- Tighten to 5 Nm (44 lb-in).

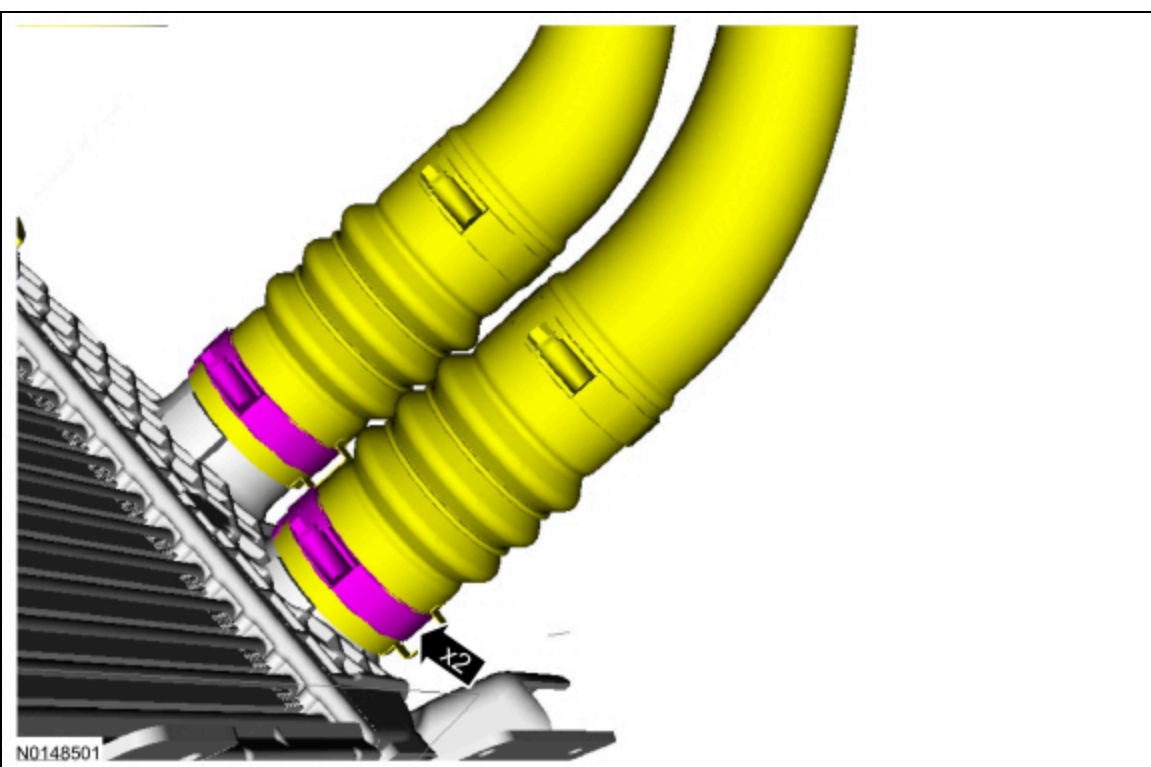

6. Disconnect the quick connect coupling as necessary. Refer to Section 310-00

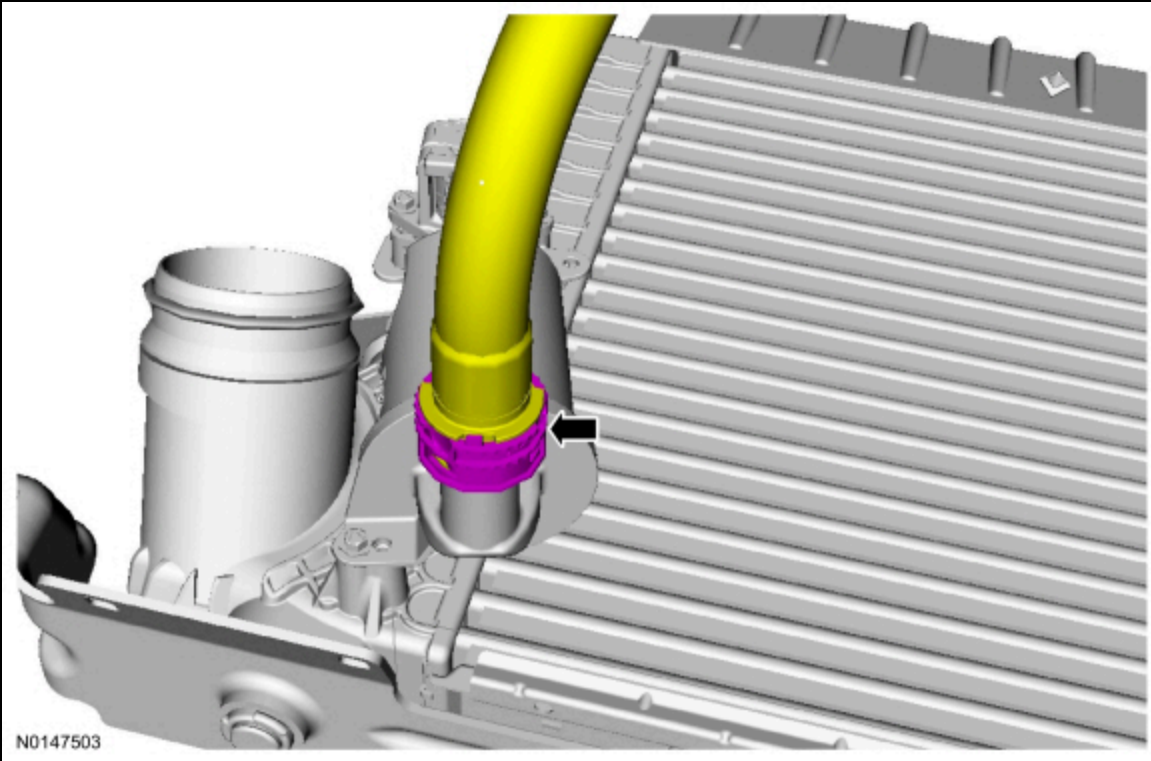


7.

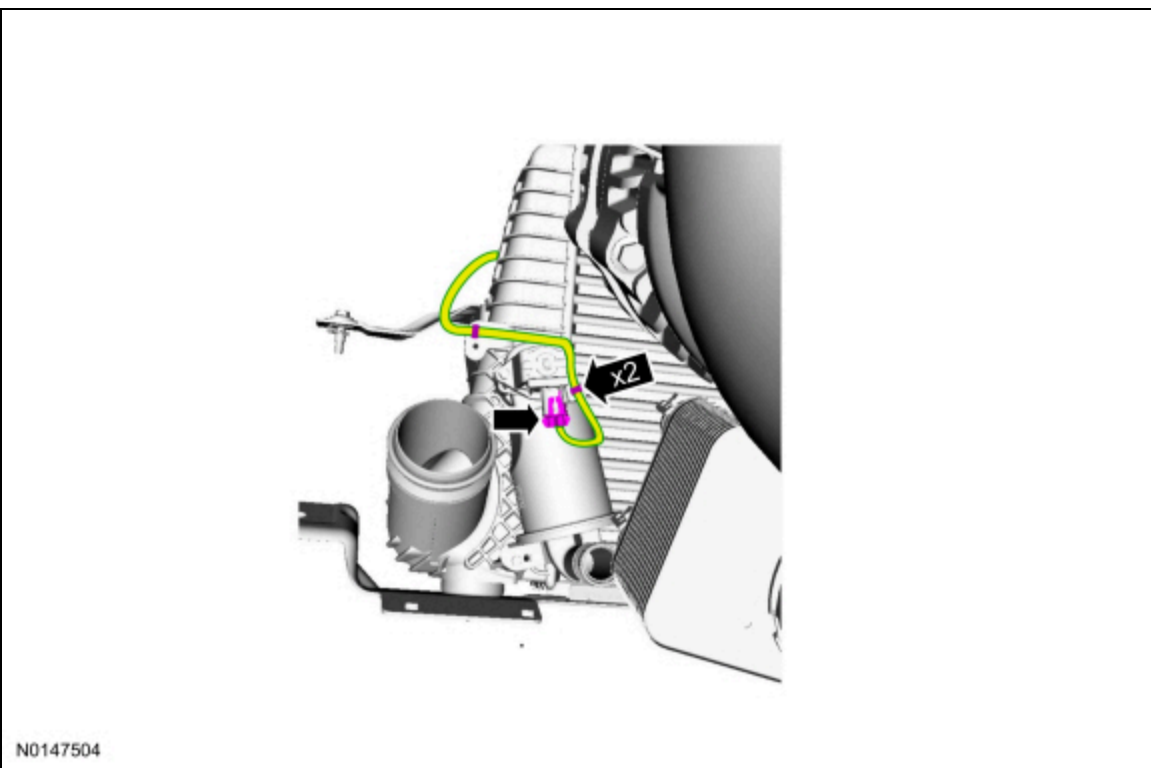


8.


- Tighten to 40 Nm (30 lb-ft).

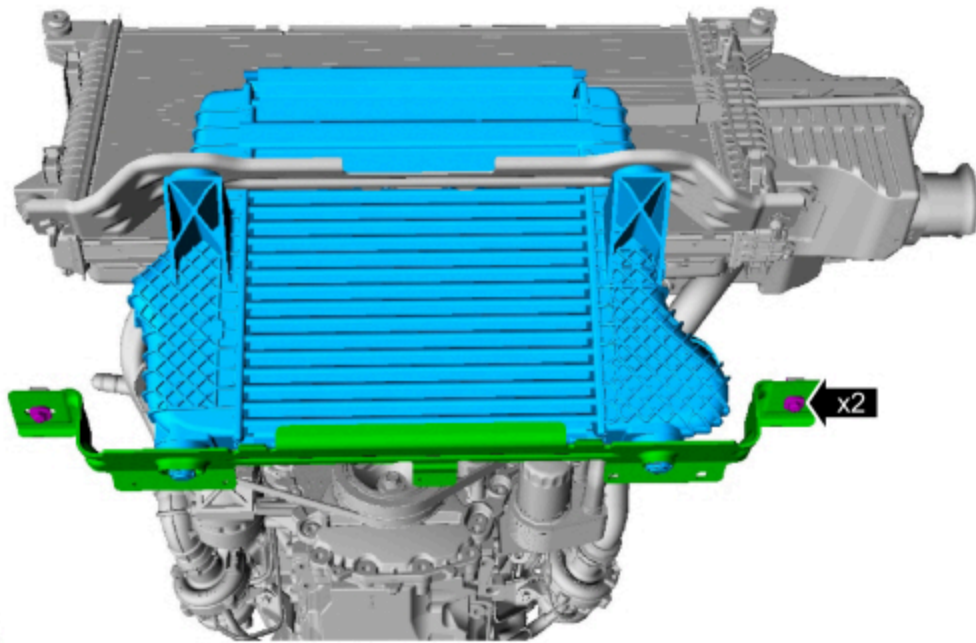

- 9.
- Tighten to 8 Nm (71 lb-in).

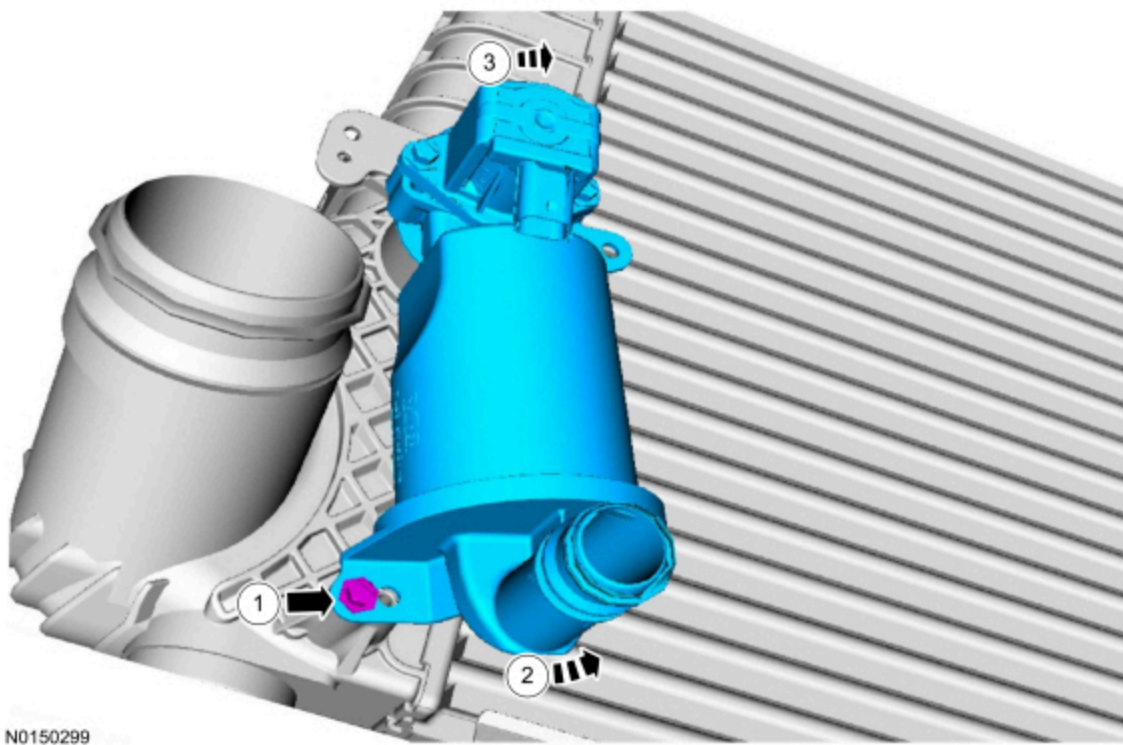

10.

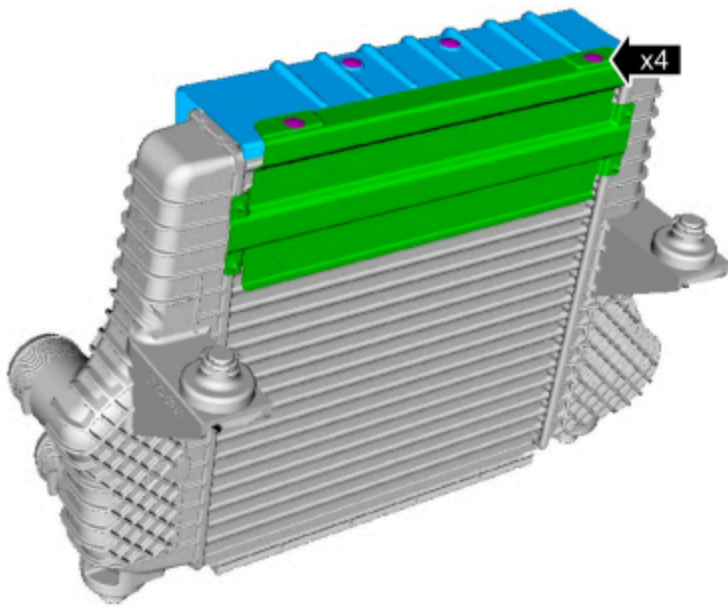

N0148500

11. To install, reverse the removal procedure.