


Evaporative Emission (EVAP) System Components — Exploded View

 [Ford Ecat Electronic Parts Catalog](#)


Evaporative Emission (EVAP) Canister Assembly — Removal

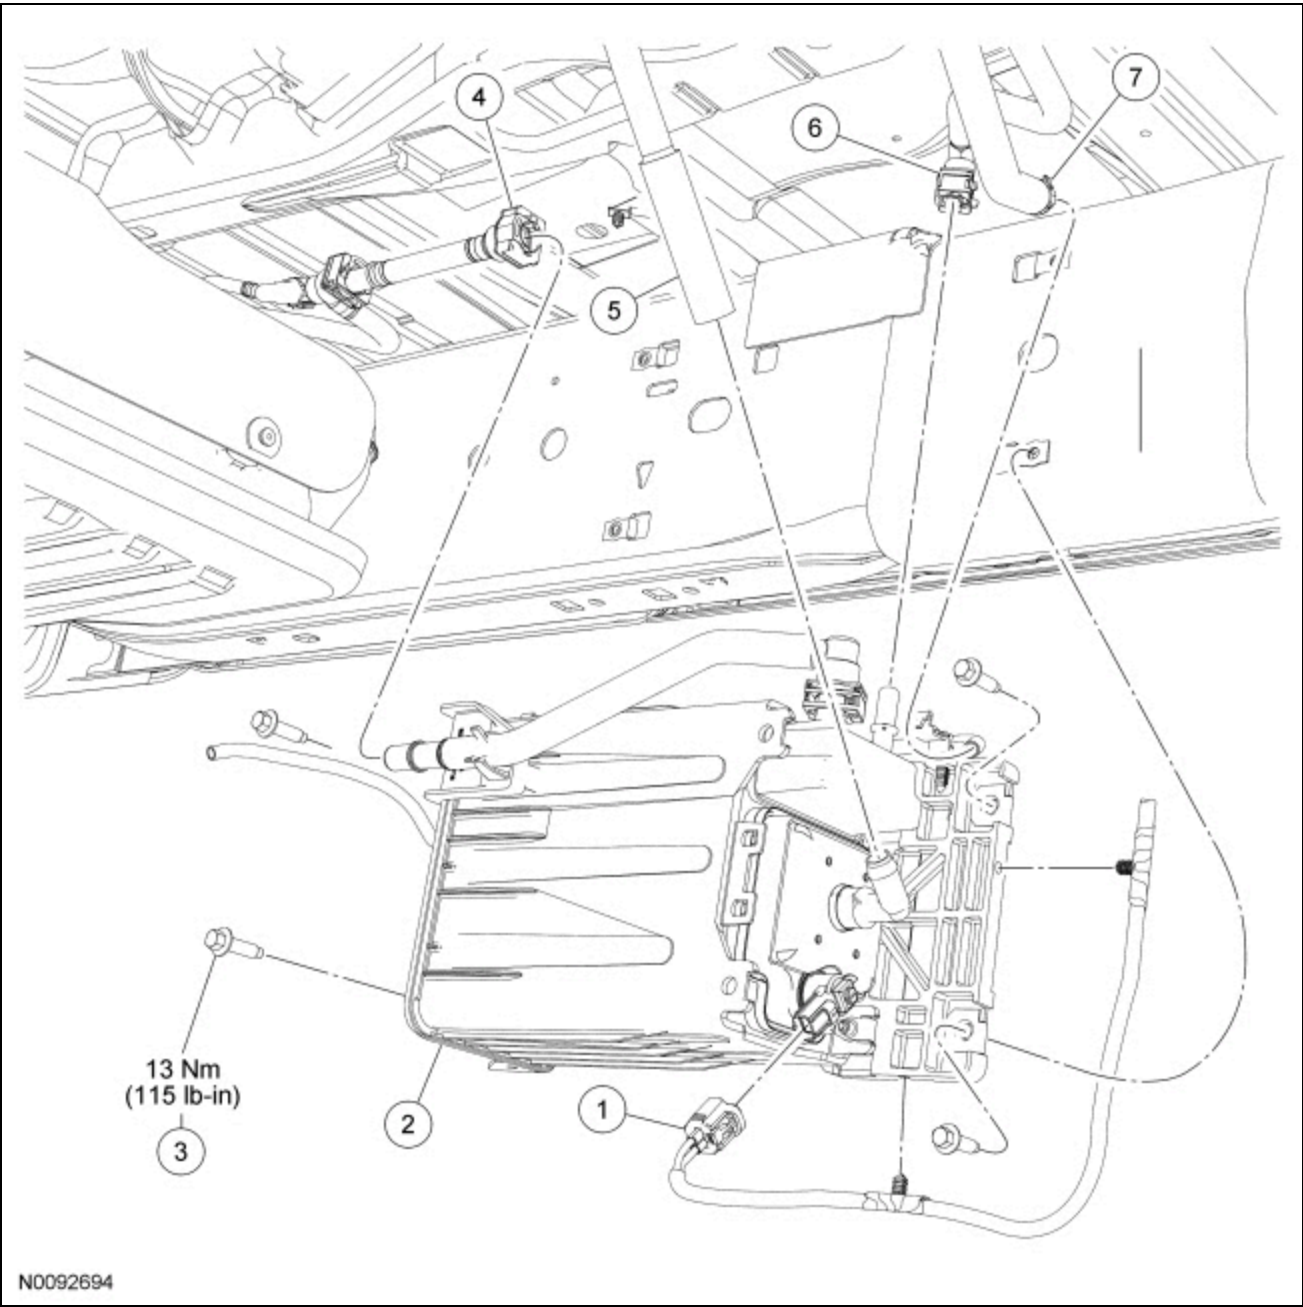

Item	Part Number	Description
1	—	Evaporative Emission (EVAP) canister vent valve electrical connector
2	9C9859C985	EVAP canister assembly
3	W500224W500224	EVAP canister assembly bracket bolt (4 required)

4	9E616 9E616	Fuel Tank Pressure (FTP) sensor and vapor tube assembly-to-EVAP canister vapor tube quick connect coupling
5	9S327 9S327	Fresh air tube
6	—	Front vapor tube-to-EVAP canister quick connect coupling (part of 9D676)
7	—	Front fuel supply tube-to-center fuel supply tube quick connect coupling (part of 9J280)

EVAP Canister, Brackets, Vent Solenoid and Dust Separator Assembly, Center Fuel Tube and Vapor Tube Disassembly

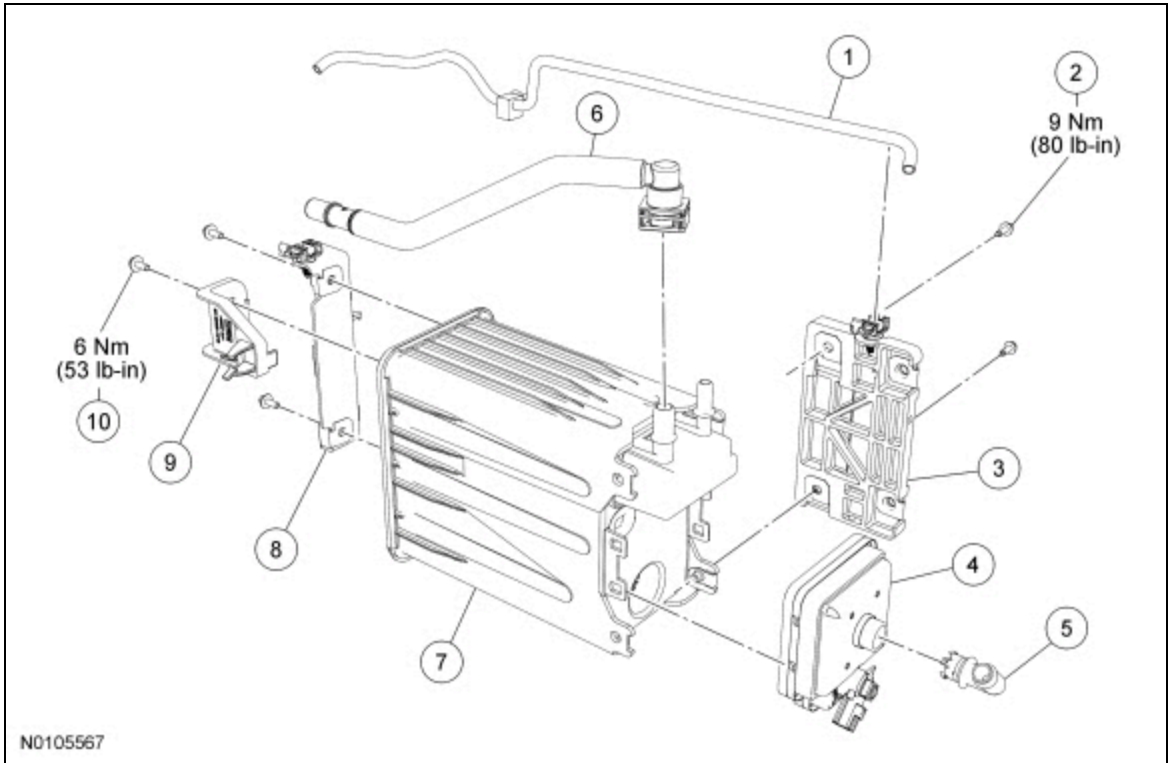

Item	Part Number	Description
1	9A274 9A274	Center fuel supply tube
2	W500213 W500213	Evaporative Emission (EVAP) canister assembly front bracket bolts (2 required)
3	9E817 9E817	EVAP canister assembly front bracket
4	9B328 9B328	EVAP canister vent solenoid and dust separator assembly
5	9D925 9D925	EVAP canister vent solenoid and dust separator assembly fitting
6	9B050 9B050	EVAP canister vapor tube
7	9D653 9D653	EVAP canister
8	9E817 9E817	EVAP canister rear assembly bracket
9	9D665 9D665	EVAP canister assembly vapor tube bracket
10	9R543 9R543	EVAP canister assembly bolt (3 required)

1. For additional information, refer to the procedures in this section.