


Evaporative Emission (EVAP) Vapor Ejector

 [Ford Ecat Electronic Parts Catalog](#)

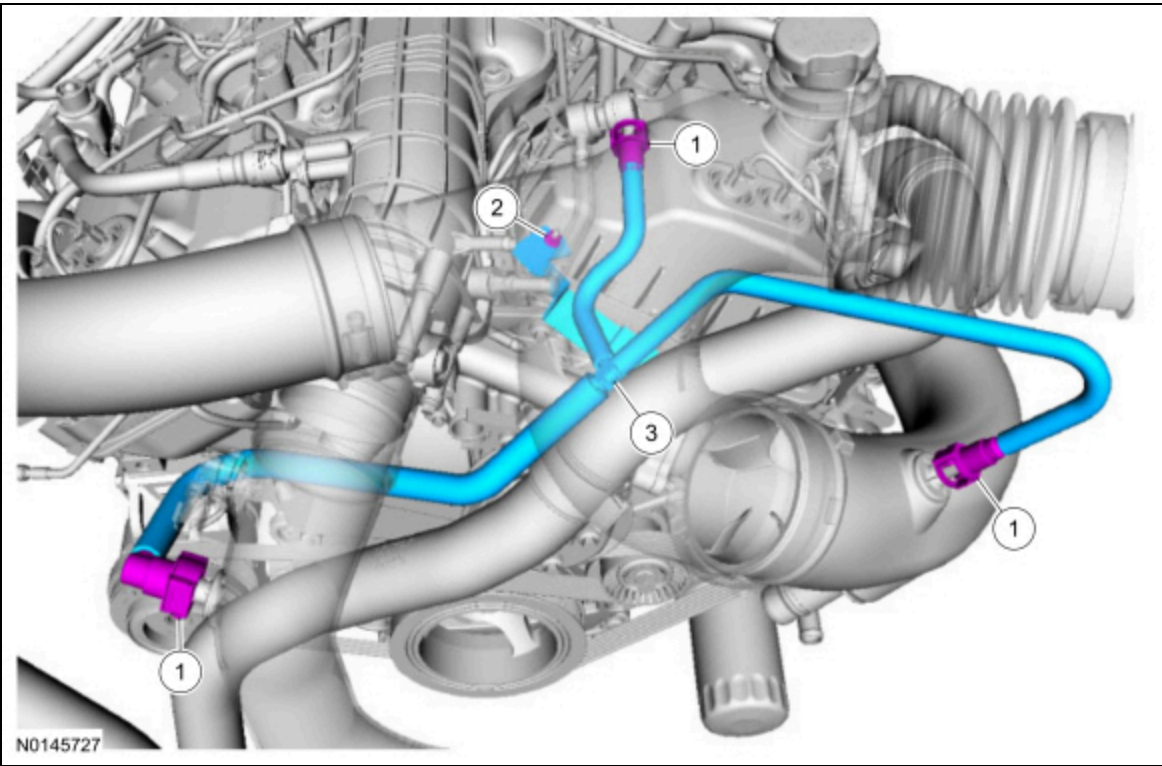

Item	Part Number	Description
1	—	Evaporative Emission (EVAP) vapor ejector quick-connect coupling (part of 9G297) (3 required)
2	W520100 W520100	Evaporative Emission (EVAP) vapor ejector and hose assembly bracket nut - 6 Nm (53 lb-in)
3	9G297 9G297	Evaporative Emission (EVAP) vapor ejector and hose assembly

Removal and Installation

WARNING: Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

WARNING: Do not carry personal electronic devices such as cell phones, pagers or audio equipment of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

WARNING: Always disconnect the battery ground cable at the battery when working on an evaporative emission (EVAP) system or fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

1. Disconnect the battery ground cable. Refer to Section 414-01.
2. Remove the Air Cleaner (ACL) outlet pipe. Refer to Section 303-12.

3. Remove the Charge Air Cooler (CAC)-to-Throttle Body (TB) pipe. Refer to Section 303-12.
4. Disconnect the 3 Evaporative Emission (EVAP) vapor ejector and hose assembly quick-connect fittings.
5. Remove the nut and the Evaporative Emission (EVAP) vapor ejector and hose assembly.
 - To install, tighten to 6 Nm (53 lb-in).

Installation

1. To install, reverse the removal steps.