


Fuel Tank Pressure Sensor

 [Ford Ecat Electronic Parts Catalog](#)

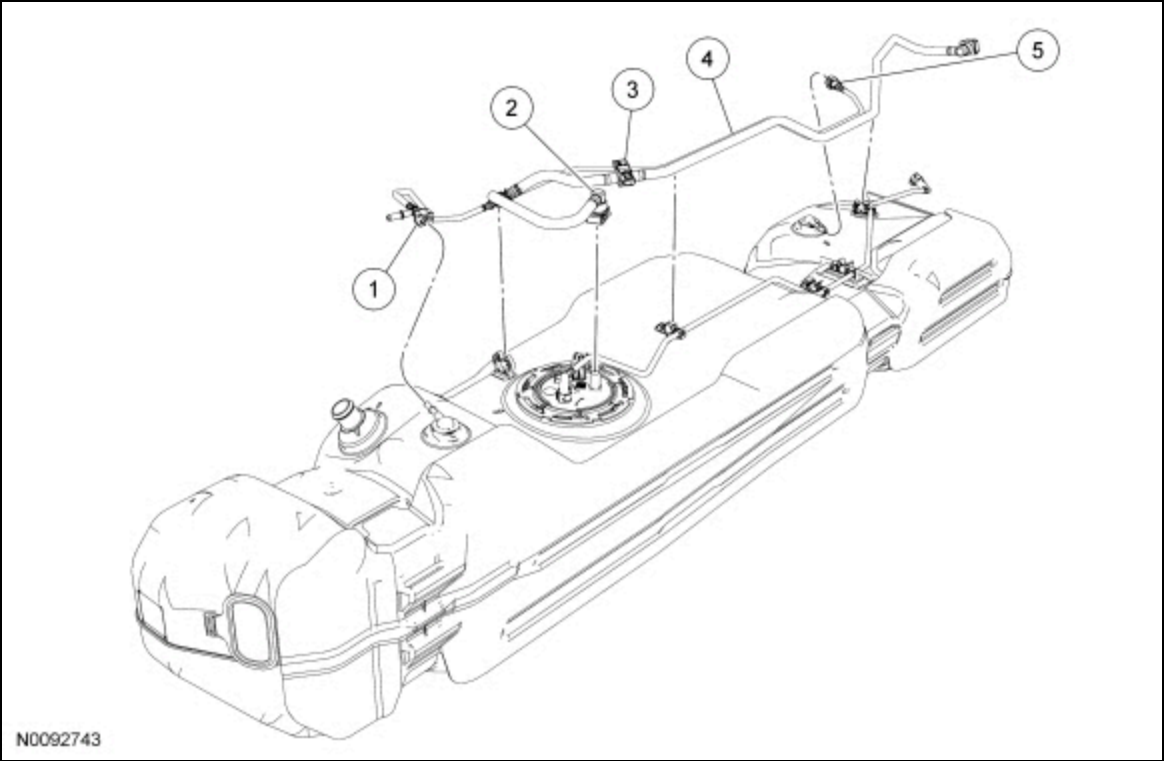

Item	Part Number	Description
1	—	Fuel Tank Pressure (FTP) sensor and vapor tube assembly-to-fuel tank vent valve quick connect coupling (part of 9J279)
2	—	FTP sensor and vapor tube assembly-to-fuel pump module quick connect coupling (part of 9J279)
3	—	FTP sensor (part of 9J279)
4	9J2799J279	FTP sensor and vapor tube assembly
5	—	FTP sensor and vapor tube assembly-to-fuel tank vent valve quick connect coupling (part of 9J279)

Removal and Installation

WARNING: Always disconnect the battery ground cable at the battery when working on an evaporative emission (EVAP) system or fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

WARNING: Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

1. Remove the fuel tank. For additional information, refer to Section 310-01.

2. Disconnect the 2 Fuel Tank Pressure (FTP) sensor and vapor tube assembly-to-fuel tank vent valve quick connect couplings. For additional information, refer to Section 310-00.
3. Disconnect the FTP sensor and vapor tube assembly-to-fuel pump module quick connect coupling. For additional information, refer to Section 310-00.
4. Remove the FTP sensor and vapor tube assembly from the fuel tank.
5. To install, reverse the removal procedure.